

Contents

00 - Technical data	1
1 Safety information	1
1.1 Checking child seat anchors following an accident	1
2 Repair instructions	2
2.1 Routing and attachment of pipes, hoses and wiring	2
2.2 Contact corrosion	2
2.3 Secure threaded connections	2
2.4 Identification plates	2
2.5 Impact wrenches	2
72 - Seat frames	4
1 Front seats	4
1.1 Assembly overview - front seat	4
1.2 Assembly overview - seat pan	5
1.3 Assembly overview - seat pan adjustment	9
1.4 Assembly overview - front seat backrest	11
1.5 Assembly overview - head restraint	13
1.6 Overview of fitting locations - electrical and electronic components	15
1.7 Removing and installing front seat	18
1.8 Attaching front seat to seat repair stand	23
1.9 Dismantling and assembling seat pan	25
1.10 Removing and installing seat height adjustment handle	37
1.11 Removing and installing seat rake adjuster	38
1.12 Removing and installing front seat backrest	38
1.13 Removing and installing backrest adjuster	40
1.14 Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130 ..	43
1.15 Removing and installing seat adjustment operating unit E470 / E471	44
1.16 Removing and installing switch/switch module for front seat	45
1.17 Removing and installing control unit for seat functions	45
1.18 Removing and installing front seat fans	46
1.19 Removing and installing head restraint	49
1.20 Removing and installing head restraint guide	51
1.21 Bracket for multimedia system display unit	53
1.22 Removing and installing backrest cover panel	54
2 Rear seats	57
2.1 Assembly overview - bench seat/individual seats	57
2.2 Assembly overview - rear seat backrest	60
2.3 Assembly overview - backrest with load-through hatch	62
2.4 Removing and installing bench seat/individual seats	62
2.5 Removing and installing rear seat backrest	63
2.6 Removing and installing trim for locking mechanism	65
2.7 Removing and installing locking mechanism for rear seat backrest	66
2.8 Removing and installing trim frame for load-through hatch	66
2.9 Removing and installing centre armrest	69
2.10 Removing and installing seat frame trim	70
2.11 Removing and installing seat frame mounting	74
2.12 Removing and installing head restraint	76
2.13 Removing and installing head restraint guide	76
3 Front seat pneumatic system	79
3.1 Connection diagram - pneumatic system	79
3.2 Assembly overview - pneumatic system	81
3.3 Checking pneumatic system	83
3.4 Severing and connecting pneumatic lines	88



3.5	Servicing pneumatic lines	88
3.6	Removing and installing lumbar support with air cushions - module with valve block 2 and backrest bolster adjusters	89
3.7	Removing and installing air cushion for seat bolster adjustment	90
3.8	Removing and installing massage mat	91
3.9	Removing and installing valve block for massage function	93
3.10	Removing and installing compressor for pneumatic system	93
74	Seat - padding, covers	95
1	Covers and padding on front seats	95
1.1	Assembly overview - seat pan cover and padding	95
1.2	Assembly overview - backrest cover and padding	97
1.3	Assembly overview - seat heater elements	99
1.4	Removing and installing seat pan cover and padding	101
1.5	Separating seat pan cover and padding	105
1.6	Removing and installing backrest cover and padding	106
1.7	Separating backrest cover and padding	111
1.8	Removing and installing seat bolster heater element	112
1.9	Removing and installing seat depth adjuster heater element	113
2	Covers and padding on rear seats	114
2.1	Assembly overview - cover and padding	114
2.2	Assembly overview - seat heater elements	116
2.3	Removing and installing cover and padding	117
2.4	Removing and installing intermediate padding - backrest with load-through hatch	120
2.5	Detaching cover from padding	121
2.6	Removing and installing side padding	124
2.7	Removing and installing seat heater element	125
2.8	Removing and installing backrest heater element	125