

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety briefing/employee qualification</b>	<b>1</b>
1.1 Qualification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety information	2
2.2 Safety precautions when working on the high-voltage system	4
2.3 Safety precautions when working in the vicinity of high-voltage components	5
2.4 Safety precautions when working on the cooling system	6
2.5 Safety precautions when using testers and measuring instruments during a road test	6
2.6 Work that requires high-voltage system to be de-energised	6
<b>3 Repair instructions</b>	<b>8</b>
3.1 Important notes	8
3.2 General notes	8
3.3 Information on handling fine dust, aluminium dust and steel dust	9
3.4 Routing and attachment of pipes, hoses and wiring	10
3.5 Contact corrosion	10
3.6 Bonding surfaces for self-adhesive components	10
3.7 Secure threaded connections	10
3.8 Identification plates	10
3.9 Vehicle identification data	11
3.10 Moulded foam inserts	11
3.11 Matching the surface contour	12
3.12 Galvanised body panels, high-strength and extra-high-strength steel	13
3.13 Aluminium sheet panels and cast aluminium profiles	15
3.14 Body dimensions	20
3.15 Repairing joints with flow-drill screws	26
<b>4 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b>	<b>30</b>
<b>5 Processing body structure adhesive D 180 004 M2</b>	<b>32</b>
5.1 Preparing bonding surfaces	33
<b>6 Bonded joints</b>	<b>46</b>
6.1 Bonded joints	46
6.2 Spot-welded bonded joints	46
6.3 Inspecting and repairing bonded joints	46
6.4 Repair methods for replacing body parts	47
<b>7 Overview of attachment pairings</b>	<b>48</b>
7.1 Overview of rivets and tools	49
<b>8 Tools</b>	<b>57</b>
8.1 Using edge milling unit -VAS 882 005-	61
<b>9 Straightening jig</b>	<b>94</b>
9.1 Procedure for repairing structural body damage on Audi vehicles	94
<b>50 - Body - front</b>	<b>95</b>
<b>1 Safety information</b>	<b>95</b>
<b>2 Renewing upper longitudinal member for wheel housing (front section)</b>	<b>96</b>
2.1 Tools	96
2.2 Procedure	97
<b>3 Renewing upper wheel housing longitudinal member</b>	<b>106</b>
3.1 Tools	106
3.2 Procedure	107
<b>4 Renewing suspension turret</b>	<b>114</b>



4.1	Tools	114
4.2	Procedure	115
<b>5</b>	<b>Renewing front longitudinal member</b>	<b>123</b>
5.1	Tools	123
5.2	Procedure	124
<b>6</b>	<b>Renewing front longitudinal member - part section</b>	<b>136</b>
6.1	Tools	136
6.2	Procedure	137
<b>7</b>	<b>Renewing front longitudinal member with support - part section</b>	<b>145</b>
7.1	Tools	145
7.2	Procedure	146
<b>8</b>	<b>Renewing upper footwell cross member</b>	<b>160</b>
8.1	Tools	160
8.2	Procedure	161
<b>9</b>	<b>Renewing outer footwell cross member</b>	<b>167</b>
9.1	Tools	167
9.2	Procedure	168
<b>51 - Body - centre</b>		<b>176</b>
<b>1</b>	<b>Safety information</b>	<b>176</b>
<b>2</b>	<b>Permitted separating cuts on complete side frame</b>	<b>177</b>
<b>3</b>	<b>Renewing roof</b>	<b>178</b>
3.1	Tools	178
3.2	Procedure	179
<b>4</b>	<b>Renewing roof (vehicles with panoramic sunroof)</b>	<b>202</b>
4.1	Tools	202
4.2	Procedure	203
<b>5</b>	<b>Renewing roof side member</b>	<b>220</b>
5.1	Tools	220
5.2	Procedure	221
<b>6</b>	<b>Renewing front roof cross member</b>	<b>229</b>
6.1	Tools	229
6.2	Procedure	230
<b>7</b>	<b>Renewing rear roof cross member</b>	<b>236</b>
7.1	Tools	236
7.2	Procedure	237
<b>8</b>	<b>Renewing hinge mounting</b>	<b>243</b>
8.1	Tools	243
8.2	Procedure	244
<b>9</b>	<b>Renewing outer A-pillar</b>	<b>250</b>
9.1	Tools	250
9.2	Procedure	251
<b>10</b>	<b>Renewing lower inner A-pillar</b>	<b>259</b>
10.1	Tools	259
10.2	Procedure	260
<b>11</b>	<b>Renewing upper inner A-pillar - part section</b>	<b>264</b>
11.1	Tools	264
11.2	Procedure	265
<b>12</b>	<b>Renewing upper inner A-pillar - part section (NAR vehicles only)</b>	<b>274</b>
12.1	Tools	274
12.2	Procedure	275
<b>13</b>	<b>Renewing outer B-pillar</b>	<b>285</b>
13.1	Tools	285

13.2	Procedure	286
<b>14</b>	<b>Renewing inner B-pillar</b>	<b>293</b>
14.1	Tools	294
14.2	Procedure	295
<b>15</b>	<b>Renewing outer side member</b>	<b>305</b>
15.1	Tools	305
15.2	Procedure	306
<b>16</b>	<b>Renewing inner side member</b>	<b>312</b>
16.1	Tools	312
16.2	Procedure	313
<b>17</b>	<b>Renewing front seat cross member</b>	<b>316</b>
17.1	Tools	316
17.2	Procedure	317
<b>18</b>	<b>Renewing rear seat cross member</b>	<b>322</b>
18.1	Tools	322
18.2	Procedure	323
<b>19</b>	<b>Renewing centre tunnel</b>	<b>328</b>
19.1	Tools	328
19.2	Procedure	329
<b>53 - Body - rear</b>		<b>337</b>
<b>1</b>	<b>Safety information</b>	<b>337</b>
<b>2</b>	<b>Permitted separating cuts on complete side frame</b>	<b>338</b>
<b>3</b>	<b>Renewing rear cross panel</b>	<b>339</b>
3.1	Tools	339
3.2	Procedure	340
<b>4</b>	<b>Renewing rear cross panel reinforcement</b>	<b>347</b>
4.1	Tools	347
4.2	Procedure	348
<b>5</b>	<b>Renewing tail light mounting</b>	<b>355</b>
5.1	Tools	355
5.2	Procedure	356
<b>6</b>	<b>Renewing rear longitudinal member - part section</b>	<b>363</b>
6.1	Tools	363
6.2	Procedure	364
<b>7</b>	<b>Renewing rear longitudinal member</b>	<b>372</b>
7.1	Tools	372
7.2	Procedure	373
<b>8</b>	<b>Renewing side panel</b>	<b>429</b>
8.1	Tools	429
8.2	Procedure	430
<b>9</b>	<b>Renewing C-pillar reinforcement</b>	<b>438</b>
9.1	Tools	438
9.2	Procedure	439
<b>10</b>	<b>Renewing inner D-pillar</b>	<b>445</b>
10.1	Tools	445
10.2	Procedure	446
<b>11</b>	<b>Renewing outer wheel housing</b>	<b>457</b>
11.1	Tools	457
11.2	Procedure	458
<b>12</b>	<b>Renewing inner wheel housing</b>	<b>465</b>
12.1	Tools	465
12.2	Procedure	466



<b>13</b>	<b>Renewing luggage compartment floor - part section</b> .....	<b>476</b>
13.1	Tools .....	476
13.2	Procedure .....	477
<b>14</b>	<b>Renewing luggage compartment floor</b> .....	<b>484</b>
14.1	Tools .....	484
14.2	Procedure .....	485