

Contents

00 - Technical data	1
1 Identification	1
1.1 Identification of final drive	1
1.2 Identification of all-wheel drive coupling 0CJ or 0CX	5
2 Technical data	7
2.1 Allocation of final drive to engine	7
2.2 Capacities	14
3 Overview - power transmission	17
3.1 Overview - power transmission, vehicles without all-wheel drive coupling	17
3.2 Overview - power transmission, vehicles with all-wheel drive coupling »quattro ultra«	17
4 Safety information	19
4.1 Safety precautions when working on vehicle	19
4.2 Safety precautions when working on vehicles with start/stop system	20
4.3 Safety precautions when working on the high-voltage system	20
4.4 Safety precautions when working in the vicinity of high-voltage components	21
5 Repair instructions	22
5.1 General repair instructions	22
5.2 Repair instructions and testing - rear final drive 0D3 "quattro sport" and 0BX "quattro sport"	22
5.3 Repair instructions and testing - all-wheel drive coupling 0CJ or 0CX	24
5.4 Special tools	25
5.5 Components	25
5.6 Contact corrosion	27
6 Electrical components	29
6.1 Overview of fitting locations - electrical components	29
39 - Final drive - rear differential	31
1 Safety information	31
2 Propshaft	32
2.1 Assembly overview - propshaft	32
2.2 Removing and installing propshaft	35
2.3 Renewing protective boot	49
3 Final drive	52
3.1 Assembly overview - final drive	52
3.2 Removing and installing final drive	59
3.3 Dismantling and assembling final drive	92
3.4 Hydraulic control unit - "quattro sport"	109
3.5 Checking torque distribution	118
4 Gear oil	119
4.1 Overview of fitting locations - drain and inspection plugs	119
4.2 Checking gear oil level	122
4.3 Draining and filling gear oil	124
5 ATF	141
5.1 Checking ATF level	141
5.2 Draining and filling ATF	141
6 Oil seals	146
6.1 Overview of fitting locations - oil seals	146
6.2 Renewing left oil seal	153
6.3 Renewing right oil seal	160
6.4 Renewing input shaft oil seal	173
6.5 Renewing protective ring on flange shaft	197



6.6	Renewing protective ring on propshaft flange	203
7	Assembly mountings	206
7.1	Removing and installing bonded rubber bush	206
8	All-wheel drive coupling	208
8.1	Assembly overview - all-wheel drive coupling	208
8.2	Overview of fitting locations - drain and inspection plugs	210
8.3	Removing and installing all-wheel drive coupling	210
8.4	Additional work required if all-wheel drive coupling was renewed	213
8.5	Checking oil level	214
8.6	Draining and filling oil for all-wheel drive coupling	215
8.7	Removing and installing control unit	217
8.8	Additional work for “quattro ultra” vehicles	220
8.9	Checking setting torque of all-wheel drive coupling	221
8.10	Renewing oil seal for all-wheel drive coupling output shaft	223
8.11	Renewing oil seal for all-wheel drive coupling input shaft	225
9	Gearbox control system	228
9.1	Overview of fitting locations - gearbox control system	228
9.2	Removing and installing all-wheel drive control unit J492 - vehicles with “quattro ultra” ..	231
9.3	Removing and installing differential lock control unit J187 - vehicles with “quattro sport” ..	232
9.4	Additional work required after renewing differential lock control unit J187	236