

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicle	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the subframe	2
1.5 Safety precautions when tow-starting and towing	3
2 Identification	4
2.1 Gearbox identification	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Contact corrosion	8
3.5 Routing and attachment of pipes, hoses and wiring	9
4 Technical data	10
4.1 Capacities	10
4.2 Oil distribution	11
4.3 Clutch logic	12
5 Overview - power transmission	14
5.1 Overview - power transmission, all-wheel drive	14
32 - Torque converter	15
1 Torque converter	15
37 - Controls, housing	16
1 ATF circuit	16
1.1 Assembly overview - ATF circuit	16
1.2 Removing and installing ATF cooler	20
1.3 Removing and installing ATF lines	23
2 ATF	27
2.1 Checking ATF level	27
2.2 Draining and filling ATF	32
3 Removing and installing gearbox	35
3.1 Tightening torques for gearbox	35
3.2 Removing gearbox	37
3.3 Installing gearbox	101
4 Assembly mountings	111
4.1 Assembly overview - assembly mountings	111
4.2 Removing and installing tunnel cross member	112
5 Transporting gearbox	122
6 Securing to engine and gearbox support	124
7 Selector mechanism	125
7.1 Assembly overview - selector mechanism	125
7.2 Assembly overview - manual release mechanism for parking lock	127
7.3 Checking selector mechanism	128
7.4 Manual release from position P	132
7.5 Removing and installing selector lever handle	134
7.6 Detaching and attaching selector lever boot on selector lever handle	136
7.7 Removing and installing selector mechanism	137
7.8 Removing and installing manual release cable for parking lock	139



7.9	Renewing selector shaft oil seal	144
38	- Gears, control	148
1	ATF system	148
1.1	Removing and installing oil pan	148
2	Mechatronic unit	151
39	- Final drive - front differential	152
1	Final drive	152
1.1	Assembly overview - final drive	152
1.2	Removing and installing O-ring on cover for front final drive	155
2	Gear oil	157
2.1	Checking gear oil level	157
2.2	Draining and filling gear oil	165
3	Oil seals	177
3.1	Renewing left oil seal	177
3.2	Renewing right oil seal	180
4	Differential	183
4.1	Removing and installing left flange shaft	183
4.2	Removing and installing right flange shaft	188
5	Centre differential	191
6	Gearbox control system	192
6.1	Overview of fitting locations - gearbox control system	192
7	Transfer box	195