

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicle	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the subframe	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 Rules for cleanliness	4
3.2 General notes	4
3.3 General repair instructions	5
3.4 Contact corrosion	7
3.5 Routing and attachment of pipes, hoses and wiring	7
3.6 Impact wrenches	8
<b>4 Technical data</b>	<b>9</b>
4.1 Capacities	9
4.2 Clutch logic	11
<b>5 Overview - power transmission</b>	<b>12</b>
<b>32 - Torque converter</b>	<b>13</b>
1 Torque converter	13
<b>37 - Controls, housing</b>	<b>14</b>
<b>1 ATF circuit</b>	<b>14</b>
1.1 Assembly overview - ATF circuit	14
1.2 Removing and installing ATF cooler	19
1.3 Removing and installing ATF lines	21
<b>2 ATF</b>	<b>24</b>
2.1 Checking ATF level	24
2.2 Draining and filling ATF	29
<b>3 Removing and installing gearbox</b>	<b>33</b>
3.1 Tightening torques for gearbox	33
3.2 Removing gearbox	34
3.3 Installing gearbox	57
<b>4 Assembly mountings</b>	<b>64</b>
4.1 Assembly overview - assembly mountings	64
4.2 Removing and installing tunnel cross member	66
<b>5 Transporting gearbox</b>	<b>70</b>
<b>6 Securing to engine and gearbox support</b>	<b>72</b>
<b>7 Selector mechanism</b>	<b>73</b>
7.1 Assembly overview - selector mechanism	73
7.2 Assembly overview - manual release mechanism for parking lock	75
7.3 Checking selector mechanism	76
7.4 Manual release from position P	80
7.5 Removing and installing selector lever handle	82
7.6 Detaching and attaching selector lever boot on selector lever handle	84
7.7 Removing and installing selector mechanism	85
7.8 Removing and installing manual release cable for parking lock	87
7.9 Renewing selector shaft oil seal	92



<b>38 - Gears, control</b>	<b>96</b>
<b>1 ATF system</b>	<b>96</b>
1.1 Removing and installing oil pan	96
<b>2 Mechatronic unit</b>	<b>99</b>
<b>39 - Final drive - front differential</b>	<b>100</b>
<b>1 Final drive</b>	<b>100</b>
1.1 Assembly overview - final drive	100
1.2 Removing and installing O-ring on cover for front final drive	103
<b>2 Gear oil</b>	<b>106</b>
2.1 Checking gear oil level - gearbox with common oil system	106
2.2 Draining and filling gear oil	109
2.3 Removing and installing gear oil cooler	113
<b>3 Oil seals</b>	<b>115</b>
3.1 Overview of fitting locations - oil seals	115
3.2 Renewing left oil seal	115
3.3 Renewing right oil seal	119
<b>4 Differential</b>	<b>122</b>
4.1 Removing and installing left flange shaft	122
4.2 Removing and installing right flange shaft	127
<b>5 Centre differential</b>	<b>130</b>
<b>6 Gearbox control system</b>	<b>131</b>
6.1 Overview of fitting locations - gearbox control system	131
<b>7 Transfer box</b>	<b>134</b>