

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working in the vicinity of high-voltage components	1
1.2 Safety precautions when working on the high-voltage system	1
1.3 Safety precautions when working on vehicle	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	4
1.6 Safety precautions when working on the subframe	4
2 Identification	5
2.1 Gearbox identification	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General notes	6
3.3 General repair instructions	7
3.4 Contact corrosion	9
3.5 Impact wrenches	9
4 Technical data	11
4.1 Capacities	11
4.2 Oil distribution	11
32 - Torque converter	13
1 Torque converter	13
1.1 Assembly overview - torque converter	13
1.2 Removing and installing torque converter	14
1.3 Draining torque converter	16
1.4 Checking torque converter	17
1.5 Removing and installing torque converter oil seal	17
37 - Controls, housing	20
1 Selector mechanism	20
1.1 Assembly overview - selector mechanism	20
1.2 Assembly overview - manual release mechanism for parking lock	23
1.3 Checking selector mechanism	24
1.4 Manual release from position P	28
1.5 Removing and installing selector lever handle	29
1.6 Detaching and attaching selector lever boot on selector lever handle	31
1.7 Removing and installing selector mechanism	32
1.8 Removing and installing manual release cable for parking lock	34
1.9 Renewing seal for parking lock shaft	51
2 Removing and installing gearbox	58
2.1 Tightening torques for gearbox	58
2.2 Removing gearbox	62
2.3 Installing gearbox	98
2.4 Removing and installing three-phase current drive -VX54-	106
3 Assembly mountings	113
3.1 Assembly overview - assembly mountings	113
3.2 Removing and installing tunnel cross member	117
4 Transporting gearbox	126
5 Securing to engine and gearbox support	128
6 ATF circuit	130
6.1 Assembly overview - ATF circuit	130
6.2 Removing and installing ATF cooler	135



6.3	Removing and installing ATF lines	137
7	ATF	142
7.1	Checking ATF level	142
7.2	Draining and filling ATF	147
38	- Gears, control	150
1	ATF system	150
1.1	Removing and installing oil pan	150
2	Mechatronic unit	153
39	- Final drive - front differential	154
1	Final drive	154
1.1	Assembly overview - final drive	154
1.2	Removing and installing O-ring on cover for front final drive	157
2	Gear oil	159
2.1	Checking gear oil level	159
2.2	Draining and filling gear oil	161
2.3	Removing and installing gear oil cooler	165
3	Oil seals	167
3.1	Overview of fitting locations - oil seals	167
3.2	Renewing left oil seal	168
3.3	Renewing right oil seal	172
3.4	Renewing oil seal for protective tube (front)	173
3.5	Renewing oil seal for protective tube (rear)	174
4	Differential	176
4.1	Removing and installing left flange shaft	176
4.2	Removing and installing right flange shaft	180
5	Centre differential	184
6	Gearbox control system	185
6.1	Overview of fitting locations - gearbox control system	185
7	Transfer box	188