

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
2.1 Safety precautions when working on the high-voltage system	2
2.2 Safety precautions when working in the vicinity of high-voltage components	3
2.3 Safety precautions for all vehicles	3
3 Repair instructions	4
3.1 Precautions when working on high-voltage components and potential equalisation lines ..	4
3.2 Rules for cleanliness when working on the high-voltage battery	4
3.3 Painting work on vehicles with high-voltage system	4
3.4 Repair instructions for all vehicles	5
4 Assessing high-voltage system risk level	6
4.1 Necessary qualifications	6
4.2 Work that requires high-voltage system to be de-energised	6
10 - Removing and installing engine	9
1 Safety information	9
2 Removing and installing engine	10
2.1 Removing engine	10
2.2 Securing engine to engine and gearbox support	56
2.3 Installing engine	56
3 Assembly mountings	63
3.1 Assembly overview - assembly mountings	63
3.2 Supporting engine in installation position	68
3.3 Removing and installing engine mountings	69
3.4 Removing and installing power unit mounting senders	73
3.5 Removing and installing gearbox mountings	74
13 - Crankshaft group	80
1 Safety information	80
2 Cylinder block (pulley end)	81
2.1 Assembly overview - cylinder block (pulley end)	81
2.2 Removing and installing poly V-belt	82
2.3 Removing and installing poly V-belt tensioner	83
2.4 Removing and installing vibration damper	83
2.5 Removing and installing bracket for ancillaries	83
2.6 Removing and installing engine support	83
3 Cylinder block (gearbox end)	88
4 Crankshaft	89
5 Balance shaft	90
6 Pistons and conrods	91
15 - Cylinder head, valve gear	92
1 Safety information	92
2 Timing chain cover	93
2.1 Assembly overview - timing chain cover	93
2.2 Removing and installing timing chain cover	93
2.3 Renewing oil seal for vibration damper	93
3 Chain drive	94
4 Cylinder head	95
4.1 Assembly overview - cylinder head	95



4.2	Removing and installing cylinder head	95
4.3	Checking compression	99
5	Valve gear	100
5.1	Assembly overview - valve gear	100
5.2	Removing and installing camshaft	100
5.3	Installing ball for slider	104
5.4	Removing and installing cam adjustment actuators	104
5.5	Removing and installing camshaft control valve 1 N205	104
5.6	Removing and installing valve stem oil seals	105
6	Inlet and exhaust valves	106
17	Lubrication	107
1	Safety information	107
2	Sump/oil pump	108
2.1	Assembly overview - sump/oil pump	108
2.2	Engine oil	108
2.3	Removing and installing lower part of sump	108
2.4	Removing and installing oil pump	110
2.5	Removing and installing upper part of sump	110
2.6	Removing and installing oil level and oil temperature sender G266	110
3	Engine oil cooler	111
4	Crankcase breather	112
5	Oil filter/oil pressure switches	113
5.1	Assembly overview - oil filter	113
5.2	Assembly overview - oil pressure switches/oil pressure control	113
5.3	Removing and installing oil pressure switch F22	113
5.4	Removing and installing oil pressure switch for reduced oil pressure F378	113
5.5	Removing and installing stage 3 oil pressure switch F447	114
5.6	Removing and installing valve for oil pressure control N428	114
5.7	Removing and installing piston cooling jet control valve N522	114
5.8	Checking oil pressure	115
19	Cooling	116
1	Safety information	116
2	Cooling system/coolant	117
2.1	Connection diagram - coolant hoses	117
2.2	Overview of fitting locations - cooling system	125
2.3	Checking cooling system for leaks	127
2.4	Draining and filling cooling system	134
3	Coolant pump/thermostat assembly	159
3.1	Assembly overview - coolant pump/thermostat	159
3.2	Assembly overview - electric coolant pump	159
3.3	Assembly overview - coolant valves	161
3.4	Assembly overview - coolant temperature senders	165
3.5	Removing and installing electric coolant pump	167
3.6	Removing and installing coolant pump	178
3.7	Removing and installing toothed belt for coolant pump	179
3.8	Removing and installing actuator for engine temperature regulation N493	180
3.9	Removing and installing coolant temperature sender G62	180
3.10	Removing and installing radiator outlet coolant temperature sender G83	181
3.11	Removing and installing coolant temperature sender for high-voltage system	182
3.12	Removing and installing coolant valves	194
4	Coolant pipes	205
4.1	Assembly overview - coolant pipes	205

4.2	Removing and installing coolant pipes	208
4.3	Removing and installing coolant pipes for gearbox	216
5	Radiator/radiator fans	220
5.1	Exploded view - radiator/radiator fans	220
5.2	Assembly overview - auxiliary radiator	222
5.3	Exploded view - radiator cowl and radiator fan	223
5.4	Removing and installing radiator	224
5.5	Removing and installing radiator cowl	230
5.6	Removing and installing radiator fans	236
5.7	Removing and installing radiator for high-voltage cooling circuit	236
5.8	Removing and installing auxiliary radiator	239
21	- Turbocharging/supercharging	242
1	Safety information	242
2	Turbocharger	243
2.1	Exploded view - turbocharger	243
2.2	Removing and installing turbocharger	243
2.3	Removing and installing turbocharger air recirculation valve N249	248
2.4	Removing and installing charge pressure positioner V465	249
3	Charge air system	251
3.1	Assembly overview - charge air system	251
3.2	Assembly overview - hose connections for charge air system	256
3.3	Removing and installing charge air cooler	256
3.4	Removing and installing charge pressure sender G31	261
3.5	Checking charge air system for leaks	262
24	- Mixture preparation - injection	267
1	Safety information	267
2	Injection system	268
2.1	Overview of fitting locations - injection system	268
3	Air filter	281
3.1	Assembly overview - air filter housing	281
3.2	Removing and installing air filter housing	283
4	Intake manifold	286
4.1	Exploded view - intake manifold	286
4.2	Removing and installing intake manifold	286
4.3	Removing and installing throttle valve module GX3	291
4.4	Cleaning throttle valve module GX3	291
4.5	Checking intake manifold change-over function	291
5	Injectors	292
5.1	Assembly overview - fuel rail with injectors	292
5.2	Removing and installing fuel rail	292
5.3	Removing and installing injectors	293
5.4	Renewing seals on injector	293
5.5	Cleaning injectors	293
6	Senders and sensors	294
6.1	Removing and installing intake manifold sender GX9	294
6.2	Removing and installing fuel pressure sender G247	294
6.3	Checking fuel pressure sender G247	296
6.4	Removing and installing fuel pressure sender for low pressure G410	296
7	High-pressure pump	297
7.1	Assembly overview - high-pressure pump	297
7.2	Removing and installing high-pressure pump	297
7.3	Removing and installing high-pressure pipe	297



8	Lambda probe	298
8.1	Assembly overview - Lambda probe	298
8.2	Removing and installing Lambda probe	298
9	Engine control unit	299
9.1	Assembly overview - engine control unit	299
9.2	Removing and installing engine control unit J623	300
26 - Exhaust system	301	
1	Safety information	301
2	Exhaust pipes/silencers	302
2.1	Exploded view - silencers	302
2.2	Separating exhaust pipes/silencers	309
2.3	Removing and installing front silencers	311
2.4	Removing and installing silencers	314
2.5	Stress-free alignment of exhaust system	317
2.6	Checking exhaust system for leaks	318
2.7	Installation position of clamp	318
3	Emission control system	321
3.1	Assembly overview - emission control system	321
3.2	Removing and installing catalytic converter	321
3.3	Removing and installing particulate filter	324
3.4	Removing and installing exhaust flap control unit J883	326
4	Exhaust gas temperature regulation	328
4.1	Assembly overview - exhaust gas temperature regulation	328
4.2	Removing and installing exhaust gas temperature sender 3 G495	328
4.3	Removing and installing exhaust gas temperature sender 4 G648	330
5	Secondary air system	331
5.1	Assembly overview - secondary air system	331
5.2	Removing and installing secondary air pump motor V101	331
5.3	Removing and installing secondary air inlet valve N112	331
5.4	Removing and installing sender 1 for secondary air pressure G609	332
5.5	Removing and installing resonator for secondary air system	332
28 - Ignition system	333	
1	Safety information	333
2	Ignition system	334
2.1	Assembly overview - ignition system	334
2.2	Removing and installing ignition coils	334
2.3	Removing and installing knock sensor 1 G61	335
2.4	Removing and installing Hall senders	335
2.5	Removing and installing engine speed sender G28	335
93 - Electric drive systems	336	
1	Safety information	336
2	High-voltage components	337
2.1	Overview of fitting locations - high-voltage components	337
3	Warning stickers	341
3.1	Checking warning stickers	341
4	High-voltage battery unit	346
4.1	Assembly overview - high-voltage battery	346
4.2	Visually inspecting and classifying hybrid battery unit AX1	352
4.3	Removing and installing hybrid battery unit AX1	354
4.4	Checking high-voltage battery for leaks	372
4.5	Removing and installing battery regulation control unit J840	383

4.6	Removing and installing switching unit for high-voltage battery SX6	384
5	High-voltage battery components	389
5.1	Assembly overview - high-voltage battery	389
5.2	Overview of fitting locations - battery modules	398
5.3	Overview of fitting locations - battery connectors	400
5.4	Determining mean cell voltage	401
5.5	Charging and discharging battery modules	402
5.6	Marking battery modules	403
5.7	Removing battery module	404
5.8	Installing battery module	434
5.9	Inspecting and classifying battery module	454
6	Power and control electronics for electric drive	456
6.1	Overview of fitting locations - power and control electronics for electric drive	456
6.2	Removing and installing power and control electronics for electric drive	459
6.3	Removing and installing bracket for power and control electronics for electric drive JX1	464
7	Electric drive motor	465
7.1	Assembly overview - electric drive motor	465
7.2	Removing and installing three-phase current drive VX54	468
7.3	Removing and installing centring sleeve	468
7.4	Removing and installing drive motor temperature sender G712	470
7.5	Removing and installing drive motor rotor position sender 1 G713	471
7.6	Removing and installing torsion damper	472
7.7	Removing and installing actuator for disengagement clutch V606	474
7.8	Removing and installing coolant connection	476
7.9	Transporting three-phase current drive	478
7.10	Checking free movement of disengagement clutch	479
8	High-voltage wiring	481
8.1	Overview of fitting locations - high-voltage wiring	481
8.2	Removing and installing high-voltage wiring harness for high-voltage battery	489
8.3	Removing and installing high-voltage wiring harness for drive motor	495
8.4	Removing and installing high-voltage wiring for electrical air conditioner compressor	499
8.5	Removing and installing high-voltage wire for high-voltage heater (PTC)	502
9	De-energising high-voltage system	514
10	Re-energising high-voltage system	517
11	Potential equalisation lines	519
11.1	General notes - potential equalisation lines	519
11.2	Overview of fitting locations - potential equalisation lines	519
11.3	Potential equalisation measurement	521
11.4	Removing and installing potential equalisation lines	522
12	Charging socket	527
12.1	Assembly overview - charging socket	527
12.2	Charging system	529
12.3	Diagnosis of charging system	530
12.4	USB adapter for e-tron charging system	533
12.5	Removing and installing high-voltage battery charging socket 1 UX4	534
12.6	Removing and installing module for battery charge selector buttons EX32	540
13	Charging unit for high-voltage battery	542
13.1	Assembly overview - charging unit for high-voltage battery	542
13.2	Removing and installing charging unit 1 for high-voltage battery AX4	545
13.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	550