

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the high-voltage system	2
2.3 Safety precautions when working in the vicinity of high-voltage components	3
3 Repair instructions	4
3.1 Rules for cleanliness when working on the high-voltage battery	4
3.2 Painting work on vehicles with high-voltage system	4
3.3 Repair instructions for all vehicles	4
4 Assessing high-voltage system risk level	5
4.1 Necessary qualifications	5
4.2 Work that requires high-voltage system to be de-energised	5
10 - Removing and installing engine	8
1 Safety information	8
2 Removing and installing engine	9
2.1 Removing engine	9
2.2 Separating engine and gearbox	41
2.3 Securing engine to engine and gearbox support	51
2.4 Installing engine	55
3 Assembly mountings	63
3.1 Assembly overview - assembly mountings	63
3.2 Supporting engine in installation position	68
3.3 Removing and installing engine mountings	74
3.4 Removing and installing power unit mounting senders	80
3.5 Removing and installing power unit mounting control unit J931	81
3.6 Calibrating electrohydraulic engine mounting	81
3.7 Removing and installing gearbox mountings	82
4 Engine cover panel	87
4.1 Removing and installing engine cover panel	87
13 - Crankshaft group	91
1 Safety information	91
2 Cylinder block (pulley end)	92
2.1 Assembly overview - cylinder block (pulley end)	92
2.2 Assembly overview - sealing flange (pulley end)	95
2.3 Removing and installing poly V-belts	95
2.4 Removing and installing poly V-belt tensioner	97
2.5 Removing and installing vibration damper	98
2.6 Removing and installing bracket for ancillaries	98
2.7 Removing and installing engine support	98
2.8 Removing and installing pulley	99
2.9 Renewing crankshaft oil seal (pulley end)	100
2.10 Removing and installing sealing flange (pulley end)	100
3 Cylinder block (gearbox end)	102
4 Crankshaft	103
5 Balance shaft	104
6 Pistons and conrods	105
15 - Cylinder head, valve gear	106



1	Safety information	106
2	Timing chain cover	107
2.1	Assembly overview - timing chain cover	107
2.2	Removing and installing timing chain cover	107
3	Chain drive	108
4	Cylinder head	109
4.1	Assembly overview - cylinder head	109
4.2	Assembly overview - cylinder head cover	109
4.3	Removing and installing cylinder head	109
4.4	Removing and installing cylinder head cover	109
4.5	Removing and installing seals for injectors	110
4.6	Checking compression	110
5	Valve gear	111
6	Inlet and exhaust valves	112
17 - Lubrication		113
1	Safety information	113
2	Sump/oil pump	114
2.1	Assembly overview - sump/oil pump	114
2.2	Engine oil	114
2.3	Removing and installing lower part of sump	114
2.4	Removing and installing upper part of sump	114
2.5	Removing and installing oil pump	114
2.6	Removing and installing oil level and oil temperature sender G266	114
3	Engine oil cooler	115
4	Oil filter/oil pressure switches	116
4.1	Assembly overview - oil filter	116
4.2	Removing and installing oil pressure sender G10	116
4.3	Checking oil pressure	116
4.4	Removing and installing oil filter housing	116
4.5	Removing and installing valve for oil pressure control N428	117
4.6	Removing and installing oil temperature sender 2 G664	118
19 - Cooling		119
1	Safety information	119
2	Cooling system/coolant	120
2.1	Connection diagram - coolant hoses	120
2.2	Checking cooling system for leaks	128
2.3	Draining and filling cooling system	130
3	Coolant pump/thermostat assembly	145
3.1	Assembly overview - coolant pump	145
3.2	Assembly overview - electric coolant pump	145
3.3	Assembly overview - thermostat	149
3.4	Assembly overview - coolant valves	149
3.5	Exploded view - coolant temperature senders	151
3.6	Removing and installing electric coolant pump	153
3.7	Removing and installing coolant pump	158
3.8	Removing and installing thermostat housing	158
3.9	Removing and installing map-controlled engine cooling system thermostat F265	159
3.10	Removing and installing coolant temperature sender G62	159
3.11	Removing and installing temperature sender for engine temperature regulation G694	159
3.12	Removing and installing coolant temperature sender 2 G802	159
3.13	Removing and installing coolant temperature sender for high-voltage system	160
3.14	Removing and installing coolant valves	166

4	Coolant pipes	175
4.1	Assembly overview - coolant pipes	175
4.2	Removing and installing coolant pipes	179
5	Radiators/radiator fans	186
5.1	Exploded view - radiators/radiator fans	186
5.2	Exploded view - radiator cowl and radiator fans	188
5.3	Assembly overview - radiator blind	188
5.4	Removing and installing radiator	189
5.5	Removing and installing radiator cowl	193
5.6	Removing and installing radiator fans	199
5.7	Removing and installing radiator blind	199
5.8	Removing and installing radiator blind control motor	200
5.9	Removing and installing radiator for high-voltage coolant circuit	201
21	Turbocharging/supercharging	204
1	Safety information	204
2	Turbocharger	205
2.1	Removing and installing turbocharger	205
3	Charge air system	206
3.1	Assembly overview - charge air system	206
3.2	Assembly overview - hose connections for charge air system	211
3.3	Removing and installing charge air cooler	211
3.4	Removing and installing charge pressure sender G31	215
3.5	Checking charge air system for leaks	216
23	Mixture preparation - injection	217
1	Safety information	217
2	Injection system	218
2.1	Overview - fuel system	218
2.2	Overview of fitting locations - injection system	219
2.3	Filling and bleeding fuel system	228
2.4	Checking fuel system for leaks	228
3	Vacuum system	229
3.1	Connection diagram - vacuum system	229
3.2	Checking vacuum system	231
4	Air filter	232
4.1	Assembly overview - air filter housing	232
4.2	Removing and installing air filter housing	234
5	Intake manifold	237
5.1	Exploded view - intake manifold	237
5.2	Removing and installing upper part of intake manifold	237
5.3	Removing and installing lower part of intake manifold	237
5.4	Removing and installing intake manifold flap motor V157	238
5.5	Removing and installing throttle valve module J338	238
6	Injectors/high-pressure reservoir (rail)	239
6.1	Assembly overview - injectors	239
6.2	Checking injectors	239
6.3	Performing adaptation of correction values for injectors	239
6.4	Checking for injectors sticking open	239
6.5	Checking return flow rate of injectors with engine running	239
6.6	Checking return flow rate of injectors at starter cranking speed	240
6.7	Checking restrictor in fuel return line	240
6.8	Removing and installing injectors	240
6.9	Removing and installing high-pressure pipes	242



6.10	Removing and installing high-pressure reservoir (rail)	242
7	Senders and sensors	243
7.1	Removing and installing intake air temperature sender G42	243
7.2	Removing and installing air mass meter G70	245
7.3	Removing and installing fuel temperature sender G81	245
7.4	Removing and installing fuel pressure sender G247	246
7.5	Removing and installing fuel pressure sender for low pressure G410	246
7.6	Removing and installing pressure differential sender G505	246
7.7	Checking fuel pressure regulating valve N276	247
7.8	Removing and installing fuel pressure regulating valve N276	249
8	High-pressure pump	250
9	Lambda probe	251
9.1	Assembly overview - Lambda probe	251
9.2	Removing and installing Lambda probe	252
9.3	Removing and installing NOx senders	252
9.4	Removing and installing particulate sensor G784	254
10	Engine control unit	257
10.1	Assembly overview - engine control unit	257
10.2	Removing and installing engine/motor control unit J623	257
26	Exhaust system	259
1	Safety information	259
2	Exhaust pipes/silencers	260
2.1	Exploded view - silencer	260
2.2	Removing and installing front exhaust pipe	265
2.3	Separating exhaust pipes/silencer	273
2.4	Removing and installing silencer	274
2.5	Stress-free alignment of exhaust system	276
2.6	Checking exhaust system for leaks	276
3	Emission control system	277
3.1	Assembly overview - emission control system	277
3.2	Removing and installing emission control module	282
3.3	Removing and installing ammonia trap	286
3.4	Removing and installing exhaust flap control unit J883	287
3.5	Removing and installing ammonia trap	288
4	SCR (selective catalytic reduction) system	290
4.1	Assembly overview - reducing agent tank	290
4.2	Assembly overview - reducing agent supply line	292
4.3	Assembly overview - control unit for reducing agent metering system J880	292
4.4	Draining reducing agent tank	293
4.5	Removing and installing reducing agent tank	294
4.6	Removing and installing injector for reducing agent N474	296
4.7	Removing and installing control unit for reducing agent metering system J880	296
4.8	Removing and installing reducing agent quality sensor G849	296
5	Exhaust gas temperature regulation	298
5.1	Assembly overview - exhaust gas temperature regulation	298
5.2	Removing and installing exhaust gas temperature sender 1 G235	298
5.3	Removing and installing exhaust gas temperature sender 2 G448	298
5.4	Removing and installing exhaust gas temperature sender 3 G495	298
5.5	Removing and installing exhaust gas temperature sender 4 G648	299
5.6	Removing and installing exhaust gas temperature sender 5 G815	299
5.7	Removing and installing catalytic converter temperature sensor 1 G20	300
6	Exhaust gas recirculation	301
6.1	Assembly overview - exhaust gas recirculation system	301

6.2	Removing and installing exhaust gas recirculation cooler	301
6.3	Removing and installing exhaust gas recirculation temperature sensor G98	301
7	Exhaust manifold	302
7.1	Exploded view - exhaust manifold	302
7.2	Removing and installing exhaust manifold	302
28	Glow plug system	308
1	Safety information	308
2	Glow plug system	309
2.1	Assembly overview - glow plug system	309
2.2	Removing and installing glow plug	309
2.3	Removing and installing automatic glow period control unit J179	309
2.4	Removing and installing Hall sender G40	310
2.5	Removing and installing engine speed sender G28	310
93	Electric drive systems	311
1	Safety information	311
2	High-voltage components	312
2.1	Overview of fitting locations - high-voltage components	312
3	Warning stickers	316
3.1	Checking warning stickers	316
4	High-voltage battery unit	320
4.1	Assembly overview - high-voltage battery	320
4.2	Inspecting and classifying hybrid battery unit AX1	324
4.3	Removing and installing hybrid battery unit AX1	325
4.4	Checking high-voltage battery for leaks	333
4.5	Removing and installing battery regulation control unit J840	335
4.6	Removing and installing switching unit for high-voltage battery SX6	336
5	High-voltage battery components	339
5.1	Assembly overview - high-voltage battery components	339
5.2	Overview of fitting locations - battery modules	342
5.3	Determining mean cell voltage	343
5.4	Charging and discharging battery modules	344
5.5	Removing battery modules (top level)	345
5.6	Removing battery modules (bottom level)	351
5.7	Installing battery modules	356
5.8	Visually inspecting and classifying battery module	361
6	Power and control electronics for electric drive	363
6.1	Overview of fitting locations - power and control electronics for electric drive	363
6.2	Removing and installing power and control electronics for electric drive	367
6.3	Removing and installing bracket for power and control electronics for electric drive JX1	370
7	Electric drive motor	371
7.1	Assembly overview - electric drive motor	371
7.2	Removing and installing three-phase current drive VX54	374
7.3	Removing and installing centring sleeve	374
7.4	Removing and installing drive motor temperature sender G712	375
7.5	Removing and installing drive motor rotor position sender 1 G713	376
7.6	Removing and installing torsion damper	377
7.7	Removing and installing actuator for disengagement clutch V606	379
7.8	Removing and installing coolant connection	382
7.9	Transporting three-phase current drive	383
7.10	Checking free movement of disengagement clutch	384
8	High-voltage wiring	385
8.1	Overview of fitting locations - high-voltage wiring	385



8.2	Removing and installing high-voltage wiring harness for high-voltage battery	392
8.3	Removing and installing high-voltage wiring harness for drive motor	398
8.4	Removing and installing high-voltage wire for electrical air conditioner compressor	401
8.5	Removing and installing high-voltage wire for high-voltage heater (PTC)	404
9	De-energising high-voltage system	413
10	Re-energising high-voltage system	416
11	Potential equalisation lines	417
11.1	General notes - potential equalisation lines	417
11.2	Overview of fitting locations - potential equalisation lines	417
11.3	Potential equalisation measurement	418
11.4	Removing and installing potential equalisation lines	419
12	Charging socket	423
12.1	Assembly overview - charging socket	423
12.2	e-tron charging system	426
12.3	USB adapter for e-tron charging system	426
12.4	Removing and installing high-voltage battery charging socket 1 UX4	427
12.5	Removing and installing module for battery charge selector buttons EX32	432
13	Charging unit for high-voltage battery	433
13.1	Assembly overview - charging unit for high-voltage battery	433
13.2	Removing and installing charging unit 1 for high-voltage battery AX4	436
13.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	441