

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
<b>2 Safety information</b> .....	<b>2</b>
<b>3 Repair instructions</b> .....	<b>3</b>
<b>10 - Removing and installing engine</b> .....	<b>4</b>
<b>1 Removing and installing engine</b> .....	<b>4</b>
1.1 Removing engine .....	4
1.2 Separating engine and gearbox .....	41
1.3 Securing engine to engine and gearbox support .....	47
1.4 Installing engine .....	51
<b>2 Assembly mountings</b> .....	<b>55</b>
2.1 Assembly overview - assembly mountings .....	55
2.2 Supporting engine in installation position .....	59
2.3 Removing and installing engine mountings .....	64
2.4 Removing and installing power unit mounting senders .....	64
2.5 Removing and installing power unit mounting control unit J931 .....	65
2.6 Calibrating electrohydraulic engine mounting .....	67
2.7 Removing and installing gearbox mountings .....	68
<b>3 Engine cover panel</b> .....	<b>71</b>
3.1 Removing and installing engine cover panel .....	71
<b>13 - Crankshaft group</b> .....	<b>73</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>73</b>
1.1 Assembly overview - cylinder block (pulley end) .....	73
1.2 Assembly overview - sealing flange (pulley end) .....	73
1.3 Removing and installing poly V-belts .....	73
1.4 Removing and installing poly V-belt tensioner .....	75
1.5 Removing and installing bracket for ancillaries .....	75
1.6 Removing and installing engine support .....	75
1.7 Removing and installing pulley .....	76
1.8 Renewing crankshaft oil seal (pulley end) .....	76
1.9 Removing and installing sealing flange (pulley end) .....	77
<b>2 Cylinder block (gearbox end)</b> .....	<b>78</b>
<b>3 Crankshaft</b> .....	<b>79</b>
<b>4 Transmission shaft</b> .....	<b>80</b>
<b>5 Pistons and conrods</b> .....	<b>81</b>
<b>15 - Cylinder head, valve gear</b> .....	<b>82</b>
<b>1 Timing chain cover</b> .....	<b>82</b>
<b>2 Chain drive</b> .....	<b>83</b>
2.1 Assembly overview - camshaft timing chains .....	83
2.2 Assembly overview - drive chain for high-pressure pump .....	83
2.3 Assembly overview - drive chain for oil pump .....	83
2.4 Removing camshaft timing chain from camshafts .....	83
2.5 Removing and installing camshaft timing chain .....	83
2.6 Removing and installing drive chain for high-pressure pump .....	84
2.7 Installing intermediate drive .....	84
<b>3 Cylinder head</b> .....	<b>85</b>
3.1 Assembly overview - cylinder head .....	85
3.2 Assembly overview - cylinder head cover .....	85



3.3	Removing and installing cylinder head	85
3.4	Removing and installing cylinder head cover	88
3.5	Removing and installing seals for injectors	90
3.6	Checking compression	90
<b>4</b>	<b>Valve gear</b>	<b>91</b>
4.1	Assembly overview - valve gear	91
4.2	Measuring axial clearance of camshaft	91
4.3	Measuring radial clearance of camshaft	91
4.4	Removing and installing camshaft	91
4.5	Removing and installing cam actuators	91
4.6	Removing and installing valve stem oil seals	95
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>96</b>
<b>17</b>	<b>- Lubrication</b>	<b>97</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>97</b>
1.1	Assembly overview - sump/oil pump	97
1.2	Engine oil	97
1.3	Removing and installing lower part of sump	98
1.4	Removing and installing upper part of sump	98
1.5	Removing and installing oil pump	98
1.6	Removing and installing oil level and oil temperature sender G266	98
<b>2</b>	<b>Engine oil cooler</b>	<b>99</b>
2.1	Assembly overview - engine oil cooler	99
2.2	Removing and installing engine oil cooler	99
<b>3</b>	<b>Crankcase breather</b>	<b>100</b>
3.1	Assembly overview - crankcase breather system	100
3.2	Removing and installing crankcase breather module	100
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>101</b>
4.1	Assembly overview - oil filter	101
4.2	Removing and installing oil temperature sender G8	101
4.3	Removing and installing oil pressure sender G10	102
4.4	Checking oil pressure	103
4.5	Removing and installing oil filter housing	103
4.6	Removing and installing valve for oil pressure control N428	103
<b>19</b>	<b>- Cooling</b>	<b>104</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>104</b>
1.1	Connection diagram - coolant hoses	104
1.2	Checking cooling system for leaks	108
1.3	Draining and filling cooling system	108
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>113</b>
2.1	Assembly overview - coolant pump	113
2.2	Assembly overview - electric coolant pump	113
2.3	Assembly overview - thermostat	115
2.4	Assembly overview - coolant valves	115
2.5	Assembly overview - coolant temperature senders	116
2.6	Removing and installing electric coolant pump	116
2.7	Removing and installing coolant pump	121
2.8	Removing and installing housing for map-controlled engine cooling system thermostat F265	121
2.9	Removing and installing coolant temperature senders G62 / G83	122
2.10	Removing and installing coolant temperature sender 3 G812	122
2.11	Removing and installing coolant valves	122
<b>3</b>	<b>Coolant pipes</b>	<b>125</b>
3.1	Assembly overview - coolant pipes	125

3.2	Removing and installing coolant pipes .....	130
3.3	Removing and installing coolant pipes for gearbox .....	144
<b>4</b>	<b>Radiator/radiator fans .....</b>	<b>147</b>
4.1	Assembly overview - radiator/radiator fans .....	147
4.2	Removing and installing radiator .....	150
4.3	Removing and installing radiator fan V7 / radiator fan 2 V177 .....	153
<b>21</b>	<b>- Turbocharging/supercharging .....</b>	<b>155</b>
<b>1</b>	<b>Turbocharger .....</b>	<b>155</b>
1.1	Assembly overview - turbocharger .....	155
1.2	Assembly overview - electric compressor with control unit for electric compressor J1123 ..	155
1.3	Assembly overview - charge air recirculation module GX37 .....	155
1.4	Removing and installing turbocharger .....	155
1.5	Removing and installing electric compressor with control unit for electric compressor J1123 ..	156
1.6	Removing and installing charge air recirculation module GX37 .....	157
1.7	Removing and installing sender 1 for turbocharger speed G688 .....	157
1.8	Removing and installing sender 2 for turbocharger speed G689 .....	158
1.9	Removing and installing temperature sender for engine cover panel G765 .....	158
<b>2</b>	<b>Charge air system .....</b>	<b>159</b>
2.1	Assembly overview - charge air system .....	159
2.2	Assembly overview - hose connections for charge air system .....	164
2.3	Removing and installing charge air cooler .....	164
2.4	Checking charge air system for leaks .....	166
<b>23</b>	<b>- Mixture preparation - injection .....</b>	<b>169</b>
<b>1</b>	<b>Injection system .....</b>	<b>169</b>
1.1	Overview - fuel system .....	169
1.2	Overview of fitting locations - injection system .....	169
1.3	Filling and bleeding fuel system .....	182
1.4	Checking fuel system for leaks .....	183
<b>2</b>	<b>Vacuum system .....</b>	<b>184</b>
2.1	Connection diagram - vacuum system .....	184
2.2	Checking vacuum system .....	186
<b>3</b>	<b>Air filter .....</b>	<b>187</b>
3.1	Assembly overview - air filter housing .....	187
3.2	Removing and installing air filter housing .....	189
<b>4</b>	<b>Intake manifold .....</b>	<b>192</b>
4.1	Assembly overview - intake manifold .....	192
4.2	Removing and installing intake manifold .....	192
4.3	Removing and installing intake manifold flap control unit GX14 / intake manifold flap control ..	192
4.4	Removing and installing throttle valve module GX3 / throttle valve module 2 GX4 .....	192
<b>5</b>	<b>Injectors/high-pressure reservoir (rail) .....</b>	<b>194</b>
5.1	Assembly overview - injectors .....	194
5.2	Checking injectors .....	194
5.3	Performing adaptation of correction values for injectors .....	194
5.4	Checking for injectors sticking open .....	194
5.5	Checking return flow rate of injectors with engine running .....	195
5.6	Checking return flow rate of injectors at starter cranking speed .....	196
5.7	Checking pressure retention valve in fuel return line .....	196
5.8	Removing and installing injectors .....	196
5.9	Removing and installing high-pressure pipes .....	198
5.10	Removing and installing high-pressure reservoir (rail) .....	199
<b>6</b>	<b>Senders and sensors .....</b>	<b>200</b>



6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	200
6.2	Removing and installing actuator for structure-borne sound	201
6.3	Removing and installing control unit for structure-borne sound	202
6.4	Removing and installing intake air temperature sender G42 / intake air temperature sender 2 G299	202
6.5	Removing and installing air mass meter G70 / air mass meter 2 G246	203
6.6	Removing and installing intake manifold pressure sender G71	203
6.7	Removing and installing fuel temperature sender G81	203
6.8	Removing and installing fuel pressure sender G247	204
6.9	Removing and installing fuel pressure sender for low pressure G410	204
6.10	Removing and installing pressure differential sender G505	205
6.11	Checking fuel pressure regulating valve N276	205
6.12	Removing and installing fuel pressure regulating valve N276	207
<b>7</b>	<b>High-pressure pump</b>	<b>208</b>
7.1	Assembly overview - high-pressure pump	208
7.2	Removing and installing high-pressure pump	208
<b>8</b>	<b>Lambda probe</b>	<b>209</b>
8.1	Assembly overview - Lambda probe	209
8.2	Removing and installing Lambda probe	211
8.3	Removing and installing NOx senders	212
8.4	Removing and installing particulate sensor G784	215
<b>9</b>	<b>Engine control unit</b>	<b>217</b>
9.1	Assembly overview - engine control unit	217
9.2	Removing and installing engine control unit J623	217
<b>26</b>	<b>Exhaust system</b>	<b>219</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>219</b>
1.1	Assembly overview - silencers	219
1.2	Removing and installing front exhaust pipe	225
1.3	Removing and installing silencer	226
1.4	Stress-free alignment of exhaust system	229
1.5	Checking exhaust system for leaks	230
<b>2</b>	<b>Emission control system</b>	<b>231</b>
2.1	Assembly overview - emission control system	231
2.2	Removing and installing emission control module	232
<b>3</b>	<b>SCR (selective catalytic reduction) system</b>	<b>238</b>
3.1	Assembly overview - reducing agent tank	238
3.2	Assembly overview - reducing agent supply line	242
3.3	Assembly overview - injector for reducing agent	243
3.4	Assembly overview - control unit for reducing agent metering system	243
3.5	Draining reducing agent tank	243
3.6	Removing and installing reducing agent tank	245
3.7	Removing and installing injector for reducing agent N474	247
3.8	Removing and installing control unit for reducing agent metering system J880	248
3.9	Removing and installing reducing agent quality sensor G849	248
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>249</b>
4.1	Assembly overview - exhaust gas temperature regulation	249
4.2	Removing and installing parts of exhaust gas temperature regulation	252
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>254</b>
5.1	Assembly overview - exhaust gas recirculation system	254
5.2	Removing and installing exhaust gas recirculation cooler	254
5.3	Removing and installing exhaust gas recirculation temperature sensor G98	254
5.4	Removing and installing pressure sender for exhaust gas recirculation G691	254
<b>6</b>	<b>Exhaust manifold</b>	<b>256</b>

6.1	Assembly overview - exhaust manifold .....	256
6.2	Removing and installing exhaust manifolds .....	256
<b>28</b>	<b>- Glow plug system .....</b>	<b>257</b>
<b>1</b>	<b>Glow plug system .....</b>	<b>257</b>
1.1	Assembly overview - glow plug system .....	257
1.2	Removing and installing glow plug .....	259
1.3	Removing and installing automatic glow period control unit J179 / glow period control unit 2 J703 .....	263
1.4	Removing and installing Hall sender G40 .....	263
1.5	Removing and installing engine speed sender G28 .....	263