

## Contents

<b>00</b>	<b>Technical data</b>	<b>1</b>
1	<b>Safety information</b>	<b>1</b>
1.1	Safety precautions when working on the high-voltage system	1
1.2	Safety precautions when working in the vicinity of high-voltage components	2
1.3	Safety precautions when working on the fuel system	2
1.4	Safety precautions when working on vehicles with start/stop system	3
1.5	Safety precautions when using testers and measuring instruments during a road test	3
1.6	Safety precautions when working on the SCR system	3
2	<b>Repair instructions</b>	<b>5</b>
2.1	Rules for cleanliness	5
2.2	Test conditions	5
2.3	Contact corrosion	6
2.4	Routing and attachment of pipes, hoses and wiring	6
2.5	Identification plates	6
2.6	Use of impact wrenches	6
2.7	Nuts, bolts	7
2.8	Checking fuel system for leaks	8
<b>20</b>	<b>Fuel supply system</b>	<b>9</b>
1	<b>Safety information</b>	<b>9</b>
2	<b>Fuel tank</b>	<b>10</b>
2.1	Assembly overview - fuel tank	10
2.2	Draining fuel tank	15
2.3	Removing and installing fuel tank	19
2.4	Removing and installing misfuelling prevention device	25
2.5	Deactivating misfuelling prevention device	29
3	<b>Fuel delivery unit/fuel gauge senders</b>	<b>30</b>
3.1	Assembly overview - fuel delivery unit/fuel gauge senders	30
3.2	Removing and installing fuel delivery unit	32
3.3	Removing and installing fuel gauge sender G	38
4	<b>Plug-in connectors</b>	<b>40</b>
4.1	Disconnecting plug-in connectors	40
5	<b>Fuel filter</b>	<b>44</b>
5.1	Assembly overview - fuel filter	44
5.2	Removing and installing fuel filter	45
5.3	Removing and installing water level sender G120	47
6	<b>Accelerator mechanism</b>	<b>48</b>
6.1	Assembly overview - accelerator pedal module	48
6.2	Removing and installing accelerator pedal module GX2	50
7	<b>Fuel pump</b>	<b>54</b>
7.1	Checking fuel system pressurisation pump G6	54
7.2	Removing and installing suction-jet pump	60
7.3	Removing and installing fuel pump control unit J538	61