

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	Engine number	1
1.3	Vehicle identification number	2
1.4	Vehicle data sticker	3
2	Preparations	4
2.1	Vehicle: raising	4
2.2	Engine cover panel: removing and installing	5
2.3	Noise insulation: removing and installing	5
2.4	Window regulators: activating automatic open/close function	9
2.5	Vehicle diagnostic tester: connecting	9
3	Maintenance	12
3.1	Event memory: reading out	15
3.2	Service interval display: resetting service event	15
3.3	Transport mode: deactivating	15
3.4	Transport mode (engine): deactivating	16
3.5	Transport mode: checking activation and activating if necessary	17
3.6	Rollover bars: checking function with convertible roof open	17
3.7	Battery: reading out status	18
3.8	Connecting vehicle diagnostic tester and sending diagnostic log	18
3.9	Battery: checking electrolyte level	19
3.10	Battery: connecting stationary battery charging unit (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	20
3.11	Battery: determining and recording state of charge (SOC)	22
3.12	Mirror hanger indicating defective battery: renewing battery on affected vehicles	24
3.13	Brake fluid: changing	25
3.14	Brake fluid (vehicles older than 12 months): changing	30
3.15	Brake fluid: checking fluid level	30
3.16	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	30
3.17	Brake pads: checking thickness	31
3.18	Brake discs: checking for surface rust and operating brakes to clean if necessary	32
3.19	Parking brake: releasing	33
3.20	Tyres: checking condition and wear pattern, and checking and recording tread depth	33
3.21	Tyres: checking tyre pressures and adjusting if necessary	34
3.22	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	35
3.23	Tyre Pressure Loss Indicator: storing changed tyre pressures	35
3.24	Tyre repair kit: checking that set is complete, and checking and recording expiry date	36
3.25	Wheel bolts: tightening to specified torque	37
3.26	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	37
3.27	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	38
3.28	Engine, gearbox, final drive and steering: checking for leaks and damage	41
3.29	Vehicle (from below): checking for damage	42
3.30	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	42
3.31	Front lid hinges: lubricating	42
3.32	Rear spoiler hinges: lubricating	43
3.33	Front lid arrester hook: lubricating	43
3.34	Front lid locks: lubricating	44
3.35	Door hinges with arresters and locking cylinders: lubricating	44
3.36	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	46

3.37	Wiper blades: checking for damage	46
3.38	Headlight washer system: checking operation	47
3.39	Headlights: checking for correct adjustment	47
3.40	Headlights and reversing lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	49
3.41	Luggage compartment lighting: checking operation	50
3.42	Luggage compartment: removing protective film and felt pieces	50
3.43	Glove box light, interior lighting and reading light: checking operation	50
3.44	Horn: checking operation	50
3.45	Passenger airbag: checking key switch on/off and setting to "on"	51
3.46	Owner's literature: checking that all documents are present	51
3.47	Service Schedule: affixing vehicle data sticker	51
3.48	Service Schedule: entering Delivery Inspection	51
3.49	Seat belts: checking that retaining rivets are fitted, and checking locking action of automatic belt retractor	52
3.50	Vehicle interior: removing protective covers for seats and carpet	52
3.51	Vehicle interior: checking that it is clean and cleaning if necessary	52
3.52	Vehicle interior: removing any objects other than those protecting interior surfaces	52
3.53	Vehicle interior and exterior: checking for and documenting any damage	52
3.54	Instrument cluster: checking warning lamps	53
3.55	Warning triangle: checking availability	53
3.56	First-aid kit: checking and recording expiry date	53
3.57	Vehicle keys: checking operation and recording number of keys given to customer	53
3.58	Vehicle key: removing from ignition lock	54
3.59	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	54
3.60	Sun visors: checking that they are folded up and folding up if necessary	54
3.61	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	54
3.62	Engine oil: draining	54
3.63	Engine oil: renewing oil filter	59
3.64	Engine oil: filling up	61
3.65	Engine oil: checking oil level and correcting if necessary	62
3.66	Spark plugs: renewing	64
3.67	Hydraulic system: checking fluid level	69
3.68	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	70
3.69	Air cleaner: renewing filter element and cleaning housing	73
3.70	Dust and pollen filter: renewing	77
3.71	Fuel filter: renewing	78
3.72	Fuel tank: adding fuel additive	78
3.73	Vehicle doors: removing edge protection	79
3.74	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	79
3.75	Vehicle exterior: removing protective film	79
3.76	Vehicle cover: checking position and correcting if necessary	79
3.77	Vehicle cover: removing according to manufacturer's instructions	80
3.78	Paintwork, trims, side windows and wiper blades: checking cleanliness	80
3.79	Body: checking vehicle paintwork for damage and corrosion from below and with front lid, rear lid and doors open	80
3.80	Vehicles parked outdoors: locking	80
3.81	Road test	80
3.82	Stock vehicles: observing measures specified in Maintenance table for stock vehicles (see "Before handing vehicle over to customer")	81
3.83	Accessories: installing	81
3.84	Checklist "Documentation of cleaning and care routine": checking that list is present	81
3.85	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	82
3.86	Cleaning and care: checking that required measures have been carried out on time	82

3.87	Stock vehicle care management: deciding and recording date of next check	82
3.88	Display instruments: setting time and date	82
3.89	Manual gearbox/automatic gearbox: selecting 1st gear/park	82
3.90	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter	82
3.91	Interior mirror: calibrating compass	82
3.92	Poly V-belts for ancillaries: renewing	83
3.93	Instrument cluster: resetting driver information system	83
4	Exhaust emissions test	84
4.1	Petrol engines: performing exhaust emissions test	84