



Contents

00 - Technical data	1
1 Identification	1
1.1 PR number and type of brake system	1
2 Safety precautions	2
2.1 Safety precautions when working on vehicles with start/stop system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	2
3 Repair notes	3
3.1 Rules for cleanliness	3
3.2 General repair instructions	3
3.3 Contact corrosion	3
4 Brake test	4
4.1 General notes	4
4.2 Testing vehicles with four-wheel drive	4
4.3 Visible features of ceramic brake discs	5
4.4 Superficial cracks in cooling channel lands	7
4.5 Cracks in area of bolted connection on ceramic brake discs	7
4.6 Edge fractures	8
4.7 Chipping on ceramic brake discs	8
4.8 Cracks extending into cooling channels	9
4.9 Assessing degree of wear on ceramic brake discs	9
4.10 Wear assessment of ceramic brake disc with tester VAS 6813	16
5 Technical data	23
5.1 Technical data for brakes	23
45 - Anti-lock brake system	25
1 General notes	25
1.1 Notes for repair work on the ABS	25
2 Overview of fitting locations	26
2.1 Overview of fitting locations - ABS/ESP	26
3 Control unit and hydraulic unit	28
3.1 Exploded view - control unit and hydraulic unit	28
3.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55	29
4 Sensors	35
4.1 Exploded view - front wheel speed sensor	35
4.2 Exploded view - rear wheel speed sensor	36
4.3 Removing and installing brake light switch	36
4.4 Removing and installing parking brake contact switch	38
4.5 Removing and installing ESP sensor unit G419	38
4.6 Removing and installing front wheel speed sensor G45 / G47	39
4.7 Removing and installing rear wheel speed sensor G44 / G46	40
46 - Brakes - mechanism	41
1 Front brakes	41
1.1 Exploded view - front brakes	41
1.2 Removing and installing brake pads	45
1.3 Removing and installing brake caliper	55
1.4 Renewing brake caliper	60
1.5 Removing and installing brake disc	68
1.6 Removing and installing splash plate	70
1.7 Removing and installing brake pad wear sender	71
2 Rear brakes	74
2.1 Exploded view - rear brakes	74



2.2	Removing and installing brake pads	76
2.3	Removing and installing brake caliper	81
2.4	Renewing brake caliper	83
2.5	Removing and installing brake disc	87
2.6	Removing and installing splash plate	88
2.7	Removing and installing brake pad wear sender	89
3	Parking brake	91
3.1	Exploded view - parking brake	91
3.2	Exploded view - brake cable	93
3.3	Exploded view - brake caliper	94
3.4	Removing and installing brake pads	95
3.5	Removing and installing brake caliper	98
3.6	Removing and installing parking brake lever	101
3.7	Removing and installing brake cable (rear)	102
3.8	Adjusting parking brake	105
3.9	Removing and installing brake caliper piston	106
4	Brake pedal	108
4.1	Exploded view - brake pedal	108
4.2	Removing and installing mounting bracket for brake pedal	109
4.3	Removing and installing mounting bracket for pedal cluster	110
4.4	Separating brake pedal from brake servo	112
4.5	Connecting brake pedal to brake servo	113
4.6	Removing and installing brake pedal	113
47 - Brakes - hydraulics		114
1	Front brake caliper	114
1.1	Exploded view - front brake caliper	114
1.2	Removing and installing brake caliper piston	115
2	Rear brake caliper	119
2.1	Exploded view - rear brake caliper	119
2.2	Removing and installing brake caliper piston	119
3	Brake servo / brake master cylinder	123
3.1	Exploded view - brake servo / brake master cylinder	123
3.2	Removing and installing brake servo	124
3.3	Removing and installing brake master cylinder	124
3.4	Removing and installing brake fluid reservoir	126
4	Vacuum system	130
4.1	Exploded view - electric vacuum pump	130
4.2	Checking non-return valve	131
4.3	Removing and installing vacuum line	131
4.4	Removing and installing brake servo pressure sensor	133
4.5	Removing and installing electric vacuum pump	134
5	Brake lines	136
5.1	Routing of brake lines	136
6	Hydraulic system	137
6.1	General notes on brake fluid	137
6.2	Pre-bleeding hydraulic system	138
6.3	Bleeding hydraulic system	139
6.4	Leak test	143