

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when handling gas discharge bulbs	2
2 Repair notes	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and securing wiring	5
3 Battery	6
3.1 Battery - general notes	6
3.2 Battery types	6
27 - Starter, current supply, CCS	7
1 Battery	7
1.1 Exploded view - battery	7
1.2 Disconnecting and connecting battery	8
1.3 Removing and installing earth cable with battery monitor control unit J367	9
1.4 Removing and installing battery	10
1.5 Checking battery	13
1.6 Charging battery	14
1.7 Removing and installing battery isolation igniter N253	16
2 R8 GT race package	17
2.1 Exploded view - R8 GT race package	17
2.2 Removing and installing battery isolation unit 2 F500	19
2.3 Removing and installing emergency "OFF" switch 2 E769	19
2.4 Removing and installing emergency "OFF" switch 1 E768	20
2.5 Removing and installing warning lamp for emergency "OFF" switch K281	21
3 Alternator	22
3.1 Exploded view - alternator	22
3.2 Removing and installing alternator	23
3.3 Checking alternator	27
4 Starter	28
4.1 Exploded view - starter	28
4.2 Removing and installing starter	30
90 - Gauges, instruments	33
1 Dash panel insert	33
1.1 Exploded view - instrument cluster and radio-controlled clock receiver	33
1.2 Removing and installing instrument cluster	34
1.3 Pin assignment at multi-pin connectors on instrument cluster	35
1.4 Pin assignment on fuel gauge senders	36
1.5 Pin assignment at coolant temperature sender G62	36
1.6 Removing and installing ambient temperature sensor G17	37
1.7 Removing and installing radio-controlled clock receiver J489	38
2 Cigarette lighter, 12 V electric socket	39
2.1 Exploded view - cigarette lighter, 12 V electric socket	39
2.2 Removing and installing cigarette lighter illumination bulb L28	40
2.3 Removing and installing cigarette lighter U1	40
2.4 Removing and installing 12 V socket U5	42



2.5	Renewing 12 V socket U5	42
2.6	Removing and installing 12 V socket 2 U18	43
2.7	Renewing 12 V socket 2 U18	44
3	Horns	47
3.1	Exploded view - horns	47
3.2	Removing and installing horns	48
4	Data bus diagnostic interface	49
4.1	Exploded view - data bus diagnostic interface	49
4.2	Data bus diagnostic interface J533	49
4.3	Removing and installing data bus diagnostic interface J533	50
4.4	Pin assignment of multi-pin connector on data bus diagnostic interface J533	51
92	- Windscreen wash/wipe system	52
1	Windscreen wiper system	52
1.1	Exploded view - windscreen wiper system	52
1.2	Moving windscreen wipers to service position	53
1.3	Renewing wiper blade	54
1.4	Removing and installing wiper arms	54
1.5	Adjusting wiper arms	55
1.6	Removing and installing wiper motor	56
1.7	Renewing wiper motor with wiper motor control unit J400 or front passenger side wiper motor control unit J584	58
1.8	Removing and installing rain and light sensor	58
2	Windscreen washer system	62
2.1	Overview - washer fluid reservoir and washer fluid hoses	62
2.2	Removing and installing washer fluid reservoir	63
2.3	Removing and installing washer jets	64
2.4	Adjusting washer jets	64
3	Headlight washer system	65
3.1	Exploded view - headlight washer system	65
3.2	Removing and installing headlight washer jets	65
3.3	Adjusting washer jets	67
3.4	Removing and installing washer fluid reservoir	67
4	Washer fluid hoses	68
4.1	Repairing washer fluid hoses	68
94	- Lights, bulbs, switches - exterior	69
1	Headlights	69
1.1	Exploded view - headlights	69
1.2	Removing and installing headlights	78
1.3	Renewing gas discharge bulb L13 / L14	79
1.4	Renewing daytime running light bulb L174 / L175 and side light bulb M1 / M3	80
1.5	Removing and installing dip beam screen motor V294 / V295	80
1.6	Renewing front turn signal bulb M5 / M7	81
1.7	Removing and installing gas discharge bulb control unit J343 / J344	81
1.8	Removing and installing LED module for daytime running light and side light L176 / L177	82
1.9	Removing and installing output module for headlight	84
1.10	Removing and installing headlight fan V407 / V408	87
1.11	Installing repair kit for headlight housing	89
1.12	Adapting headlights for driving on the left or right side of the road	89
2	Adjusting headlights	90
2.1	Adjusting headlights	90
2.2	Adjusting gas discharge headlights - rest-of-the-world vehicles	90
2.3	Adjusting LED headlights - rest-of-the-world vehicles	92

2.4	Adjusting gas discharge headlights - USA vehicles	97
2.5	Adjusting LED headlights - USA vehicles	99
3	Lights in exterior mirror	104
3.1	Exploded view - lights in exterior mirror	104
3.2	Removing and installing exterior mirror turn signal bulb L131 / L132	106
4	Tail light cluster	109
4.1	Exploded view - tail light cluster on body	109
4.2	Removing and installing tail light cluster	111
4.3	Aligning tail light cluster with body contour	112
4.4	Removing and installing bulb carrier	113
5	Exterior lights (rear)	114
5.1	Exploded view - rear fog light, high-level brake light and number plate light	114
5.2	Removing and installing rear fog light	115
5.3	Removing and installing bulb holder for rear fog light	116
5.4	Removing and installing high-level brake light	116
5.5	Removing and installing bulb carrier for number plate light	118
5.6	Removing and installing number plate light	119
6	Side marker light - USA vehicles	120
6.1	Removing and installing front side marker light	120
6.2	Removing and installing rear side marker light	121
7	Steering column switch module	122
7.1	Exploded view - steering column switch module	122
7.2	Removing and installing steering column electronics control unit J527	123
7.3	Pin assignment on steering column electronics control unit J527	124
7.4	Removing and installing return ring with slip ring	127
7.5	Removing and installing steering angle sender G85	128
7.6	Removing and installing turn signal switch E2 and cruise control system switch E45	128
7.7	Removing and installing intermittent wiper switch E22	129
8	Lock cylinder and ignition/starter switch with steering lock	130
8.1	Removing and installing lock cylinder	130
8.2	Removing and installing ignition/starter switch D	131
8.3	Pin assignment on ignition/starter switch	132
8.4	Removing and installing steering lock housing	132
8.5	Removing and installing adapter wiring harness for steering lock housing	134
9	Parking aid	135
9.1	Overview - parking aid	135
9.2	Removing and installing parking aid control unit J446	137
9.3	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	138
9.4	Removing and installing rear parking aid warning buzzer H15	138
9.5	Removing and installing front parking aid senders	139
9.6	Removing and installing rear parking aid senders	140
96	Lights, bulbs, switches - interior	141
1	Lights and switches in dash panel	141
1.1	Overview - lights and switches in dash panel	141
1.2	Removing and installing central locking SAFELOCK function warning lamp K133	143
1.3	Removing and installing light switch E1	143
1.4	Removing and installing switch and instrument illumination regulator E20 , deactivation switch for surround lighting E491 and/or daytime running lights switch E579	144
1.5	Removing and installing front heated seat regulator E94 / E95	144
1.6	Removing and installing glove compartment light W6	144
1.7	Removing and installing glove compartment light switch E26	145
1.8	Removing and installing footwell light W9 / W10	146
2	Lights and switches in front doors	147
2.1	Overview - lights and switches in front doors	147

2.2	Removing and installing mirror adjustment switch E43 or adjustment switch for mirror with fold-in feature E168	148
2.3	Removing and installing operating unit for window regulator in driver door E512 / window regulator switch in front passenger door E107	149
2.4	Removing and installing door contact switch F2 / F3	149
2.5	Removing and installing interior locking button for central locking system E308 / E309	150
2.6	Removing and installing rear lid remote release button E233 and fuel tank flap release button E319	150
2.7	Removing and installing front entry light W31 / W32	151
3	Lights and switches in luggage compartment, sill panel trim and engine compartment	153
3.1	Overview - lights and switches in luggage compartment, sill panel trim and engine compartment	153
3.2	Removing and installing luggage compartment light W3	154
3.3	Removing and installing light conductor for front sill panel moulding ambient lighting W67 / W68	154
3.4	Removing and installing engine compartment light W27	154
3.5	Removing and installing mounting for engine compartment light W27	155
4	Lights and switches in roof trim	157
4.1	Overview - lights and switches in roof trim	157
4.2	Removing and installing interior light/reading light (front)	157
4.3	Renewing interior light/reading light bulbs (front)	158
4.4	Renewing LED for interior light/reading light (front)	158
4.5	Removing and installing garage door operation control unit J530	159
4.6	Removing and installing garage door operating unit E284	160
5	Lights and switches in centre console	161
5.1	Overview - lights and switches in centre console	161
5.2	Removing and installing operating unit in front of centre console E461 with E127 , E226 , E229 , E256 , E387 and E266	163
5.3	Removing and installing sport program button E541	164
5.4	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - R8 Coupé	166
5.5	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - R8 Spyder	166
5.6	Removing and installing convertible roof actuation button E137 - R8 Spyder	167
5.7	Removing and installing button to open rear lid window E361 - R8 Spyder	167
5.8	Rear lid release switch E165	167
6	Immobiliser	168
7	Ultrasonic interior monitoring	169
7.1	Overview - ultrasonic interior monitoring	169
7.2	Removing and installing convenience system central control unit J393 - vehicles from model year 2010 onwards	170
7.3	Removing and installing anti-theft alarm sensor G578	170
7.4	Removing and installing interior monitoring deactivation switch E183 and alarm system off switch E217	170
7.5	Removing and installing alarm horn H12	171
97 - Wiring		172
1	Relay carriers, fuse carriers (front)	172
1.1	Overview - relay carriers and fuse carriers	172
1.2	Removing and installing connector point at central tube (right-side)	174
1.3	Removing and installing fuse holder (right A-pillar)	174
1.4	Removing and installing main fuse box (right A-pillar)	175
1.5	Removing and installing onboard supply control unit J519	176
1.6	Removing and installing front passenger's footwell bracket for relay and fuse holder	178
1.7	Removing and installing relay and fuse carrier (front passenger's footwell)	179
2	Relay carriers, fuse carriers (rear)	182
2.1	Overview - relay carriers and fuse carriers	182

2.2	Removing and installing connector point (rear right)	186
2.3	Removing and installing bracket for fuse holder (rear right)	187
2.4	Removing and installing relay and fuse carriers	190
2.5	Removing and installing relay and fuse holder (rear right) - R8 Spyder	191
3	Connectors	192
3.1	Unplugging door separating connector (left-side)	192
3.2	Unplugging door separating connector (right-side)	192
4	Wire repair kit	194
4.1	Installing wire repair kit for heat regulation valve unit and coolant circulation pump V50 ..	194
5	Repairing wiring harnesses and electrical connectors	196
6	Releasing and dismantling connector housings	197
7	Cleaning contact surfaces	198
8	Repairing aerial wires	199
9	Fibre optic cables	200
10	Vehicle diagnostic, testing and information systems	201