

Contents

00 - Technical data	1
1 Routing and attaching pipes/hoses and wiring	1
2 Contact corrosion	2
68 - Interior equipment	3
1 Shelves / trim panels	3
1.1 Exploded view of shelves / trim panels	3
1.2 Exploded view of dash panel cover (driver side)	5
1.3 Removing and installing dash panel cover (driver side)	5
1.4 Removing and installing footwell trim (driver side)	6
1.5 Exploded view of trim for steering column switch	6
1.6 Removing and installing trim cover for instrument cluster	7
1.7 Removing and installing upper trim for steering column switch	8
1.8 Removing and installing trim (bottom) for steering column switch	9
1.9 Exploded view of glove box	9
1.10 Removing and installing glove box opening mechanism with lock	11
1.11 Removing and installing dash panel cover (passenger side)	12
1.12 Removing and installing trim for glove box	13
1.13 Removing and installing glove box - vehicles without knee airbag	14
1.14 Removing and installing glove box - vehicles with knee airbag	16
1.15 Removing and installing glove box lid	18
1.16 Removing and installing cushioning element for glove box lid	18
2 Centre console	19
2.1 Exploded view of centre console	19
2.2 Removing and installing cover for selector mechanism	24
2.3 Removing and installing centre console trim	24
2.4 Removing and installing handbrake lever trim	25
2.5 Removing and installing ashtray - R8 Coupé	26
2.6 Removing and installing trim for ashtray lid - R8 Coupé	26
2.7 Removing and installing ashtray - R8 Spyder	26
2.8 Removing and installing retaining frame for buttons - R8 Spyder	27
2.9 Removing and installing trim for buttons - R8 Spyder	27
2.10 Removing and installing cover for centre console	27
2.11 Removing and installing storage compartment for centre console	28
2.12 Removing and installing flap for storage compartment	29
2.13 Removing and installing centre console (rear)	29
2.14 Removing and installing side trim (left-side) for centre console	30
2.15 Removing and installing side trim (right-side) for centre console	30
2.16 Removing and installing centre console (front)	31
2.17 Removing and installing brackets for centre console	32
3 Handbrake trim	33
3.1 Exploded view of handbrake trim	33
3.2 Removing and installing trim for handbrake grip	34
3.3 Removing and installing handbrake trim (left and right)	34
4 Interior mirror	35
4.1 Exploded view of interior mirror	35
4.2 Removing and installing interior mirror	36
4.3 Safety regulations for interior mirror	36
4.4 General notes on interior mirror	37
4.5 Switching automatic anti-dazzle function on and off	37
4.6 Switching compass display on and off	37
4.7 Setting magnetic deflection zone	37

4.8	Calibrating digital compass	38
4.9	Adjusting automatic anti-dazzle interior mirror Y7 for right-hand drive or left-hand drive vehicles	39
4.10	Selecting the applicable deflection zone from the map	39
4.11	Checking operation of automatic anti-dazzle interior mirror	45
69 - Passenger protection	47
1	Safety regulations and test methods for pyrotechnic, electrical and mechanical components of the restraint system	47
1.1	General safety regulations	47
1.2	Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components)	49
1.3	Additional safety regulations for side airbags	50
1.4	Additional safety regulations for curtain airbags	50
1.5	Safety regulations for crash sensors (pressure sensors) for side airbag (front)	51
1.6	Additional safety regulations for working on seat occupied sensor controlling deactivation of passenger airbag - country-specific version	51
1.7	Procedure for dealing with seat occupied sensor controlling deactivation of passenger airbag following an accident - country-specific version	52
1.8	Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	52
1.9	Checking airbag mounting components following an accident	54
1.10	Accident in which no airbag was triggered	55
1.11	Checking seat belts	55
1.12	Checking belt	55
1.13	Checking automatic belt retractor (locking action)	56
1.14	Visual inspection of belt buckle	57
1.15	Functional check of belt buckle	57
1.16	Checking guide fittings and latch plate	57
1.17	Checking securing components and anchorage points	57
1.18	Checking child seat restraint function for additional child seats (not for driver's seat belt) - country-specific version	58
1.19	Checking child seat anchors following an accident (ISOFIX, Top Tether)	58
1.20	Additional safety precautions for Automatic Rollover Support System	58
2	Three-point seat belts - R8 Coupé	60
2.1	Overview of seat belts and anchorage points	60
2.2	Exploded view of three-point seat belt	62
2.3	Removing and installing three-point seat belt with belt tensioner	62
2.4	Removing and installing belt end fitting	64
2.5	Removing and installing belt guide fitting	66
2.6	Exploded view of belt buckle on seat with electrical or manual adjustment	66
2.7	Removing and installing belt buckle on seat with electrical or manual adjustment	68
2.8	Exploded view of belt buckle on bucket seat	68
2.9	Removing and installing belt buckle on bucket seat	70
2.10	Exploded view of belt buckle on race bucket seat - R8 GT	70
2.11	Removing and installing belt buckle on race bucket seat - R8 GT	72
3	Four-point seat belt - R8 GT with race package	73
3.1	Exploded view - four-point seat belt	73
3.2	Removing and installing shoulder belt	75
3.3	Installing and aligning belt retaining ring for shoulder belt	75
3.4	Aligning shoulder belt with seat position	76
3.5	Removing and installing outer lap belt	76
3.6	Removing and installing inner lap belt with belt buckle	76
3.7	Removing and installing belt buckle	77
4	Three-point seat belts - R8 Spyder	78
4.1	Overview of seat belts and anchorage points	78
4.2	Exploded view of three-point seat belt	80

4.3	Removing and installing three-point seat belt with belt tensioner	81
4.4	Removing and installing belt end fitting	83
4.5	Removing and installing mounting bracket for three-point seat belt	84
4.6	Removing and installing belt guide fitting	85
4.7	Removing and installing mounting bracket for belt guide fitting	85
4.8	Exploded view of belt buckle on seat with electrical or manual adjustment	86
4.9	Removing and installing belt buckle on seat with electrical or manual adjustment	86
4.10	Exploded view of belt buckle on bucket seat	86
4.11	Removing and installing belt buckle on bucket seat	86
5	Belt-fastened recognition system	87
5.1	Removing and installing driver side belt switch E24	87
5.2	Removing and installing seat occupied sensor (front passenger side) G128	87
6	ISOFIX child seat anchors	89
6.1	Exploded view of ISOFIX child seat anchors	89
6.2	Removing and installing ISOFIX child seat anchor	90
7	Airbag	92
7.1	Overview of fitting locations - R8 Coupé	92
7.2	Overview of fitting locations - R8 Spyder	94
7.3	Exploded view of airbag control unit J234	95
7.4	Removing and installing airbag control unit J234	96
7.5	Exploded view of battery isolation igniter N253	97
7.6	Removing and installing battery isolation igniter N253	98
8	Airbag (driver side)	101
8.1	Exploded view of airbag unit (driver side)	101
8.2	Removing and installing airbag unit with driver side airbag igniter N95 and driver side airbag igniter 2 N250	102
8.3	Renewing connector at airbag unit	104
9	Airbag (passenger side)	106
9.1	Exploded view of airbag unit (passenger side)	106
9.2	Removing and installing airbag unit (passenger side) with front passenger side airbag igniter N131 and front passenger side airbag igniter 2 N132	107
9.3	Removing and installing brackets for airbag unit (passenger side)	109
9.4	Removing and installing key operated switch to deactivate front passenger side airbag E224	109
9.5	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - R8 Coupé	111
9.6	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - R8 Spyder	111
10	Knee airbag - country-specific version	112
10.1	Exploded view of knee airbag (driver side)	112
10.2	Removing and installing knee airbag (driver side) with driver side knee airbag igniter N295	113
10.3	Removing and installing bracket for knee airbag (driver side)	115
10.4	Exploded view of knee airbag (passenger side)	115
10.5	Removing and installing knee airbag (passenger side) with front passenger side knee airbag igniter N296	116
11	Side airbag	118
11.1	Exploded view of side airbag	118
11.2	Removing and installing side airbag with side airbag igniter on driver side N199 or side airbag igniter on front passenger side N200	119
12	Crash sensors for airbags	121
12.1	Overview of crash sensors for airbags - R8 Coupé	121
12.2	Overview of crash sensors for airbags - R8 Spyder	122
12.3	Removing and installing crash sensor for front airbag	122
12.4	Removing and installing crash sensor for side airbag	125

13	Seat occupied recognition controlling deactivation of passenger's airbag - country-specific version	128
13.1	Exploded view of seat occupied recognition controlling deactivation of passenger's airbag - country-specific version	128
13.2	Removing and installing seat occupied recognition system - country-specific version	129
14	Rollover cage - R8 GT with race package	133
14.1	Exploded view of rollover cage	133
14.2	Removing and installing rollover cage	133
15	Automatic Rollover Support System - R8 Spyder	135
15.1	Exploded view of cross piece connecting rollover bar	135
15.2	Removing and installing cover (front) for control units	136
15.3	Removing and installing cover (top) for control units	136
15.4	Removing and installing cross piece connecting rollover bar	136
15.5	Exploded view of rollover bar	138
15.6	Removing and installing rollover bar	140
15.7	Removing and installing guide for rollover bar	141
15.8	Retracting extended rollover bars	143
16	Fire extinguisher	144
16.1	Exploded view of fire extinguisher	144
16.2	Removing and installing mounting for fire extinguisher	144
70 - Trim, insulation		146
1	Door trim	146
1.1	Exploded view of door trim	146
1.2	Removing and installing bass loudspeaker trim	149
1.3	Removing and installing cover for door puller	150
1.4	Removing, installing and adjusting door puller (driver side)	151
1.5	Removing and installing door puller (passenger side)	153
1.6	Removing and installing trim panel	153
1.7	Removing and installing retainer for trim panel	154
1.8	Removing and installing switch mounting for window regulator and mirror adjustment switches	154
1.9	Removing and installing door trim	155
1.10	Removing and installing interior door handle	158
1.11	Removing and installing mid-range loudspeaker trim	158
2	Dash panel	159
2.1	Overview of dash panel	159
2.2	Exploded view of dash panel	161
2.3	Removing and installing dash panel cover (side)	164
2.4	Removing and installing dash panel vent (left-side)	165
2.5	Removing and installing dash panel vent (right-side)	165
2.6	Removing and installing mounting frame for centre dash panel vent	166
2.7	Removing and installing dash panel vent (centre)	167
2.8	Removing and installing centre loudspeaker trim	167
2.9	Removing and installing trim cover for centre console	168
2.10	Removing and installing mounting frame for radio/navigation system	168
2.11	Removing and installing dash panel	169
2.12	Removing and installing cover for instrument cluster	172
2.13	Removing and installing top centre defroster vent	173
2.14	Removing and installing dash panel cover	174
2.15	Removing and installing frame for instrument cluster	174
2.16	Removing and installing instrument cluster trim	175
3	Central tube	176
3.1	Exploded view of central tube	176
3.2	Removing and installing central tube	178

3.3	Removing and installing retaining brackets for central tube	180
3.4	Exploded view of impact damper - country-specific version	180
3.5	Removing and installing connecting plate - country-specific version	182
3.6	Removing and installing impact damper (left-side) on driver side - country-specific version	182
3.7	Removing and installing impact damper (right-side) on driver side - country-specific version	183
3.8	Removing and installing impact damper on passenger side - country-specific version	183
4	Luggage compartment trim	184
4.1	Exploded view of luggage compartment trim panels	184
4.2	Exploded view of luggage compartment pan	185
4.3	Removing and installing luggage compartment pan	186
5	Passenger compartment trim panels - R8 Coupé	189
5.1	Exploded view of passenger compartment trim panels	190
5.2	Exploded view of A-pillar trim (top)	191
5.3	Removing and installing A-pillar trim (top)	191
5.4	Exploded view of A-pillar trim (bottom)	192
5.5	Removing and installing operating lever for cable	193
5.6	Removing and installing A-pillar trim (bottom)	194
5.7	Exploded view of foot rest (driver side)	195
5.8	Removing and installing foot rest cover (driver side)	196
5.9	Removing and installing bracket for foot rest (driver side)	197
5.10	Exploded view of foot rest (passenger side)	197
5.11	Removing and installing foot rest (passenger side)	198
5.12	Removing and installing bracket for foot rest (passenger side)	198
5.13	Exploded view of sill panel trim	199
5.14	Removing and installing sill panel trim	199
5.15	Exploded view of C-pillar trim	200
5.16	Removing and installing C-pillar trim	201
5.17	Exploded view of rear shelf	203
5.18	Removing and installing ball stud for luggage net	206
5.19	Removing and installing bracket for luggage net	206
5.20	Removing and installing rear shelf	206
5.21	Removing and installing frame for CD player	207
5.22	Exploded view of back panel end trim	208
5.23	Removing and installing back panel end trim	209
5.24	Exploded view of back panel trim	210
5.25	Removing and installing back panel trim	211
5.26	Exploded view of side trim	212
5.27	Removing and installing loudspeaker trim	213
5.28	Removing and installing side trim	213
5.29	Removing and installing belt exit point trim	215
5.30	Removing and installing mounting for rear lid release switch	215
5.31	Exploded view of floor covering	215
5.32	Removing and installing cap	216
5.33	Removing and installing floor covering	217
6	Passenger compartment trim panels - R8 Spyder	220
6.1	Exploded view of passenger compartment trim panels	221
6.2	Exploded view of A-pillar trim (top)	222
6.3	Removing and installing A-pillar trim (top)	222
6.4	Removing and installing loudspeaker trim	223
6.5	Exploded view of A-pillar trim (bottom)	225
6.6	Removing and installing operating lever for cable	225
6.7	Removing and installing A-pillar trim (bottom)	225
6.8	Exploded view of foot rest (driver side)	225
6.9	Removing and installing foot rest cover (driver side)	225

6.10	Removing and installing bracket for foot rest (driver side)	225
6.11	Exploded view of foot rest (passenger side)	225
6.12	Removing and installing foot rest (passenger side)	225
6.13	Removing and installing bracket for foot rest (passenger side)	225
6.14	Exploded view of sill panel trim	225
6.15	Removing and installing sill panel trim	225
6.16	Exploded view of back panel trim	225
6.17	Removing and installing back panel trim	226
6.18	Exploded view of B-pillar trim	227
6.19	Removing and installing mounting for rear lid release switch	228
6.20	Removing and installing B-pillar trim	228
6.21	Exploded view of storage compartment (rear)	229
6.22	Removing and installing cover	230
6.23	Removing and installing storage compartment (rear)	231
6.24	Removing and installing bracket for storage compartment	232
6.25	Exploded view of cover for convertible roof frame	232
6.26	Removing and installing cover for convertible roof frame	233
6.27	Exploded view of back panel end trim	233
6.28	Removing and installing mid-range loudspeaker trim	235
6.29	Removing and installing back panel end trim	235
6.30	Removing and installing belt exit point trim	237
6.31	Exploded view of floor covering	238
6.32	Removing and installing cap	238
6.33	Removing and installing floor covering	238
7	Roof trim panels - R8 Coupé	239
7.1	Overview of roof trim panels	239
7.2	Exploded view of sun visor	240
7.3	Removing and installing sun visor	240
7.4	Exploded view of moulded headliner	241
7.5	Removing and installing moulded headliner	242
7.6	Removing and installing retainer for moulded headliner	244
7.7	Removing and installing roof reinforcement	244
8	Roof trim panels - R8 Spyder	246
8.1	Overview of roof trim	246
8.2	Exploded view of sun visor	247
8.3	Removing and installing sun visor	247
8.4	Exploded view of roof frame trim	248
8.5	Removing and installing roof frame trim	249
9	Windbreak - R8 Spyder	250
9.1	Exploded view of windbreak	250
9.2	Removing and installing mounting for windbreak	250
9.3	Removing and installing guide for windbreak	251
9.4	Exploded view of mounting base for windbreak	251
9.5	Removing and installing mounting base for windbreak	252
72 - Seat frames	256	
1	Overview of seats	256
1.1	Attaching seat to seat repair stand VAS 6136	257
2	Seats (with manual adjustment)	259
2.1	Exploded view of seat	260
2.2	Removing and installing seat	261
2.3	Unplugging and plugging in connectors	263
2.4	Connecting airbag adapter	264
2.5	Connectors in connector point	264
2.6	Removing and installing cover for seat rail	264

2.7	Exploded view of trim (sill side and tunnel side)	264
2.8	Removing and installing backrest adjuster	265
2.9	Removing and installing trim (sill side)	266
2.10	Exploded view of lumbar support adjustment switch	268
2.11	Removing and installing lumbar support adjustment switch	269
2.12	Removing and installing trim (tunnel side)	270
2.13	Exploded view of retaining bracket for trim (sill side)	270
2.14	Removing and installing retaining bracket for trim (sill side)	271
2.15	Exploded view of seat height adjustment unit and seat height adjuster	272
2.16	Removing and installing seat height adjuster	273
2.17	Removing and installing seat height adjustment unit	274
2.18	Removing and installing seat longitudinal adjustment handle	276
2.19	Exploded view of backrest	276
2.20	Removing and installing backrest	278
2.21	Exploded view of backrest cover panel	282
2.22	Removing and installing backrest cover panel	282
2.23	Exploded view of spring mat	282
2.24	Removing and installing spring mat	282
2.25	Exploded view of four-way lumbar support	285
2.26	Removing and installing four-way lumbar support	285
2.27	Exploded view of Easy Entry system	285
2.28	Removing and installing trim with Easy Entry handle	285
2.29	Removing and installing retainer for Easy Entry system	285
2.30	Removing and installing Bowden cable (left and right)	285
2.31	Adjusting Bowden cables for Easy Entry system	286
2.32	Exploded view of head restraint	286
2.33	Removing and installing head restraint with slide-in locking mechanism	286
2.34	Removing and installing head restraint guide without and with release button	286
2.35	Exploded view of seat pan	286
2.36	Renewing seat pan	287
2.37	Exploded view of drawer with retainer	288
2.38	Removing and installing drawer with retainer	288
3	Seats (with electric adjustment)	290
3.1	Exploded view of seat	291
3.2	Removing and installing seat	294
3.3	Removing seat if seat longitudinal adjustment motor V288 is defective	298
3.4	Unplugging and plugging in connectors	299
3.5	Connecting airbag adapter	301
3.6	Connector point connectors	304
3.7	Removing and installing spindle cover	304
3.8	Removing and installing cover for seat rail	305
3.9	Exploded view of trim (sill side and tunnel side)	306
3.10	Removing and installing trim (sill side)	307
3.11	Removing and installing trim (tunnel side)	309
3.12	Exploded view of retaining bracket for trim (sill side)	310
3.13	Removing and installing retaining bracket for trim (sill side)	310
3.14	Exploded view of seat and backrest adjustment actuators	310
3.15	Removing and installing seat adjustment actuator	311
3.16	Removing and installing backrest adjustment actuator	312
3.17	Exploded view of backrest	313
3.18	Removing and installing backrest	314
3.19	Exploded view of backrest cover panel	317
3.20	Removing and installing backrest cover panel	318
3.21	Exploded view of four-way lumbar support	321
3.22	Removing and installing four-way lumbar support	323
3.23	Exploded view of Easy Entry system	325

3.24	Removing and installing trim with Easy Entry handle	327
3.25	Removing and installing retainer for Easy Entry system	328
3.26	Removing and installing Bowden cable (left and right)	328
3.27	Adjusting Bowden cables for Easy Entry system	331
3.28	Exploded view of head restraint	333
3.29	Removing and installing head restraints with slide-in locking mechanism	334
3.30	Removing and installing head restraint guides without and with release button	334
3.31	Exploded view of seat pan	336
3.32	Dismantling and assembling seat pan	338
3.33	Exploded view of drawer	340
3.34	Removing and installing drawer with retainer	341
3.35	Exploded view of seat rake adjustment motor	342
3.36	Removing and installing seat rake adjustment motor	343
3.37	Exploded view of seat longitudinal adjustment motor V288	344
3.38	Removing and installing seat longitudinal adjustment motor V288	345
3.39	Exploded view of backrest adjustment motor	346
3.40	Removing and installing backrest adjustment motor	347
3.41	Exploded view of backrest limit switch	349
3.42	Removing and installing backrest limit switch	350
3.43	Exploded view of lumbar support longitudinal and height adjustment motors	351
3.44	Removing and installing lumbar support longitudinal adjustment motor	352
3.45	Removing and installing lumbar support height adjustment motor	354
3.46	Exploded view of seat height adjustment motor	356
3.47	Removing and installing seat height adjustment motor	357
3.48	Removing and installing toothed segment for seat height adjustment unit	359
3.49	Exploded view of lumbar support adjustment switch	360
3.50	Removing and installing lumbar support adjustment switch	361
3.51	Exploded view of seat adjustment operating unit and actuators	362
3.52	Removing and installing seat adjustment operating unit	363
4	Bucket seat	364
4.1	Exploded view of bucket seat	364
4.2	Removing and installing seat	365
4.3	Removing and installing seat rail cover	366
4.4	Unplugging and plugging in connectors	366
4.5	Removing and installing side trim panels	366
4.6	Removing and installing backrest adjuster knob	369
4.7	Removing and installing seat height adjuster	369
4.8	Removing and installing lumbar support adjustment switch	370
4.9	Removing and installing button for backrest bolster adjustment and button for seat bolster adjustment	370
4.10	Removing and installing control unit	371
4.11	Removing and installing backrest and seat pan (front)	371
4.12	Removing and installing operating cable for seat longitudinal adjustment	373
4.13	Removing and installing seat height adjustment unit	374
4.14	Removing and installing backrest cover panels	375
4.15	Pneumatic block - allocation of components	377
4.16	Exploded view of operating cable for locking backrest	379
4.17	Removing and installing operating cable for locking backrest	380
4.18	Adjusting operating cables for locking backrest	382
5	Race bucket seat	383
5.1	Exploded view of race bucket seat	383
5.2	Removing and installing race bucket seat	384
5.3	Removing and installing seat rail cover (front)	385
5.4	Exploded view of seat frame	385
5.5	Removing and installing seat shell	388
5.6	Removing and installing adapter plate	388

5.7	Removing and installing seat longitudinal adjuster	389
5.8	Removing and installing cross piece for seat reinforcement	389
74 - Seat - padding, covers		390
1	Seat covers and padding	390
1.1	Exploded view of seat pan cover and padding	390
1.2	Removing and installing seat pan cover and padding	391
1.3	Detaching seat cover from padding (seat pan)	393
1.4	Exploded view of backrest cover and padding	394
1.5	Removing and installing backrest cover and padding	395
1.6	Detaching seat cover from padding (backrest)	396
1.7	Overview of seat heating element	397
1.8	Removing and installing seat heating element	399
1.9	Overview of backrest heating element	399
1.10	Removing and installing backrest heating element	400
1.11	Exploded view of head restraint cover and padding	401
1.12	Removing and installing cover and padding for head restraint with slide-in locking mechanism	401
2	Seat covers and padding for bucket seats	403
2.1	Removing and installing seat pan cover and padding	403
2.2	Removing and installing backrest cover and padding	404
2.3	Removing and installing seat heating element	407
2.4	Removing and installing backrest heating element	408
3	Seat covers and padding for race bucket seats	409
3.1	Exploded view of cover and padding for race bucket seat	409