

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Routing and attaching pipes/hoses and wiring</b>	<b>1</b>
<b>2 Contact corrosion</b>	<b>2</b>
<b>3 Bonding surfaces for adhesive strips</b>	<b>3</b>
<b>4 Manual operation</b>	<b>4</b>
4.1 General notes	4
<b>5 Hydraulic system</b>	<b>6</b>
5.1 General notes	6
5.2 Rules for cleanliness	6
<b>50 - Body - front</b>	<b>8</b>
<b>1 Body - front</b>	<b>8</b>
1.1 Exploded view - lock carrier	8
1.2 Removing and installing lock carrier	9
1.3 Exploded view - headlight retainers, wheel housing liner retainer and radiator retainers	10
1.4 Removing and installing outer headlight retainer	11
1.5 Removing and installing headlight retainer (centre)	11
1.6 Removing and installing inner headlight retainer	12
1.7 Removing and installing outer radiator retainer and wheel housing liner retainer (top)	12
1.8 Removing and installing inner radiator retainer	13
<b>2 Cowl panel trim, headlight trim and bumper cover trim</b>	<b>14</b>
2.1 Exploded view - cowl panel, headlight and bumper cover trim panels	14
2.2 Removing and installing bumper cover trim	15
2.3 Removing and installing trim for headlight and wheel housing liner	15
2.4 Removing and installing cowl panel trim	16
<b>3 Wing</b>	<b>17</b>
3.1 Exploded view - wing	17
3.2 Removing and installing closure plate	17
3.3 Removing and installing wing	18
3.4 Gap widths at wing	18
3.5 Removing and installing wing mounting flange	19
<b>53 - Body - rear</b>	<b>21</b>
<b>1 Trim panels</b>	<b>21</b>
1.1 Exploded view - engine compartment trim panels	21
1.2 Removing and installing centre engine compartment trim (front)	22
1.3 Removing and installing engine compartment trim	23
1.4 Removing and installing engine compartment side trim	24
1.5 Removing and installing water drain for convertible roof compartment	25
<b>2 Side panel trim</b>	<b>27</b>
2.1 Exploded view - side panel trim and trim (top)	27
2.2 Removing and installing trim (top)	28
2.3 Removing and installing side panel trim	28
2.4 Gap widths at side panel trim	30
<b>3 Side panel</b>	<b>31</b>
3.1 Exploded view - rear side panel (top and bottom)	31
3.2 Removing and installing rear side panel (bottom)	32
3.3 Gap widths at rear side panel (bottom)	33
3.4 Removing and installing rear side panel (top) without tank flap unit	34
3.5 Removing and installing rear side panel (top) with tank flap unit	35
3.6 Gap widths at rear side panel (top)	37



<b>4</b>	<b>Upper longitudinal member and rear member</b>	<b>39</b>
4.1	Exploded view - upper longitudinal member and rear member	39
4.2	Removing and installing upper longitudinal member (left-side)	40
4.3	Removing and installing upper longitudinal member (right-side)	41
4.4	Removing and installing bracket for coolant expansion tank	42
4.5	Removing and installing rear member	43
<b>55</b>	<b>Bonnet, rear lid</b>	<b>45</b>
<b>1</b>	<b>Front lid</b>	<b>45</b>
1.1	Exploded view - front lid	45
1.2	Removing and installing fresh air intake grille	46
1.3	Removing and installing front lid	47
1.4	Removing and installing front lid hinge	47
1.5	Removing and installing striker with arrester	48
1.6	Removing and installing strikers (left and right)	48
1.7	Gap widths at front lid	48
1.8	Adjusting front lid	49
1.9	Removing and installing gas strut	52
1.10	Releasing gas from gas strut	53
1.11	Removing and installing seal for front lid	53
<b>2</b>	<b>Front lid lock</b>	<b>54</b>
2.1	Exploded view - front lid lock and front lid control motor	54
2.2	Removing and installing front lid lock	56
2.3	Removing and installing front lid locks (left and right)	57
2.4	Removing and installing central locking motor V53	58
2.5	Exploded view - cable for manual release of front lid and cable operating lever	58
2.6	Removing and installing cable for manual release of front lid	60
2.7	Removing and installing cable for front lid locks (left and right)	61
2.8	Removing and installing mounting bracket for front lid lock cables (left and right)	61
2.9	Adjusting cables for front lid lock	62
2.10	Manual release inside luggage compartment (country-specific version)	62
2.11	Removing and installing manual release inside luggage compartment	65
<b>3</b>	<b>Rear lid</b>	<b>66</b>
3.1	Exploded view - service flap	66
3.2	Removing and installing service flap	67
3.3	Removing and installing rear lid hinge	68
3.4	Removing and installing mounting plate for rear lid hinge	69
3.5	Gap widths at service flap	69
3.6	Adjusting service flap	70
3.7	Removing and installing gas strut	72
3.8	Releasing gas from gas strut	73
3.9	Removing and installing striker	73
3.10	Removing and installing air intake grille	73
<b>4</b>	<b>Rear lid lock</b>	<b>74</b>
4.1	Exploded view - adjusting buffers and rear lid lock	74
4.2	Removing and installing adjusting buffer	75
4.3	Removing and installing rear lid lock	75
4.4	Exploded view - service flap release mechanism	77
4.5	Removing and installing cable for rear lid lock	78
4.6	Removing and installing manual release cable for rear lid lock	80
4.7	Removing and installing rear lid release motor V139	82
<b>5</b>	<b>Tank flap</b>	<b>83</b>
5.1	Exploded view - tank flap and manual release mechanism	83
5.2	Removing and installing cable / manual release cable for tank flap release	84
5.3	Removing and installing tank flap unit	85

5.4	Separating sections of tank flap unit .....	85
5.5	Gap widths at tank flap .....	85
5.6	Removing and installing drain hose for fuel filler neck .....	87
<b>57</b>	<b>- Front doors, door components, central locking .....</b>	<b>90</b>
<b>1</b>	<b>Front door .....</b>	<b>90</b>
1.1	Exploded view - front door .....	90
1.2	Removing and installing front door .....	92
1.3	Gap widths at door .....	93
1.4	Adjusting door .....	94
1.5	Removing and installing side impact bar .....	95
1.6	Exploded view - window regulator motor and window regulator .....	95
1.7	Removing and installing window regulator motor .....	97
1.8	Removing and installing door control unit at window regulator motor .....	97
1.9	Removing and installing cover panel for door shell .....	98
1.10	Removing and installing window regulator .....	98
1.11	Exploded view - window slot trim strip and door seal .....	99
1.12	Removing and installing outer window slot trim strip .....	100
1.13	Removing and installing door seal and inner window slot trim strip .....	101
1.14	Exploded view - inner door seal .....	101
1.15	Removing and installing inner door seal .....	102
1.16	Removing and installing convertible roof compartment seal (front) .....	103
<b>2</b>	<b>Door handle, door lock .....</b>	<b>107</b>
2.1	Exploded view - door handle and door lock .....	107
2.2	Removing and installing trim for outer door opener .....	108
2.3	Removing and installing lock cylinder .....	108
2.4	Removing and installing mounting bracket and outer door opener .....	109
2.5	Removing and installing microswitch for lowering driver window E621 .....	111
2.6	Removing and installing operating shaft for lock cylinder and door lock .....	111
2.7	Exploded view - door lock .....	112
2.8	Removing and installing striker .....	113
2.9	Removing and installing anti-theft cover panels .....	113
2.10	Removing and installing door lock .....	114
2.11	Removing and installing cable for door opener .....	115
<b>3</b>	<b>Central locking system .....</b>	<b>116</b>
3.1	Overview - central locking system .....	116
3.2	Removing and installing central locking SAFELOCK function warning lamp K133 .....	117
3.3	Removing and installing interface control unit for vehicle location system J843 .....	118
3.4	Removing and installing contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system F124 .....	118
3.5	Removing and installing bonnet contact switch F266 .....	119
3.6	Removing and installing tank filler flap locking motor V155 .....	119
3.7	Removing and installing convenience system central control unit J393 .....	120
3.8	Servicing central locking system .....	120
<b>4</b>	<b>Rear window .....</b>	<b>121</b>
4.1	Exploded view - rear window regulator .....	121
4.2	Removing and installing rear window motor V456 .....	122
4.3	Removing and installing rear window frame .....	122
4.4	Removing and installing seal for rear window frame .....	123
<b>61</b>	<b>- Convertible roof, hardtop, canopy .....</b>	<b>124</b>
<b>1</b>	<b>Manual operation .....</b>	<b>124</b>
1.1	Overload protection for convertible roof actuation active .....	124
1.2	Manual operation of convertible roof .....	124
1.3	Measures to be taken after manual operation of convertible roof .....	130

<b>2</b>	<b>Convertible roof</b> .....	<b>133</b>
2.1	Safety precautions .....	134
2.2	Routing and attaching pipes/hoses and wiring .....	134
2.3	Service position of convertible roof and convertible roof compartment lid .....	134
2.4	Exploded view - convertible roof .....	135
2.5	Removing and installing convertible roof unit with rollover bar, convertible roof well and convertible roof compartment lid .....	136
2.6	Removing and installing convertible roof with convertible roof frame .....	147
2.7	Removing and installing hinge guide .....	150
2.8	Exploded view - convertible roof cover, convertible roof headliner, trim (front) .....	150
2.9	Removing and installing convertible roof cover .....	152
2.10	Removing and installing trim (front) .....	158
2.11	Removing and installing convertible roof headliner .....	159
2.12	Removing and installing rubber strap for convertible roof headliner .....	164
2.13	Exploded view - convertible roof seal, tensioning cables .....	167
2.14	Removing and installing seal (front) for convertible roof .....	170
2.15	Removing and installing seal (centre) for convertible roof .....	171
2.16	Removing and installing mounting for seal (centre) .....	172
2.17	Removing and installing seal (rear) for convertible roof .....	172
2.18	Removing and installing rear window seal .....	174
2.19	Removing and installing tensioning cable for convertible roof .....	175
2.20	Removing and installing tensioning cable for convertible roof linkage .....	176
2.21	Gap widths for convertible roof fin .....	180
2.22	Adjusting gap widths for convertible roof fin .....	181
2.23	Checking and adjusting contact pressure for convertible roof fin on convertible roof compartment lid .....	184
2.24	Exploded view - locking mechanism for convertible roof .....	186
2.25	Removing and installing convertible roof lock (left-side) .....	188
2.26	Removing and installing convertible roof lock (right-side) with mounting for hydraulic cylinder for convertible roof locking mechanism .....	188
2.27	Removing and installing locking element .....	189
<b>3</b>	<b>Convertible roof compartment lid</b> .....	<b>190</b>
3.1	Routing and attaching pipes/hoses and wiring .....	190
3.2	Exploded view - convertible roof compartment lid .....	190
3.3	Removing and installing convertible roof compartment lid .....	192
3.4	Gap widths for convertible roof compartment lid .....	193
3.5	Adjusting convertible roof compartment lid .....	194
3.6	Removing and installing mounting bracket for convertible roof compartment lid .....	197
3.7	Removing and installing left convertible roof flap motor V383 .....	197
3.8	Removing and installing right convertible roof flap motor V381 .....	199
3.9	Exploded view - stop buffer, guide (rear), air intake grilles .....	200
3.10	Removing and installing guide (rear) for convertible roof compartment lid .....	201
3.11	Removing and installing stop buffer .....	202
3.12	Removing and installing mounting for striker (left and right) .....	202
3.13	Removing and installing air intake grille .....	203
3.14	Removing and installing air intake grille (centre) .....	203
3.15	Exploded view - seals for convertible roof compartment lid, convertible roof well .....	204
3.16	Removing and installing front engine compartment trim seal .....	204
3.17	Removing and installing convertible roof compartment seal .....	206
3.18	Removing and installing water drain seal .....	207
3.19	Removing and installing convertible roof flap seal .....	208
3.20	Exploded view - mounting for convertible roof compartment lid hinge .....	209
3.21	Removing and installing hinge for convertible roof compartment lid .....	210
3.22	Removing and installing convertible roof compartment lid locking mechanism .....	211
3.23	Removing and installing mounting for convertible roof compartment lid hinge .....	212
<b>4</b>	<b>Microswitches for convertible roof actuation</b> .....	<b>214</b>

4.1	Routing and attaching pipes/hoses and wiring	214
4.2	Exploded view - control unit, microswitches for convertible roof actuation	214
4.3	Removing and installing convertible roof actuation control unit J256	217
4.4	Removing and installing convertible roof front switch F202 / F434	218
4.5	Removing and installing latch switch for convertible roof F169 / F170	218
4.6	Removing and installing convertible roof stowed switch F171	219
4.7	Removing and installing tensioning strut stowed switch F419 / F420	219
4.8	Removing and installing tensioning strut top switch F431 / F432	220
4.9	Removing and installing convertible roof flap switch F424 / F427 / F428	222
4.10	Removing and installing convertible roof flap switch F426 / F425 / F429	223
4.11	Removing and installing convertible roof box lid switches F417 / F418 / F421 / F422	223
<b>5</b>	<b>Hydraulic system</b>	<b>226</b>
5.1	Routing and attaching pipes/hoses and wiring	226
5.2	Overview - hydraulic system	226
5.3	Exploded view - valve block and hydraulic lines	228
5.4	Removing and installing valve block	229
5.5	Exploded view - hydraulic fluid reservoir, hydraulic pump	230
5.6	Removing and installing hydraulic fluid reservoir with convertible roof actuation hydraulic pump V118	231
5.7	Removing and installing hydraulic line at cylinder	233
5.8	Removing and installing hydraulic line at valve block	234
5.9	Removing and installing hydraulic line at hydraulic pump	235
5.10	Filling and bleeding the hydraulic system	237
5.11	Exploded view - hydraulic cylinder for convertible roof actuation	238
5.12	Removing and installing hydraulic cylinder for convertible roof drive unit	240
5.13	Removing and installing hydraulic cylinder for convertible roof fin	241
5.14	Removing and installing hydraulic cylinder for convertible roof locking mechanism at windscreen frame	242
5.15	Exploded view - hydraulic cylinder for convertible roof compartment lid	242
5.16	Removing and installing hydraulic cylinder for convertible roof compartment lid hinge	244
5.17	Removing and installing hydraulic cylinder for convertible roof compartment lid locking mechanism	245
<b>63</b>	<b>Bumpers</b>	<b>247</b>
<b>1</b>	<b>Bumper (front)</b>	<b>247</b>
1.1	Exploded view - bumper cover	247
1.2	Removing and installing bumper cover (front)	252
1.3	Gap widths at bumper cover (front)	253
1.4	Removing and installing outer bumper cover mounting	254
1.5	Removing and installing centre bumper cover mounting (top)	255
1.6	Removing and installing bumper cover mountings (bottom)	255
1.7	Removing and installing impact absorber	256
1.8	Removing and installing air intake grille (left-side)	257
1.9	Removing and installing air intake grille (right-side)	261
1.10	Removing and installing winglet - R8 GT Spyder	265
1.11	Removing and installing closure plate for bumper cover (front) - vehicles from model year 2013 onwards	265
1.12	Removing and installing spoiler lip	265
1.13	Removing and installing spoiler lip and spoiler mounting	266
1.14	Removing and installing spoiler (bottom section) - R8 GT Spyder	267
1.15	Exploded view - impact bar	268
1.16	Removing and installing impact bar (top)	269
1.17	Removing and installing impact bar (bottom left)	269
1.18	Removing and installing impact bar (bottom right)	270
<b>2</b>	<b>Bumper (rear)</b>	<b>271</b>
2.1	Exploded view - bumper cover (rear)	271

2.2	Removing and installing bumper cover (centre section)	274
2.3	Removing and installing bumper cover (rear)	275
2.4	Gap widths at bumper cover (rear)	276
2.5	Removing and installing air ducts	277
2.6	Removing and installing bumper cover (bottom section)	278
2.7	Removing and installing centre bumper cover mounting	279
2.8	Removing and installing air intake grille	280
2.9	Removing and installing bumper cover trim - vehicles with 5.2 ltr. FSI engine up to model year 2012	282
2.10	Removing and installing exhaust trim	282
2.11	Exploded view - impact bar	284
2.12	Removing and installing impact bar	286
2.13	Removing and installing heat shield for impact bar	287
2.14	Removing and installing mounting for impact bar	288
2.15	Removing and installing heat shield for impact bar mounting	288
2.16	Removing and installing number plate holders	288
<b>3</b>	<b>Rear bumper - R8 GT Spyder</b>	<b>290</b>
3.1	Exploded view - bumper cover (rear) - R8 GT Spyder	290
3.2	Removing and installing bumper cover (centre section)	293
3.3	Removing and installing bumper cover (rear)	293
3.4	Gap widths at bumper cover (rear)	295
3.5	Removing and installing air intake grille for bumper cover (centre section)	296
3.6	Removing and installing air ducts	296
3.7	Removing and installing bumper cover (bottom section)	296
3.8	Removing and installing air intake grille	297
3.9	Removing and installing exhaust trim	297
3.10	Exploded view - impact bar	297
3.11	Removing and installing impact bar	299
3.12	Removing and installing heat shield for impact bar	300
3.13	Removing and installing mounting for impact bar	300
3.14	Removing and installing heat shield for impact bar mounting	301
3.15	Installing ventilation grille	301
<b>64</b>	<b>- Glazing</b>	<b>303</b>
<b>1</b>	<b>Flush-bonded windows</b>	<b>303</b>
1.1	Removing and installing flush-bonded windows	303
1.2	Materials	305
1.3	Repairing windscreen using windscreen repair kit VAS 6092 and resin, Talon VAS 1993/2	306
1.4	Minimum drying times	307
1.5	Re-sealing windows	307
<b>2</b>	<b>Windscreen</b>	<b>308</b>
2.1	Exploded view - windscreen	308
2.2	Removing and installing windscreen	309
<b>3</b>	<b>Windows secured by threaded fasteners</b>	<b>318</b>
3.1	Exploded view - door window (front) and window guide (front)	318
3.2	Removing and installing door window	319
3.3	Gap widths at door window	319
3.4	Exploded view - adjuster screws for lateral adjustment of door window	321
3.5	Adjusting door window (lateral adjustment)	322
3.6	Exploded view - adjuster screws for adjustment of height of door window	323
3.7	Adjusting door window (height adjustment)	324
3.8	Removing and installing window guide (front)	324
3.9	Exploded view - rear window	324
3.10	Removing and installing rear window	326

<b>66 - Exterior equipment</b> .....	<b>329</b>
<b>1 Strips and panels</b> .....	<b>329</b>
1.1 Exploded view - trim panel for A-pillar and trim for windscreen frame .....	329
1.2 Removing and installing trim panel for A-pillar .....	331
1.3 Removing and installing trim for windscreen frame .....	332
1.4 Exploded view - A-pillar cover and triangular A-pillar trim .....	332
1.5 Removing and installing triangular A-pillar trim .....	333
1.6 Removing and installing A-pillar cover .....	334
1.7 Exploded view - trim strips for front door and cover for impact protection .....	334
1.8 Removing and installing trim strip for front door .....	335
1.9 Removing and installing cover for impact protection .....	336
1.10 Exploded view - trim strip for convertible roof compartment lid .....	336
1.11 Removing and installing trim strip for convertible roof compartment lid .....	337
1.12 Exploded view - sill panel trim and side member trim .....	339
1.13 Removing and installing sill panel trim .....	340
1.14 Removing and installing sill panel trim (bottom) .....	342
1.15 Removing and installing side member trim .....	342
1.16 Removing and installing bracket for side member trim .....	343
<b>2 Exterior mirrors</b> .....	<b>344</b>
2.1 Exploded view - exterior mirror .....	344
2.2 Removing and installing mirror glass .....	345
2.3 Removing and installing housing for exterior mirror and mirror adjustment unit .....	346
2.4 Removing and installing mirror adjustment unit .....	348
2.5 Removing and installing mirror base .....	348
2.6 Removing and installing cover for mirror base .....	349
<b>3 Exterior mirrors - R8 GT Spyder</b> .....	<b>350</b>
3.1 Exploded view - exterior mirror .....	350
3.2 Removing and installing mirror glass .....	351
3.3 Removing and installing exterior mirror housing and mounting plate .....	352
3.4 Removing and installing mirror adjustment unit .....	353
3.5 Removing and installing mirror base with adapter plate .....	353
<b>4 Radiator grille</b> .....	<b>356</b>
4.1 Exploded view - radiator grille .....	356
4.2 Removing and installing quattro emblem .....	358
4.3 Removing and installing radiator grille .....	359
4.4 Removing and installing retaining piece .....	360
4.5 Removing and installing number plate holder .....	360
<b>5 Spoilers</b> .....	<b>361</b>
5.1 Exploded view - spoiler for rear lid .....	361
5.2 Removing and installing rear spoiler .....	362
5.3 Gap widths at rear spoiler .....	362
5.4 Removing and installing mounting with drive unit for rear spoiler .....	363
5.5 Removing and installing heat shield for spoiler drive unit .....	363
<b>6 Spoiler - R8 GT Spyder</b> .....	<b>364</b>
6.1 Exploded view - spoiler for rear lid .....	364
6.2 Removing and installing rear spoiler .....	365
6.3 Removing and installing mounting for rear spoiler .....	365
<b>7 Underbody trim</b> .....	<b>366</b>
7.1 Exploded view - covers and noise insulation panels .....	366
7.2 Removing and installing underbody cover (front) .....	371
7.3 Removing and installing underbody cover (centre) .....	372
7.4 Removing and installing cover for centre tunnel .....	373
7.5 Removing and installing fuel tank covers .....	373
7.6 Removing and installing noise insulation (front) .....	374



7.7	Removing and installing noise insulation (rear) . . . . .	375
7.8	Removing and installing mountings (left and right) for noise insulation (rear) - vehicles with gearbox 0BZ . . . . .	377
7.9	Removing and installing mounting (rear) for noise insulation (rear) - vehicles with gearbox 0BZ . . . . .	377
7.10	Exploded view - heat shields . . . . .	378
7.11	Removing and installing heat shield for back panel . . . . .	379
7.12	Removing and installing heat shield for fuel tank compartment (left-side) . . . . .	379
7.13	Removing and installing heat shield for fuel tank compartment (top right) . . . . .	380
7.14	Removing and installing heat shield for fuel tank compartment (bottom right) . . . . .	380
7.15	Removing and installing heat shield for rear axle . . . . .	381
<b>8</b>	<b>Wheel housing liners</b> . . . . .	<b>383</b>
8.1	Exploded view - wheel housing liners . . . . .	383
8.2	Removing and installing wheel housing liners (front) . . . . .	384
8.3	Removing and installing wheel housing liners (rear) . . . . .	384
<b>9</b>	<b>Model emblems</b> . . . . .	<b>385</b>
9.1	Dimensions for model emblems and brand logos . . . . .	385