

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Overview - power transmission	2
3 Code, gearbox allocation, transmission ratios, equipment	3
4 Gearbox capacities	4
5 Front final drive	5
5.1 Identification of front final drive	5
5.2 Capacity of front final drive	5
6 Safety precautions	6
6.1 When working on the vehicle	6
6.2 When using test equipment while road-testing the vehicle	6
7 General notes	8
7.1 Notes for automated manual gearbox (R tronic)	8
8 Notes on tow-starting and towing	10
9 Repair instructions	11
9.1 Contact corrosion	16
9.2 Fitting body covers	16
10 Rules for cleanliness	18
30 - Clutch	19
1 Assembly overview - clutch mechanism	19
1.1 Removing and installing over-centre spring	21
1.2 Removing and installing clutch pedal	23
1.3 Removing and installing mounting bracket for clutch pedal and clutch master cylinder	26
1.4 Removing and installing clutch master cylinder	31
1.5 Removing and installing clutch position sender G476	34
2 Assembly overview - hydraulics for manual gearbox version	35
3 Assembly overview - clutch release mechanism for manual gearbox version	38
3.1 Removing and installing clutch slave cylinder with release bearing - manual gearbox	40
3.2 Renewing input shaft oil seal - manual gearbox	42
4 Assembly overview - clutch release mechanism for R tronic	44
4.1 Removing and installing clutch slave cylinder with release bearing - R tronic	46
4.2 Removing and installing clutch position sender G476 - R tronic	48
4.3 Renewing input shaft oil seal - R tronic	50
5 Bleeding clutch system	52
5.1 Bleeding clutch system - manual gearbox	52
5.2 Bleeding clutch system - R tronic	54
5.3 Basic setting of clutch - R tronic	57
6 Assembly overview - clutch	58
6.1 Removing and installing pressure plate with clutch plates	60
34 - Controls, housing	63
1 Electrical/electronic components on automated manual gearbox (R tronic)	63
1.1 Removing and installing automatic gearbox control unit J217	67
2 Assembly overview - selector mechanism on vehicles with manual gearbox	69
2.1 Removing and installing selector mechanism - manual gearbox version	71
2.2 Assembly overview - gear selector cables on manual gearbox version	72
2.3 Removing and installing gear selector cable and gate selector cable - manual gearbox version	74
2.4 Assembly overview - selector unit on manual gearbox version	77

2.5	Removing and installing selector unit	78
2.6	Adjusting selector mechanism - manual gearbox version	81
3	Assembly overview - selector mechanism on vehicles with R tronic	85
3.1	Removing and installing selector mechanism - R tronic	87
3.2	Removing and installing selector lever handle - R tronic	88
3.3	Removing and installing selector mechanism cover - R tronic	88
3.4	Removing and installing sport program button E541 - R tronic	89
3.5	Removing and installing selector lever position display Y5 - R tronic	90
3.6	Removing and installing selector lever sensors control unit J587 - R tronic	92
4	Assembly overview - hydraulic lines for R tronic	94
5	Assembly overview - gearshift actuator for R tronic	97
5.1	Removing and installing gearshift actuator for R tronic	100
5.2	Removing and installing hydraulic return hose	108
5.3	Removing and installing clutch actuator valve N255 and selector lever valves N284, N285, N286	109
5.4	Removing and installing gearbox hydraulic pressure sender G270	113
5.5	Removing and installing gear detection sensor G604	115
5.6	Removing and installing gear detection sensor 2 G616	117
5.7	Installing adapter harnesses for gear detection sensors (G604, G616)	119
5.8	Removing and installing gearbox input speed sender G182	127
5.9	Basic setting of gear actuator	129
6	Assembly overview - hydraulic unit for R tronic	130
6.1	Removing and installing hydraulic unit	134
6.2	Removing and installing hydraulic fluid reservoir	135
6.3	Removing and installing motor for hydraulic pump for gearbox V387	138
6.4	Removing and installing mechanical hydraulic pump	140
6.5	Removing and installing accumulator	142
6.6	Removing and installing hydraulic pressure line between gearshift actuator and hydraulic unit for R tronic	144
6.7	Renewing connection on gearshift actuator for R tronic	147
7	Fluid level in hydraulic unit for R tronic	151
7.1	Checking fluid level in hydraulic unit for R tronic	151
7.2	Topping up fluid in hydraulic unit for R tronic	153
7.3	Releasing system pressure in hydraulic system for R tronic	155
8	Removing gearbox	158
9	Installing gearbox	169
10	Assembly overview - gearbox mountings	173
10.1	Removing and installing gearbox mountings (left and right)	173
11	Assembly overview - checking gear oil level and topping up	176
11.1	Checking gear oil level (old gearbox version)	178
11.2	Checking and topping up gear oil level (new gearbox version)	180
12	Assembly overview - gear oil lines, gear oil cooler and gear oil filter	183
12.1	Cleaning gear oil lines and gear oil cooler	186
12.2	Removing and installing gear oil thermostat - vehicles with gear oil cooling	187
12.3	Removing and installing gear oil lines (front) - vehicles with gear oil cooling	188
12.4	Removing and installing gear oil lines (rear) - vehicles with gear oil cooling	190
13	Assembly overview - gear oil cooler	194
13.1	Removing and installing gear oil cooler	194
14	Dismantling and assembling gearbox	197
14.1	Overview - manual gearbox	197
14.2	Securing gearbox/transmission unit to engine and gearbox support	198
14.3	Assembly overview - reverse gear	199
14.4	Assembly overview - removing and installing input shaft, output shaft, bearing housing and selector forks	201

14.5	Dismantling and assembling gearbox - assembly sequence	203
15	Assembly overview - servicing bearing housing	221
16	Assembly overview - selector forks and selector plates	222
16.1	Removing and installing selector forks for 3rd to 6th gear	225
16.2	Removing and installing selector fork for 1st and 2nd gear	234
35	Gears, shafts	236
1	Assembly overview - input shaft	236
1.1	Dismantling and assembling input shaft - assembly sequence	239
2	Assembly overview - output shaft	244
2.1	Dismantling and assembling output shaft	246
39	Final drive - rear differential	252
1	Assembly overview - oil seal and left flange shaft	252
1.1	Removing and installing left flange shaft	252
1.2	Renewing oil seal for left flange shaft	254
2	Assembly overview - oil seal and right flange shaft	258
2.1	Removing and installing cover for final drive with right flange shaft	258
2.2	Removing and installing right flange shaft	261
2.3	Renewing oil seal for right flange shaft	264
2.4	Removing and installing ball bearing for right flange shaft	265
39	Final drive - front differential	268
1	Assembly overview - transmission shaft (in engine)	268
1.1	Removing and installing transmission shaft (in engine)	268
1.2	Removing and installing ball bearings for transmission shaft (in engine)	270
2	Assembly overview - output shaft for front final drive	274
2.1	Removing and installing output shaft for front final drive	274
3	Assembly overview - oil seals for front final drive	285
3.1	Renewing oil seals for flange shafts	285
3.2	Renewing oil seal on flange for propshaft	289
4	Assembly overview - removing and installing front final drive	294
4.1	Removing and installing front final drive	294
5	Measuring and marking radial run-out at flange for propshaft	297
6	Checking oil level in front final drive	299
7	Assembly overview - renewing bonded rubber bushes on front final drive	300
7.1	Renewing bonded rubber bushes on front final drive	300
7.2	Removing and installing cross member on front final drive	302
7.3	Renewing bonded rubber bushes on front cross member	304
8	Assembly overview - propshaft	305
8.1	Removing and installing propshaft	306
8.2	Detaching propshaft from front final drive	309