

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of front final drive	1
2 Transmission layout	3
3 Technical data	4
3.1 Allocation of gearbox to engine	4
3.2 Capacities	4
4 Safety precautions	6
4.1 General safety precautions	6
4.2 Safety precautions when working on vehicles with start/stop system	6
4.3 Safety precautions when using testers and measuring instruments during a road test	7
4.4 Notes on tow-starting and towing	7
5 Repair instructions	8
5.1 General notes	8
5.2 Rules for cleanliness	8
5.3 General repair instructions	9
5.4 Fitting body covers	11
5.5 Contact corrosion	12
30 - Clutch	13
1 Clutch	13
1.1 Exploded view - dual clutch	13
1.2 Exploded view - clutch carrier	15
1.3 Removing and installing clutch carrier	17
1.4 Renewing input shaft oil seal and sealing plug	21
1.5 Removing and installing dual clutch	23
1.6 Removing and installing clutch cover	28
1.7 Renewing ball bearing for input shaft	28
34 - Controls, housing	33
1 Electrical/electronic components	33
1.1 Electrical/electronic components	33
1.2 Removing and installing automatic gearbox control unit 2 J1006	37
1.3 Exploded view - senders in gearbox housing	37
1.4 Removing and installing gearbox input speed sender G182/clutch temperature sender 1 G658	38
1.5 Removing and installing clutch temperature sender 2 G659	41
2 Selector mechanism	43
2.1 Exploded view - selector mechanism	43
2.2 Manual release from position P	45
2.3 Removing and installing selector mechanism	46
2.4 Checking selector mechanism	47
2.5 Removing and installing selector lever handle	48
2.6 Removing and installing selector mechanism cover	49
2.7 Removing and installing sport program button E541	50
2.8 Removing and installing selector lever position display Y5	51
2.9 Removing and installing selector lever sensors control unit J587	52
3 Removing and installing gearbox	55
3.1 Removing gearbox	55
3.2 Installing gearbox	63
3.3 Tightening torques for gearbox	65



3.4	Securing to engine and gearbox support	66
4	Assembly mountings	70
4.1	Exploded view - assembly mountings	70
4.2	Removing and installing gearbox mounting	71
5	ATF circuit	75
5.1	Exploded view - ATF circuit	75
5.2	Exploded view - drain, sealing and inspection plugs	78
5.3	Removing and installing ATF cooler on gearbox	80
5.4	Removing and installing ATF cooler (right-side)	81
6	ATF	83
6.1	Checking ATF level	83
6.2	Draining and filling ATF	89
35 - Gears, shafts		95
1	Mechatronic unit	95
1.1	Exploded view - mechatronic unit	95
1.2	Removing and installing cover for mechatronic unit	97
1.3	Removing and installing mechatronic unit for dual clutch gearbox J743	100
2	ATF circuit	104
2.1	Exploded view - ATF circuit	104
2.2	Exploded view - oil pan	104
2.3	Removing and installing ATF filter	106
2.4	Removing and installing oil pan	107
2.5	Removing and installing auxiliary hydraulic unit	109
3	Parking lock	114
3.1	Exploded view - parking lock	114
3.2	Removing and installing cover for parking lock	116
3.3	Removing and installing parking lock	117
39 - Final drive - rear differential		122
1	Flange shafts and oil seals	122
1.1	Exploded view - flange shaft (left-side)	122
1.2	Exploded view - flange shaft (right-side) and oil seal	122
1.3	Overview of fitting locations - oil seals	123
1.4	Renewing oil seal (left-side)	124
1.5	Renewing oil seal (right-side)	128
1.6	Renewing input shaft oil seal	129
1.7	Renewing oil seal for transmission shaft in gearbox	132
2	Rear differential	134
2.1	Exploded view - differential	134
2.2	Exploded view - differential lock	136
2.3	Dismantling and assembling differential lock	137
2.4	Removing and installing flange shaft (left-side)	141
2.5	Removing and installing bearing for flange shaft (left-side)	143
2.6	Removing and installing cover for final drive with flange shaft (right-side)	144
2.7	Removing and installing flange shaft (right-side)	145
2.8	Removing and installing bearing for flange shaft (right-side)	148
39 - Final drive - front differential		151
1	Transmission shaft (in engine)	151
1.1	Exploded view - transmission shaft (in engine)	151
1.2	Removing and installing transmission shaft (in engine)	151
1.3	Removing and installing ball bearings for transmission shaft (in engine)	153
2	Transmission shaft (in gearbox)	157
2.1	Renewing oil seal for transmission shaft (in gearbox)	157

3	Oil seals for front final drive	159
3.1	Overview of fitting locations - oil seals for front final drive	159
3.2	Renewing flange shaft oil seals	159
3.3	Renewing oil seal for propshaft flange	163
4	Front final drive	168
4.1	Exploded view - front final drive	168
4.2	Removing and installing front final drive	168
4.3	Measuring and marking radial run-out at flange for propshaft	170
5	Assembly mountings	172
5.1	Exploded view - assembly mountings	172
5.2	Removing and installing bonded rubber bush on front final drive	172
5.3	Removing and installing cross member on front final drive	174
5.4	Renewing bonded rubber bushes on front cross member	176
6	Gear oil	177
6.1	Checking gear oil level	177
7	Propshaft	178
7.1	Exploded view - propshaft	178
7.2	Removing and installing propshaft	179
7.3	Detaching propshaft from front final drive	182