

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number</b>	<b>1</b>
<b>2 Engine data</b>	<b>2</b>
<b>3 Safety precautions</b>	<b>3</b>
3.1 Safety precautions when working on the fuel supply system	3
3.2 Safety precautions when working on vehicles with start/stop system	3
3.3 Safety precautions when working on the cooling system	3
3.4 Safety precautions when using testers and measuring instruments during a road test	4
3.5 Safety precautions when working on the ignition system	4
<b>4 General repair instructions</b>	<b>6</b>
4.1 Rules for cleanliness when working on fuel supply system and injection system	6
4.2 Checking for leaks on vehicle	6
4.3 General notes on self-diagnosis	7
4.4 General notes on ignition system	7
4.5 Foreign particles in engine	8
4.6 Contact corrosion	8
4.7 Routing and attachment of pipes, hoses and wiring	8
4.8 Installing radiators and condensers	8
4.9 Fitting protective covers on bodywork	8
4.10 Checking vacuum system	9
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Placing engine/gearbox assembly on scissor-type assembly platform	106
1.3 Separating engine and gearbox	111
1.4 Securing engine to engine and gearbox support	123
1.5 Installing engine	128
<b>2 Assembly mountings</b>	<b>135</b>
2.1 Exploded view - assembly mountings	135
2.2 Removing and installing engine mountings	136
2.3 Exploded view - engine compartment cross member	143
2.4 Removing and installing engine compartment cross member	147
<b>3 Engine cover panel</b>	<b>159</b>
3.1 Removing and installing engine cover panel	159
<b>13 - Crankshaft group</b>	<b>160</b>
<b>1 Cylinder block (pulley end)</b>	<b>160</b>
1.1 Exploded view - poly V-belt drive	160
1.2 Removing and installing poly V-belt	162
1.3 Removing and installing tensioner for poly V-belt	165
1.4 Removing and installing bracket for alternator	165
1.5 Removing and installing vibration damper with poly V-belt pulley	166
1.6 Renewing crankshaft oil seal (pulley end)	167
<b>2 Cylinder block (gearbox end)</b>	<b>170</b>
2.1 Exploded view - flywheel	170
2.2 Renewing ball bearing for crankshaft (gearbox end) - vehicles with manual gearbox/R tronic gearbox 086	172
2.3 Removing and installing flywheel	173
2.4 Renewing crankshaft oil seal (gearbox end)	177
<b>3 Crankshaft</b>	<b>179</b>
3.1 Exploded view - crankshaft	179



3.2	Allocation of main bearing shells for new crankshaft	183
3.3	Allocation of main bearing shells on used and machined crankshafts	185
3.4	Crankshaft dimensions	186
3.5	Measuring axial clearance of crankshaft	186
3.6	Measuring radial clearance of crankshaft	187
<b>4</b>	<b>Pistons and conrods</b>	<b>189</b>
4.1	Exploded view - pistons and conrods	189
4.2	Allocation of conrods and conrod bearing shells to crankshaft	193
4.3	Removing and installing pistons	194
4.4	Checking piston bores and cylinder bores	195
4.5	Measuring radial clearance of conrods	197
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>199</b>
<b>1</b>	<b>Chain drive</b>	<b>199</b>
1.1	Exploded view - timing chain covers	199
1.2	Removing and installing timing chain cover (left-side)	202
1.3	Removing and installing timing chain cover (right-side)	212
1.4	Removing and installing timing chain cover (bottom)	216
1.5	Exploded view - camshaft timing chains	228
1.6	Removing timing chain (left-side) from camshafts	232
1.7	Removing timing chain (right-side) from camshafts	241
1.8	Removing and installing camshaft timing chains	251
1.9	Exploded view - drive chain for valve gear	254
1.10	Removing and installing drive chain for valve gear	256
1.11	Exploded view - drive chain for auxiliary drives	258
1.12	Removing and installing drive chain for auxiliary drives	258
1.13	Exploded view - auxiliary drives	260
1.14	Renewing oil seal for air conditioner compressor drive	262
1.15	Renewing oil seal for power steering pump drive	264
1.16	Removing and installing spur gear drive	266
<b>2</b>	<b>Cylinder head</b>	<b>272</b>
2.1	Exploded view - cylinder head	272
2.2	Removing and installing cylinder head cover (left-side)	276
2.3	Removing and installing cylinder head cover (right-side)	280
2.4	Removing cylinder head (left-side)	283
2.5	Removing cylinder head (right-side)	293
2.6	Installing cylinder head	298
2.7	Checking compression	302
<b>3</b>	<b>Valve gear</b>	<b>305</b>
3.1	Exploded view - valve gear	305
3.2	Measuring axial clearance of camshafts	308
3.3	Measuring radial clearance of camshafts	309
3.4	Removing and installing camshafts	310
3.5	Checking hydraulic compensation elements	321
3.6	Renewing valve stem oil seals (cylinder head installed)	322
3.7	Renewing valve stem oil seals (cylinder head removed)	327
3.8	Valve dimensions	332
3.9	Checking valve guides	333
3.10	Checking valves	334
<b>17</b>	<b>Lubrication</b>	<b>335</b>
<b>1</b>	<b>Oil pump and sump (bottom section)</b>	<b>335</b>
1.1	Exploded view - oil pump and sump (bottom section)	335
1.2	Removing and installing sump (bottom section)	338
1.3	Removing and installing end cover	341

1.4	Removing and installing oil pump .....	343
<b>2</b>	<b>Sump (top section) .....</b>	<b>349</b>
2.1	Exploded view - sump (top section) .....	349
2.2	Removing and installing sump (top section) .....	351
<b>3</b>	<b>Oil retention valve, spray nozzle valve, oil filter housing, engine oil cooler, oil pressure switch .....</b>	<b>357</b>
3.1	Exploded view - oil retention valve and spray nozzle valve .....	357
3.2	Removing and installing oil retention valve and spray nozzle valve .....	358
3.3	Exploded view - oil filter housing .....	360
3.4	Removing and installing oil filter housing .....	362
3.5	Removing and installing oil pressure switch F1 .....	364
3.6	Checking oil pressure and oil pressure switch F1 .....	365
3.7	Removing and installing oil temperature sender 2 G664 .....	367
3.8	Exploded view - engine oil cooler and oil reservoir .....	368
3.9	Removing and installing oil level and oil temperature sender G266 .....	372
3.10	Removing and installing engine oil cooler (mounting plate remains in place) .....	374
3.11	Removing and installing engine oil cooler with mounting plate .....	376
3.12	Removing and installing oil reservoir .....	378
3.13	Exploded view - crankcase breather system .....	382
3.14	Removing and installing pressure control valve for crankcase breather system .....	383
3.15	Engine oil .....	387
3.16	Checking oil level .....	387
3.17	First filling of engine with oil .....	387
<b>19</b>	<b>Cooling .....</b>	<b>389</b>
<b>1</b>	<b>Cooling system .....</b>	<b>389</b>
1.1	Diagrams of coolant hose connections .....	389
1.2	Draining and filling cooling system .....	393
1.3	Checking cooling system for leaks .....	400
<b>2</b>	<b>Coolant pump, thermostat .....</b>	<b>403</b>
2.1	Exploded view - coolant pump and thermostat .....	403
2.2	Removing and installing coolant pump .....	405
2.3	Removing and installing thermostat .....	408
2.4	Checking thermostat .....	409
2.5	Removing and installing continued coolant circulation pump V51 .....	409
<b>3</b>	<b>Coolant pipes .....</b>	<b>411</b>
3.1	Exploded view - coolant pipes in engine compartment .....	411
3.2	Exploded view - coolant pipes (rear) to body .....	413
3.3	Exploded view - coolant expansion tank .....	414
3.4	Fitting coolant hoses .....	416
3.5	Removing and installing coolant temperature sender G62 .....	416
3.6	Removing and installing coolant pipe for alternator .....	417
3.7	Removing and installing coolant pipe (front) .....	419
3.8	Removing and installing coolant pipe (top) .....	420
3.9	Removing and installing coolant pipe (rear) .....	423
3.10	Removing and installing coolant pipe (rear left) .....	429
3.11	Removing and installing coolant pipe (rear right) .....	431
3.12	Removing and installing coolant pipe (rear right) to ATF cooler .....	432
3.13	Exploded view - coolant pipes at front and in centre of vehicle .....	434
3.14	Removing and installing coolant pipes located at centre of vehicle .....	435
3.15	Removing and installing coolant supply pipe (left-side) .....	439
3.16	Removing and installing coolant supply pipe (right-side) .....	441
3.17	Removing and installing coolant return pipe (front) .....	442
3.18	Removing and installing coolant return pipe (rear) .....	444
<b>4</b>	<b>Radiators and radiator fans .....</b>	<b>446</b>



4.1	Exploded view - side radiators and radiator fans	446
4.2	Removing and installing side radiator with radiator fan	448
4.3	Removing and installing radiator cowl with radiator fans	451
4.4	Removing and installing radiator fan	452
4.5	Exploded view - radiator (centre)	453
4.6	Removing and installing radiator (centre)	455
<b>24</b>	<b>Mixture preparation - injection</b>	<b>458</b>
<b>1</b>	<b>Injection system</b>	<b>458</b>
1.1	Technical data	458
1.2	Overview of fitting locations	458
<b>2</b>	<b>Air cleaner</b>	<b>474</b>
2.1	Exploded view - air cleaner	474
2.2	Removing and installing air filter elements and air mass meters G70 / G246	479
2.3	Removing and installing air cleaner housing	484
<b>3</b>	<b>Intake manifold, fuel rail and injectors</b>	<b>489</b>
3.1	Exploded view - intake manifold	489
3.2	Removing and installing throttle valve module J338 / J544	491
3.3	Removing and installing intake manifold	493
3.4	Removing and installing vacuum unit for intake manifold flap	498
3.5	Exploded view - injectors and fuel rail	499
3.6	Removing and installing injectors	505
3.7	Removing and installing fuel pressure sender G247 / G624	514
<b>4</b>	<b>High-pressure pump</b>	<b>516</b>
4.1	Exploded view - high-pressure pump	516
4.2	Removing and installing high-pressure pumps	518
<b>5</b>	<b>Lambda probes</b>	<b>525</b>
5.1	Overview - Lambda probes	525
5.2	Removing and installing Lambda probes	526
<b>6</b>	<b>Engine control units</b>	<b>530</b>
6.1	Exploded view - engine control unit	530
6.2	Wiring and component check with test box V.A.G 1598/42	530
6.3	Removing and installing engine control unit J623	532
6.4	Removing and installing engine control unit 2 J624	536
<b>26</b>	<b>Exhaust system</b>	<b>541</b>
<b>1</b>	<b>Silencers</b>	<b>541</b>
1.1	Exploded view - silencers	541
1.2	Exploded view - heat shields	543
1.3	Removing and installing silencers	545
1.4	Renewing exhaust pipe with exhaust flap	547
1.5	Checking exhaust system for leaks	548
<b>2</b>	<b>Exhaust manifolds</b>	<b>549</b>
2.1	Exploded view - exhaust manifold	549
2.2	Removing and installing exhaust manifolds	553
<b>3</b>	<b>Secondary air system</b>	<b>560</b>
3.1	Exploded view - secondary air system	560
3.2	Removing and installing secondary air pump motor V101/V189	568
3.3	Checking combination valves for secondary air system for correct operation and leakage	571
3.4	Removing and installing combination valve for secondary air system (left-side)	573
3.5	Removing and installing combination valve for secondary air system (right-side)	574
3.6	Removing and installing senders for secondary air pressure G609/G610	576
<b>4</b>	<b>Exhaust flap</b>	<b>579</b>
4.1	Checking vacuum unit for exhaust flap	579

<b>28 - Ignition system</b> .....	<b>581</b>
<b>1 Servicing ignition system</b> .....	<b>581</b>
1.1 Test data .....	581
1.2 Exploded view - ignition system .....	581
1.3 Removing and installing ignition coils .....	583
1.4 Removing and installing knock sensors .....	585
1.5 Removing and installing Hall senders .....	587
1.6 Removing and installing engine speed sender G28 .....	590