

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number</b>	<b>1</b>
<b>2 Engine data</b>	<b>2</b>
<b>3 Safety precautions</b>	<b>4</b>
3.1 Safety precautions when working on the fuel supply system	4
3.2 Safety precautions when working on vehicles with start/stop system	4
3.3 Safety precautions when working on the cooling system	4
3.4 Safety precautions when using testers and measuring instruments during a road test	5
3.5 Safety precautions when working on the ignition system	5
<b>4 General repair instructions</b>	<b>7</b>
4.1 Rules for cleanliness when working on fuel supply system and injection system	7
4.2 Checking for leaks on vehicle	7
4.3 General notes on self-diagnosis	8
4.4 General notes on ignition system	9
4.5 Foreign material in engine	9
4.6 Contact corrosion	9
4.7 Routing and attachment of pipes, hoses and wiring	10
4.8 Nuts, bolts	10
4.9 Identification plates	10
4.10 Use of impact wrenches	10
4.11 Installing radiators and condensers	11
4.12 Fitting protective covers on bodywork	11
4.13 Checking vacuum system	12
<b>10 - Removing and installing engine</b>	<b>14</b>
<b>1 Removing and installing engine</b>	<b>14</b>
1.1 Removing engine	14
1.2 Placing engine/gearbox assembly on scissor-type assembly platform	112
1.3 Separating engine and gearbox	116
1.4 Securing engine to engine and gearbox support	129
1.5 Installing engine	134
<b>2 Assembly mountings</b>	<b>141</b>
2.1 Assembly overview - assembly mountings	141
2.2 Removing and installing engine mountings with electro-hydraulic engine mounting solenoid valves N144/N145	142
2.3 Assembly overview - engine compartment cross member	144
2.4 Removing and installing engine compartment cross member	148
<b>3 Engine cover panel</b>	<b>160</b>
3.1 Removing and installing engine cover panel	160
<b>13 - Crankshaft group</b>	<b>161</b>
<b>1 Cylinder block (pulley end)</b>	<b>161</b>
1.1 Assembly overview - poly V-belt drive	161
1.2 Removing and installing poly V-belt	163
1.3 Removing and installing tensioner for poly V-belt	165
1.4 Removing and installing bracket for alternator	166
1.5 Removing and installing vibration damper with poly V-belt pulley	167
1.6 Renewing crankshaft oil seal (pulley end)	167
<b>2 Cylinder block (gearbox end)</b>	<b>170</b>
2.1 Assembly overview - flywheel	170
2.2 Renewing ball bearing for crankshaft (gearbox end) - vehicles with manual gearbox/R tronic gearbox 086	171



2.3	Removing and installing flywheel	172
2.4	Renewing crankshaft oil seal (gearbox end)	175
<b>3</b>	<b>Crankshaft</b>	<b>178</b>
3.1	Assembly overview - crankshaft	178
3.2	Allocation of main bearing shells for new crankshaft	181
3.3	Allocation of main bearing shells on used and machined crankshafts	184
3.4	Crankshaft dimensions	185
3.5	Measuring axial clearance of crankshaft	185
3.6	Measuring radial clearance of crankshaft	186
3.7	Removing and installing intake module and retaining frame	186
<b>4</b>	<b>Pistons and conrods</b>	<b>194</b>
4.1	Assembly overview - pistons and conrods	194
4.2	Removing and installing pistons	197
4.3	Checking piston bores and cylinder bores	198
4.4	Measuring radial clearance of conrods	200
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>202</b>
<b>1</b>	<b>Chain drive</b>	<b>202</b>
1.1	Assembly overview - timing chain covers	202
1.2	Removing and installing timing chain cover (left-side)	205
1.3	Removing and installing timing chain cover (right-side)	210
1.4	Removing and installing timing chain cover (bottom)	213
1.5	Assembly overview - camshaft timing chains	220
1.6	Removing timing chains from camshafts	224
1.7	Removing and installing camshaft timing chains	234
1.8	Assembly overview - drive chain for valve gear	239
1.9	Removing and installing drive chain for valve gear	241
1.10	Assembly overview - drive chain for auxiliary drives	243
1.11	Removing and installing drive chain for auxiliary drives	244
1.12	Assembly overview - auxiliary drives	248
1.13	Renewing oil seal for air conditioner compressor drive	250
1.14	Renewing oil seal for power steering vane pump drive	252
1.15	Removing and installing spur gear drive	254
<b>2</b>	<b>Cylinder head</b>	<b>258</b>
2.1	Assembly overview - cylinder head	258
2.2	Removing and installing cylinder head cover (left-side)	262
2.3	Removing and installing cylinder head cover (right-side)	266
2.4	Removing and installing cylinder head	267
2.5	Checking compression	275
<b>3</b>	<b>Valve gear</b>	<b>278</b>
3.1	Assembly overview - valve gear	278
3.2	Measuring axial clearance of camshafts	281
3.3	Measuring radial clearance of camshafts	282
3.4	Removing and installing camshafts	283
3.5	Renewing valve stem oil seals with cylinder head installed	291
3.6	Renewing valve stem oil seals with cylinder head removed	295
3.7	Checking hydraulic compensation elements	299
3.8	Valve dimensions	301
3.9	Checking valve guides	302
3.10	Checking valves	303
<b>17</b>	<b>Lubrication</b>	<b>304</b>
<b>1</b>	<b>Oil pump and intake module</b>	<b>304</b>
1.1	Assembly overview - oil pump, intake module	304
1.2	Removing and installing oil pump	306

<b>2</b>	<b>Oil filter housing, engine oil cooler, oil non-return valves, spray nozzle valve</b>	<b>310</b>
2.1	Assembly overview - oil filter housing	310
2.2	Removing and installing oil filter housing	312
2.3	Assembly overview - engine oil cooler (top), oil non-return valves, spray nozzle valve	314
2.4	Removing and installing engine oil cooler (top)	317
2.5	Removing and installing mounting plate	318
2.6	Removing and installing oil non-return valve "1" and spray nozzle valve	320
2.7	Removing and installing oil non-return valve "2"	321
2.8	Assembly overview - crankcase breather hoses	322
2.9	Removing and installing crankcase breather hoses "1" and "2"	326
2.10	Removing and installing crankcase breather hose "3"	328
2.11	Removing and installing crankcase breather hose "4"	329
2.12	Removing and installing oil pressure switch F1	330
2.13	Checking oil pressure switch F1	331
2.14	Checking oil pressure	332
2.15	Removing and installing oil temperature sender 2 G664	333
2.16	Assembly overview - oil reservoir	334
2.17	Removing and installing oil level and oil temperature sender G266	338
2.18	Removing and installing oil reservoir	340
2.19	Assembly overview - engine oil cooler (left-side)	343
2.20	Removing and installing engine oil cooler (left-side)	345
2.21	Removing and installing temperature regulator for engine oil cooler	347
2.22	Engine oil	348
2.23	Checking oil level	348
2.24	First filling of engine with oil	348
<b>19</b>	<b>Cooling</b>	<b>350</b>
<b>1</b>	<b>Cooling system</b>	<b>350</b>
1.1	Connection diagram - coolant hoses	350
1.2	Draining and filling cooling system	353
1.3	Checking cooling system for leaks	362
<b>2</b>	<b>Coolant pump, thermostat</b>	<b>365</b>
2.1	Assembly overview - thermostat	365
2.2	Removing and installing thermostat	365
2.3	Checking thermostat	368
2.4	Assembly overview - coolant pump	368
2.5	Removing and installing coolant pump	369
2.6	Removing and installing coolant temperature sender G62	373
2.7	Assembly overview - gearbox coolant pump V532	374
2.8	Removing and installing gearbox coolant pump V532	375
<b>3</b>	<b>Coolant pipes</b>	<b>378</b>
3.1	Assembly overview - coolant pipes at front and in centre of vehicle	378
3.2	Assembly overview - coolant pipes (rear) to body	379
3.3	Assembly overview - coolant expansion tank	380
3.4	Fitting coolant hoses	382
3.5	Removing and installing large coolant pipe (rear left)	382
3.6	Removing and installing small coolant pipe (rear left)	384
3.7	Removing and installing coolant pipe (rear right)	385
3.8	Removing and installing coolant pipe (rear right) to ATF cooler	387
3.9	Removing and installing coolant pipes located at centre of vehicle	389
3.10	Removing and installing coolant supply pipe (left-side)	393
3.11	Removing and installing coolant supply pipe (right-side)	395
3.12	Removing and installing coolant return pipe (front)	396
3.13	Removing and installing coolant return pipe (rear)	398
<b>4</b>	<b>Radiator and radiator fans</b>	<b>400</b>

4.1	Assembly overview - side radiators and radiator fans	400
4.2	Removing and installing side radiator	402
4.3	Removing and installing radiator cowl with radiator fans	405
4.4	Removing and installing radiator fan	407
4.5	Assembly overview - radiator (centre)	408
4.6	Removing and installing radiator (centre)	409
<b>24</b>	<b>- Mixture preparation - injection</b>	<b>412</b>
<b>1</b>	<b>Injection system</b>	<b>412</b>
1.1	Technical data	412
1.2	Overview of fitting locations	412
<b>2</b>	<b>Air filter</b>	<b>426</b>
2.1	Assembly overview - air filter	426
2.2	Removing and installing air filter elements	432
2.3	Removing and installing air filter housing	437
2.4	Removing and installing air mass meter G70 / air mass meter 2 G246	442
<b>3</b>	<b>Intake manifold, fuel rail and injectors</b>	<b>443</b>
3.1	Assembly overview - upper part of intake manifold	443
3.2	Removing and installing throttle valve module J338 / throttle valve module 2 J544	445
3.3	Removing and installing upper part of intake manifold	447
3.4	Assembly overview - lower part of intake manifold, fuel rail and injectors	451
3.5	Removing and installing lower part of intake manifold with fuel rail	454
3.6	Removing and installing injectors	457
<b>4</b>	<b>High-pressure pump</b>	<b>466</b>
4.1	Assembly overview - high-pressure pump	466
4.2	Removing and installing high-pressure pipe	468
4.3	Removing and installing high-pressure pumps	470
4.4	Removing and installing fuel pressure sender G247 / fuel pressure sender 2 G624	473
<b>5</b>	<b>Lambda probes</b>	<b>474</b>
5.1	Assembly overview - Lambda probes	474
5.2	Removing and installing Lambda probes	475
<b>6</b>	<b>Engine control units</b>	<b>479</b>
6.1	Assembly overview - engine control unit	479
6.2	Wiring and component check with test box V.A.G 1598/42	479
6.3	Removing and installing engine control units	482
<b>26</b>	<b>- Exhaust system</b>	<b>490</b>
<b>1</b>	<b>Silencers</b>	<b>490</b>
1.1	Assembly overview - silencers	490
1.2	Assembly overview - heat shields	492
1.3	Removing and installing silencers	494
1.4	Renewing exhaust pipe with exhaust flap	496
1.5	Checking exhaust system for leaks	497
<b>2</b>	<b>Exhaust manifold</b>	<b>498</b>
2.1	Assembly overview - exhaust manifold	498
2.2	Removing and installing exhaust manifold	503
<b>3</b>	<b>Secondary air system</b>	<b>507</b>
3.1	Assembly overview - secondary air system	507
3.2	Removing and installing secondary air pump motor V101/V189	513
3.3	Checking combination valves for secondary air system for correct operation and leakage	516
3.4	Removing and installing combination valve for secondary air system (left-side)	518
3.5	Removing and installing combination valve for secondary air system (right-side)	521
3.6	Removing and installing senders for secondary air pressure G609/G610	523
<b>4</b>	<b>Exhaust flap</b>	<b>524</b>

4.1	Checking vacuum unit for exhaust flap .....	524
<b>28</b>	<b>- Ignition system .....</b>	<b>526</b>
<b>1</b>	<b>Ignition system .....</b>	<b>526</b>
1.1	Test data .....	526
1.2	Assembly overview - ignition system .....	526
1.3	Removing and installing ignition coils .....	528
1.4	Removing and installing knock sensors G61 / G66 / G198 / G199 .....	530
1.5	Removing and installing Hall senders G40 / G163 / G300 / G301 .....	531
1.6	Removing and installing engine speed sender G28 .....	533