

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	3
1.5 Safety precautions when working on the ignition system	3
1.6 Rules for cleanliness when working on fuel supply system and injection system	4
1.7 Reducing pressure in high-pressure section of injection system	4
1.8 Fitting protective cover on bodywork	6
1.9 Checking for leaks on vehicle	7
1.10 Checking vacuum system	8
2 Injection system	9
2.1 Technical data	9
2.2 Fitting locations - overview	10
3 Air cleaner	22
3.1 Air cleaner - exploded view	22
3.2 Removing and installing air filter elements and air mass meters G70 / G246	26
3.3 Removing and installing air cleaner housing	30
4 Intake manifold, fuel rail and injectors	34
4.1 Intake manifold - exploded view	34
4.2 Removing and installing throttle valve module J338 / J544	36
4.3 Removing and installing intake manifold	37
4.4 Removing and installing vacuum unit for intake manifold flap	41
4.5 Injectors and fuel rail - exploded view	42
4.6 Removing and installing injectors	48
4.7 Removing and installing fuel pressure sender G247 / G624	54
5 High-pressure pump	56
5.1 High-pressure pump - exploded view	56
5.2 Removing and installing high-pressure pumps	58
6 Lambda probes	65
6.1 Lambda probes - overview	65
6.2 Removing and installing Lambda probes	66
7 Engine control units	69
7.1 Engine control unit - exploded view	69
7.2 Wiring and component check with test box V.A.G 1598/42	69
7.3 Removing and installing engine control unit J623	72
7.4 Removing and installing engine control unit 2 J624	75
28 - Ignition system	79
1 General notes and safety precautions	79
1.1 General notes on ignition system	79
1.2 Safety precautions	80
2 Servicing ignition system	81
2.1 Test data	81
2.2 Ignition system - exploded view	82
2.3 Removing and installing ignition coils	83
2.4 Removing and installing knock sensors	84
2.5 Removing and installing Hall senders	86
2.6 Removing and installing engine speed sender G28	89