

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 General notes on self-diagnosis .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	2
1.3 Safety precautions when working on vehicles with start/stop system .....	2
1.4 Safety precautions when working on the fuel system .....	3
1.5 Safety precautions when working on the ignition system .....	3
1.6 Rules for cleanliness when working on fuel supply system and injection system .....	4
1.7 Reducing pressure in high-pressure section of injection system .....	4
1.8 Fitting protective cover on bodywork .....	5
1.9 Checking for leaks on vehicle .....	6
1.10 Checking vacuum system .....	7
<b>2 Injection system</b> .....	<b>8</b>
2.1 Technical data .....	8
2.2 Fitting locations - overview .....	9
<b>3 Air cleaner</b> .....	<b>19</b>
3.1 Air cleaner - exploded view .....	19
3.2 Removing and installing air filter elements .....	24
3.3 Removing and installing air cleaner housing .....	28
3.4 Removing and installing air mass meter G70 / air mass meter 2 G246 .....	32
<b>4 Intake manifold, fuel rail and injectors</b> .....	<b>34</b>
4.1 Intake manifold (top section) - exploded view .....	34
4.2 Removing and installing throttle valve module J338 / throttle valve module 2 J544 .....	35
4.3 Removing and installing intake manifold (top section) .....	36
4.4 Intake manifold (bottom section), fuel rail and injectors - exploded view .....	41
4.5 Removing and installing intake manifold (bottom section) with fuel rail .....	43
4.6 Removing and installing injectors .....	46
<b>5 High-pressure pump</b> .....	<b>51</b>
5.1 High-pressure pump - exploded view .....	51
5.2 Removing and installing high-pressure pipe .....	52
5.3 Removing and installing high-pressure pumps .....	53
5.4 Removing and installing fuel pressure sender G247 / fuel pressure sender 2 G624 .....	55
<b>6 Lambda probes</b> .....	<b>56</b>
6.1 Lambda probes - overview .....	56
6.2 Removing and installing Lambda probes .....	57
<b>7 Engine control units</b> .....	<b>60</b>
7.1 Engine control unit - exploded view .....	60
7.2 Wiring and component check with test box V.A.G 1598/42 .....	60
7.3 Removing and installing engine control unit J623 .....	62
7.4 Removing and installing engine control unit 2 J624 .....	65
<b>28 - Ignition system</b> .....	<b>69</b>
<b>1 General notes and safety precautions</b> .....	<b>69</b>
1.1 General notes on ignition system .....	69
1.2 Safety precautions .....	70
<b>2 Servicing ignition system</b> .....	<b>71</b>
2.1 Test data .....	71
2.2 Ignition system - exploded view .....	72
2.3 Removing and installing ignition coils .....	73
2.4 Removing and installing knock sensors G61 / G66 / G198 / G199 .....	75
2.5 Removing and installing Hall senders G40 / G163 / G300 / G301 .....	75
2.6 Removing and installing engine speed sender G28 .....	76