

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety precautions</b> .....	<b>1</b>
1.1 Safety precautions when working on the fuel supply system .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	1
1.3 Removing and installing components from a full or partly full fuel tank .....	2
1.4 Removing and installing fuel tank .....	2
<b>2 General repair instructions</b> .....	<b>3</b>
2.1 Rules for cleanliness when working on fuel supply system and injection system .....	3
2.2 Test conditions .....	3
2.3 Checking fuel tank for leaks .....	3
2.4 Contact corrosion! .....	3
2.5 Fitting protective covers on bodywork .....	4
<b>20 - Fuel supply system</b> .....	<b>5</b>
<b>1 Fuel tank with attached components - R8 Coupé (rest-of-world vehicles)</b> .....	<b>5</b>
1.1 Exploded view - fuel tank with attached components .....	5
<b>2 Fuel tank with attached components - R8 Spyder (all vehicles)</b> .....	<b>8</b>
2.1 Exploded view - fuel tank with attached components .....	8
<b>3 Fuel tank with attached components - R8 Coupé (USA vehicles)</b> .....	<b>12</b>
3.1 Exploded view - fuel tank with attached components .....	12
<b>4 Fuel supply system - all vehicles</b> .....	<b>15</b>
4.1 Draining fuel tank .....	15
4.2 Removing and installing fuel tank chamber (left-side) with attached components .....	17
4.3 Removing and installing fuel tank chamber (right-side) with attached components .....	25
<b>5 Fuel delivery unit and suction-jet pump - all vehicles</b> .....	<b>37</b>
5.1 Exploded view - fuel delivery unit and suction-jet pump .....	37
5.2 Checking fuel pump (electrical test) .....	39
5.3 Checking fuel pump control unit J538 .....	44
5.4 Removing and installing fuel pump control unit J538 .....	44
5.5 Checking fuel pressure and residual pressure .....	47
5.6 Checking fuel delivery rate .....	53
5.7 Removing and installing fuel delivery unit .....	59
5.8 Suction-jet pumps .....	64
<b>6 Fuel gauge senders - all vehicles</b> .....	<b>67</b>
6.1 Exploded view - fuel gauge senders .....	67
6.2 Checking fuel gauge sender G (bottom right sender) .....	69
6.3 Removing and installing fuel gauge sender G (bottom right sender) .....	71
6.4 Checking fuel gauge sender 2 G169 (top right sender) .....	72
6.5 Removing and installing fuel gauge sender 2 G169 (top right sender) .....	75
6.6 Checking fuel gauge sender 3 G237 (bottom left sender) .....	76
6.7 Removing and installing fuel gauge sender 3 G237 (bottom left sender) .....	79
6.8 Checking fuel gauge sender 4 G393 (top left sender) .....	83
6.9 Removing and installing fuel gauge sender 4 G393 (top left sender) .....	86
<b>7 Checking fuel tank system for leaks</b> .....	<b>92</b>
7.1 Checking fuel tank system for leaks - R8 Coupé .....	92
7.2 Checking fuel tank system for leaks - R8 Spyder .....	94
<b>8 Fuel filter - all vehicles</b> .....	<b>97</b>
8.1 Exploded view - fuel filter, R8 Coupé .....	97
8.2 Removing and installing fuel filter - R8 Coupé .....	98
8.3 Exploded view - fuel filter, R8 Spyder .....	99
8.4 Removing and installing fuel filter - R8 Spyder .....	100



<b>9</b>	<b>Activated charcoal filter system - rest-of-world vehicles</b>	<b>102</b>
9.1	Exploded view - activated charcoal filter system, R8 Coupé	102
9.2	Removing and installing activated charcoal filter - R8 Coupé	103
9.3	Exploded view - activated charcoal filter system, R8 Spyder	103
9.4	Removing and installing activated charcoal filter - R8 Spyder	104
9.5	Removing and installing bracket for activated charcoal filter - R8 Spyder	106
<b>10</b>	<b>Activated charcoal filter system and tank leak diagnostic system - USA vehicles</b>	<b>107</b>
10.1	Exploded view - activated charcoal filter system and tank leak diagnostic system	107
10.2	Removing and installing activated charcoal filter	110
10.3	Removing and installing bracket for activated charcoal filter (canister) - R8 Spyder	113
10.4	Removing and installing activated charcoal filter - R8 Spyder	113
10.5	Removing and installing air filter for activated charcoal filter (canister)	114
10.6	Routing of pipes/hoses for activated charcoal filter system and tank leak diagnostic system	115
10.7	Tank leak diagnostic system	118
10.8	Performing tank leak diagnosis	118
10.9	Removing and installing fuel system diagnostic pump V144	122
<b>11</b>	<b>Accelerator pedal module - all vehicles</b>	<b>124</b>
11.1	Exploded view - accelerator pedal module	124
11.2	Removing and installing accelerator pedal module with accelerator position sender G79 / G185	124