

001 - Basic equipment	1-34
1. Basic equipment	1
2. Battery, Battery isolation igniter	2
3. Starter, Alternator, Starter motor relay, Starter motor relay 2	3
4. Ignition/starter switch, Steering column electronics control unit	4
5. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit	5
6. Steering column electronics control unit	6
7. Fuse carrier 3, Fuse carrier 4	7
8. Onboard supply control unit, Terminal 15 voltage supply relay 2, Relay for power sockets	8
9. Onboard supply control unit	9
10. Light switch, Switch and instrument illumination regulator, Onboard supply control unit	10
11. Light switch, Deactivation switch for surround lighting, Daytime running lights switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit	11
12. Operating unit in front of centre console, Onboard supply control unit	12
13. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Washer pump relay, Front passenger side wiper motor control unit, Washer pump	13
14. Headlight washer system relay, Onboard supply control unit, Additional brake light bulb, Left washer jet heater element	14
15. Onboard supply control unit, Output module for left headlight	15
16. Onboard supply control unit, Output module for right headlight	16
17. Onboard supply control unit, Left brake and tail light bulb, Right brake and tail light bulb	17
18. Onboard supply control unit, Right reversing light bulb, Right brake and turn signal bulb, Left brake, turn signal and tail light bulb	18
19. Onboard supply control unit, Front left side marker bulb, Rear left side marker bulb, Rear fog light	19
20. Reversing light switch, Heated rear window relay, Onboard supply control unit, Left number plate light, Right number plate light	20
21. Brake light switch, Brake pedal switch, Bonnet contact switch, Clutch position sender, Onboard supply control unit	21
22. Glove compartment light switch, Onboard supply control unit, Terminal 30 voltage supply relay 2, Cigarette lighter, 12 V socket, Glove compartment light	22
23. Engine compartment light	23
24. Front interior light, Left footwell light, Right footwell light	24
25. Humidity sender, Light sensor, Automatic anti-dazzle interior mirror	25
26. Convenience system central control unit, 12 V socket 2, Tank filler flap locking motor, Luggage compartment light	26
27. Rear lid lock unit, Parking brake contact switch, Bonnet contact switch, Convenience system central control unit, Luggage compartment release solenoid, Rear lid central locking motor, Bonnet release motor	27
28. Control unit in dash panel insert, Data bus diagnostic interface	28
29. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	29
30. Control unit in dash panel insert, Radio controlled clock receiver	30
31. Brake fluid level warning contact, Washer fluid warning contact, Front left brake pad wear sender, Control unit in dash panel insert, Brake pad warning lamp	31
32. Coolant shortage indicator switch, Fuel gauge sender, Fuel gauge, Ambient temperature sensor, Control unit in dash panel insert	32
33. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	33
34. Relay for heated partition glass, Heated rear window, Heated partition glass	34
002 - 4.2l petrol engine , BYH	35-60
1. 4.2l petrol engine , BYH	35
2. Battery isolation igniter	36
3. Starter, Alternator, Starter motor relay, Starter motor relay 2	37
4. Main relay, Engine control unit, Engine component current supply relay	38
5. Engine control unit	39
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	40
7. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Camshaft control valve 1, Exhaust camshaft control valve 1	41
8. Accelerator position sender, Throttle valve module, Engine control unit	42
9. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	43
10. Engine speed sender, Coolant temperature sender, Brake servo pressure sensor, Fuel pressure sender for low pressure, Sender 1 for secondary air pressure, Engine control unit	44
11. Intake air temperature sender, Air mass meter, Engine control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Intake manifold flap valve	45
12. Secondary air pump relav. Engine control unit. Secondary air inlet valve. Riht electrohdraulic	46

engine mounting solenoid valve, Exhaust flap 1 valve, Secondary air pump motor	
13. Lambda probe, Lambda probe after catalytic converter, Engine control unit	47
14. Brake pedal switch, Clutch position sender, Engine control unit	48
15. Radiator fan control unit, Engine control unit, Radiator fan	49
16. Brake servo relay, Engine control unit, Vacuum pump for brakes	50
17. Engine control unit	51
18. Engine control unit 2	52
19. Engine control unit 2, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	53
20. Engine control unit 2, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 7, Injector, cylinder 8, Camshaft control valve 2, Exhaust camshaft control valve 2, Secondary air inlet valve 2	54
21. Hall sender 2, Knock sensor 3, Knock sensor 4, Hall sender 4, Throttle valve module 2, Engine control unit 2	55
22. Air mass meter 2, Intake manifold flap potentiometer 2, Engine control unit 2, Left electrohydraulic engine mounting solenoid valve, Fuel metering valve 2	56
23. Lambda probe 2, Continued coolant circulation relay, Engine control unit 2	57
24. Lambda probe 2 after catalytic converter, Engine control unit 2, Control relay	58
25. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert, Fuel pump control unit	59
26. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, Control unit in dash panel insert	60
003 - Automated manual gearbox (R tronic) 086	61-68
1. Automated manual gearbox (R tronic) 086	61
2. Automatic gearbox control unit, Fuse carrier 1	62
3. Automatic gearbox control unit	63
4. Brake light switch, Automatic gearbox control unit	64
5. Automatic gearbox control unit, Gearbox hydraulic pump relay, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3, Hydraulic pump for gearbox	65
6. Gear detection sensor, Sensor 2 for gear detection, Automatic gearbox control unit, Clutch actuator valve	66
7. Gearbox input speed sender, Gearbox hydraulic pressure sender, Automatic gearbox control unit	67
8. Sport program button, Clutch position sender, Automatic gearbox control unit, Selector lever sensors control unit, Selected range display	68
004 - Airbag systems	69-74
1. Airbag systems	69
2. Airbag control unit, Data bus diagnostic interface	70
3. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 2, Driver side airbag igniter 2	71
4. Airbag control unit, Driver seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	72
5. Driver side belt switch, Front passenger side belt switch, Side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Driver side roll-over bar solenoid, Front passenger side roll-over bar solenoid	73
6. Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp	74
005 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	75-80
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	75
2. ABS control unit, ABS control unit fuse 1	76
3. TCS and ESP button, Brake light switch, Brake pressure sender 1, ABS control unit	77
4. Rear left speed sensor, Front left speed sensor, ABS control unit	78
5. ESP sensor unit, ABS control unit, ABS hydraulic unit	79
6. ABS control unit	80
006 - Air conditioning system	81-89
1. Air conditioning system	81
2. Climatronic control unit	82
3. Fresh air blower control unit, Climatronic control unit, Fuse 6 on fuse holder B, Fresh air blower	83
4. Refrigerant pressure and temperature sender, Climatronic control unit, Left heat regulation valve, Right heat regulation valve, Air conditioner compressor regulating valve	84
5. Climatronic control unit, Centre vent control motor, Front cold air flap control motor, Footwell flap control motor	85
6. Left vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Defroster flap control motor. Side vent control motor	86

7. Fresh air intake duct temperature sensor, Climatronic control unit, Air flow flap control motor, Air recirculation flap control motor	87
8. Sunlight penetration photosensor, Centre left vent sender, Climatronic control unit, Coolant circulation pump	88
9. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit	89
007 - Convenience system	90-108
1. Convenience system	90
2. Driver door control unit	91
3. Driver door control unit	92
4. Driver door control unit, Central locking SAFELOCK function warning lamp	93
5. Driver side central locking lock unit, Driver door control unit	94
6. Alarm system off switch, Driver door control unit	95
7. Rear lid remote release button, Fuel tank flap release button, Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	96
8. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver door control unit, Front left entry light	97
9. Driver door control unit, Driver side mirror adjustment motor	98
10. Front passenger door control unit	99
11. Front passenger side central locking lock unit, Front passenger door control unit	100
12. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front right entry light	101
13. Front passenger door control unit, Front passenger side mirror adjustment motor, Front passenger side automatic anti-dazzle exterior mirror, Heated exterior mirror on front passenger side	102
14. Onboard supply control unit	103
15. Light switch, Bonnet contact switch, Onboard supply control unit	104
16. Rear lid lock unit, Bonnet contact switch, Convenience system central control unit, Luggage compartment release solenoid, Rear lid central locking motor, Bonnet release motor	105
17. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Central locking and anti-theft alarm system aerial, Tank filler flap locking motor	106
18. Adjustable rear spoiler switch, Convenience system central control unit	107
19. Rear lid release switch, Rear lid central locking relay, Rear lid release motor	108
008 - Automatic adaptive suspension, adjustable dampers	109-113
1. Automatic adaptive suspension, adjustable dampers	109
2. Electronically controlled damping control unit	110
3. Shock absorber damping adjustment button, Operating unit in front of centre console, Electronically controlled damping control unit, Shock absorber damping adjustment warning lamp	111
4. Front left vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	112
5. Rear left vehicle level sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve	113
009 - Tyre Pressure Monitoring System	114-116
1. Tyre Pressure Monitoring System	114
2. Tyre Pressure Monitoring System control unit	115
3. Front left tyre pressure sensor, Rear left tyre pressure sensor, Tyre Pressure Monitoring System control unit	116
010 - CAN bus network	117-125
1. CAN bus network	117
2. Connection 1 (powertrain CAN bus, high), in main wiring harness	118
3. Connection 1 (powertrain CAN bus, low), in main wiring harness	119
4. Connection (high bus), in engine compartment wiring harness, Connection (low bus), in engine compartment wiring harness	120
5. Connection 1 (convenience CAN bus, high), in main wiring harness	121
6. Connection 1 (convenience CAN bus, low), in main wiring harness	122
7.	123
8. Connection 1 (infotainment CAN bus, high), in main wiring harness, Connection 1 (infotainment CAN bus, low), in main wiring harness	124
9. Connection 2 (infotainment CAN bus, high), in main wiring harness, Connection 2 (infotainment CAN bus, low), in main wiring harness	125
011 - Front and rear parking aid (PDC)	126-130
1. Front and rear parking aid (PDC)	126
2. Parking aid control unit, Fuse carrier 2, Fuse carrier 4	127
3. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	128
4. Rear centre left parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	129
5. Parking aid button. Operating unit in front of centre console. Parking aid control unit. Parking aid control unit.	130

aid warning lamp	
012 - Garage door opener	131-133
1. Garage door opener	131
2. Garage door operating unit, Garage door operation control unit	132
3. Garage door operating unit, Garage door opener button 1	133
013 - Steering wheel with paddles	134-136
1. Steering wheel with paddles	134
2. Steering column electronics control unit	135
3. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Horn plate, Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter 2	136
014 - Multifunction steering wheel	137-142
1. Multifunction steering wheel	137
2. Steering column electronics control unit	138
3. Operating unit in steering wheel, Horn plate, Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter 2	139
4. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise control system switch, Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Steering column electronics control unit	140
5. Ignition/starter switch, Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Steering angle sender, Steering column electronics control unit, Ignition key withdrawal lock solenoid	141
6. Control unit in dash panel insert, Data bus diagnostic interface	142
015 - Adjustable driver and front passenger seats	143-148
1. Adjustable driver and front passenger seats	143
2. Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Driver seat height adjustment motor, Seat longitudinal adjustment motor	144
3. Driver seat backrest limit switch, Driver seat adjustment operating unit	145
4. Front passenger seat adjustment operating unit, Front passenger seat height adjustment motor, Seat longitudinal adjustment motor	146
5. Front passenger seat backrest limit switch, Front passenger seat adjustment operating unit	147
6. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch	148
016 - Electrically adjustable lumbar support	149-151
1. Electrically adjustable lumbar support	149
2. Driver seat lumbar support adjustment switch	150
3. Front passenger seat lumbar support adjustment switch	151
017 - Heated seats	152-154
1. Heated seats	152
2. Climatronic control unit	153
3. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit, Heated seat cushion for front left seat, Heated seat cushion for front right seat	154
018 - Preparation for mobile telephone with no hands-free system (infotainment CAN bus)	155-157
1. Preparation for mobile telephone with no hands-free system (infotainment CAN bus)	155
2. Fuse carrier 2, Fuse carrier 4	156
3. Telephone microphone, Radio and telephone aerial, Microphone unit in front roof module, 18-pin connector	157
019 - Preparation for mobile telephone	158-162
1. Preparation for mobile telephone	158
2. Telephone transmitter and receiver unit	159
3. Telephone transmitter and receiver unit, Aerial for Bluetooth, Microphone unit in front roof module	160
4. Telephone transmitter and receiver unit, Mobile telephone, Telephone bracket	161
5. Radio and telephone aerial, Aerial amplifier for mobile telephone, Telephone bracket	162
020 - Radio with Standard sound system	163-171
1. Radio with Standard sound system	163
2. Data bus diagnostic interface, Radio	164
3. Digital sound package control unit, Radio	165
4. Digital sound package control unit, Radio, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	166
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	167
6. Radio	168
7. Radio, CD changer	169
8. Radio	170
9. Aerial selection control unit. Aerial. Aerial amplifier. Radio aerial 2. Aerial amplifier 3	171

021 - Radio with Bang & Olufsen sound system	172-181
1. Radio with Bang & Olufsen sound system	172
2. Data bus diagnostic interface, Radio	173
3. Digital sound package control unit, Radio	174
4. Digital sound package control unit, Radio, Internal microphone, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	175
5. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker, Rear left mid-range and bass loudspeaker	176
6. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker	177
7. Digital sound package control unit, Radio, Rear right treble loudspeaker, Middle loudspeaker, Rear right mid-range and bass loudspeaker	178
8. Radio, CD changer	179
9. Radio	180
10. Aerial selection control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	181
022 - Radio navigation system (RNS-E)	182-197
1. Radio navigation system (RNS-E)	182
2. Navigation system with CD drive control unit, Connection for external audio sources	183
3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface	184
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	185
5. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	186
6. Navigation system with CD drive control unit, Digital sound package control unit	187
7. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	188
8. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Internal microphone, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	189
9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	190
10. Navigation system with CD drive control unit, CD changer	191
11. Navigation system with CD drive control unit, iPod holder	192
12. Navigation system with CD drive control unit, iPod holder	193
13. Navigation system with CD drive control unit, Reversing camera system control unit, Reversing camera	194
14. Navigation system with CD drive control unit, Reversing camera system control unit	195
15. Navigation system with CD drive control unit, Reversing camera system control unit	196
16. Navigation system with CD drive control unit, Aerial selection control unit, Aerial, Aerial amplifier, GPS aerial, Radio aerial 2, Aerial amplifier 3	197
023 - Airbag systems (US equipment)	198-204
1. Airbag systems (US equipment)	198
2. Airbag control unit, Data bus diagnostic interface	199
3. Airbag coil connector and return ring with slip ring, Airbag control unit, Driver side airbag igniter, Front passenger side airbag igniter 2, Driver side airbag igniter 2	200
4. Airbag control unit, Driver seat belt tensioner igniter 1, Side airbag igniter on driver side, Side airbag igniter on front passenger side	201
5. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Front passenger side airbag deactivated warning lamp, Driver side knee airbag igniter, Front passenger side knee airbag igniter	202
6. Driver side belt switch, Side airbag crash sensor on driver side, Airbag control unit, Driver side roll-over bar solenoid, Front passenger side roll-over bar solenoid	203
7. Front passenger side belt switch, Pressure sensor for seat occupied recognition, Seat belt force sensor for seat occupied recognition, Airbag control unit, Seat occupied recognition control unit	204
024 - Radio with Standard sound system with satellite radio	205-214
1. Radio with Standard sound system with satellite radio	205
2. Radio	206
3. Digital sound package control unit, Data bus diagnostic interface, Radio	207
4. Digital sound package control unit, Radio, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	208
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	209

6. Radio, CD changer	210
7. Radio, CD changer, Satellite radio	211
8. Radio, iPod holder	212
9. Radio, Satellite radio, iPod holder	213
10. Aerial selection control unit, Radio, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3, Satellite aerial	214
025 - Radio with Bang & Olufsen sound system with satellite radio	215-226
1. Radio with Bang & Olufsen sound system with satellite radio	215
2. Radio	216
3. Digital sound package control unit, Data bus diagnostic interface, Radio	217
4. Digital sound package control unit, Radio, Internal microphone, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	218
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker	219
6. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker, Rear left mid-range and bass loudspeaker	220
7. Digital sound package control unit, Radio, Rear right treble loudspeaker, Middle loudspeaker, Rear right mid-range and bass loudspeaker	221
8. Radio, CD changer	222
9. Radio, CD changer, Satellite radio	223
10. Radio, iPod holder	224
11. Radio, Satellite radio, iPod holder	225
12. Aerial selection control unit, Radio, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3, Satellite aerial	226
026 - Radio navigation system, satellite radio	227-243
1. Radio navigation system, satellite radio	227
2. Navigation system with CD drive control unit, Connection for external audio sources	228
3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface	229
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	230
5. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	231
6. Navigation system with CD drive control unit, Digital sound package control unit	232
7. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	233
8. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Internal microphone, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	234
9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	235
10. Navigation system with CD drive control unit, CD changer	236
11. Navigation system with CD drive control unit, CD changer, Satellite radio	237
12. Navigation system with CD drive control unit, iPod holder	238
13. Navigation system with CD drive control unit, Satellite radio, iPod holder	239
14. Navigation system with CD drive control unit, Reversing camera system control unit, Reversing camera	240
15. Navigation system with CD drive control unit, Reversing camera system control unit	241
16. Navigation system with CD drive control unit, Reversing camera system control unit	242
17. Navigation system with CD drive control unit, Aerial selection control unit, Aerial, Aerial amplifier, GPS aerial, Radio aerial 2, Aerial amplifier 3, Satellite aerial	243
027 - Navigation system, Japan only	244-251
1. Navigation system, Japan only	244
2. Navigation system with CD drive control unit, Data bus diagnostic interface	245
3. Navigation system with CD drive control unit, Digital sound package control unit	246
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	247
5. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	248
6. Navigation system with CD drive control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	249
7. Navigation system with CD drive control unit. GPS aerial. TV aerial 3. Aerial amplifier 4.	250

Microphone unit in front roof module	
8. Navigation system with CD drive control unit, TV card reader	251
028 - LED headlights	252-257
1. LED headlights	252
2. Onboard supply control unit	253
3. Onboard supply control unit, Front left headlight	254
4. Onboard supply control unit, Front left headlight	255
5. Onboard supply control unit, Front right headlight	256
6. Onboard supply control unit, Front right headlight	257
029 - Interface for special functions	258-260
1. Interface for special functions	258
2. Fuse 2 on fuse holder D, Fuse 2 (30), 12-pin connector	259
3. 12-pin connector	260
030 - 5.2l petrol engine , BUJ,CMPA,CTPA,CTYA,CJJA,CTPB	261-290
1. 5.2l petrol engine , BUJ,CMPA,CTPA,CTYA,CJJA,CTPB	261
2. Battery isolation igniter	262
3. Starter, Alternator, Starter motor relay, Starter motor relay 2	263
4. Main relay, Engine control unit, Engine component current supply relay	264
5. Engine control unit	265
6. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	266
7. Engine control unit	267
8. Accelerator position sender, Throttle valve module, Engine control unit	268
9. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	269
10. Engine speed sender, Coolant temperature sender, Fuel pressure sender for low-pressure, Engine control unit	270
11. Intake air temperature sender, Air mass meter, Brake servo pressure sensor, Engine control unit	271
12. Engine control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Right electrohydraulic engine mounting solenoid valve, Fuel metering valve, Exhaust flap 1 valve	272
13. Secondary air pump relay, Brake servo relay, Engine control unit, Secondary air pump motor, Vacuum pump for brakes	273
14. Engine control unit	274
15. Lambda probe, Lambda probe after catalytic converter, Engine control unit	275
16. Brake pedal switch, Clutch position sender, Engine control unit	276
17. Radiator fan control unit, Engine control unit, Radiator fan	277
18. Engine control unit	278
19. Throttle valve module 2, Engine control unit 2	279
20. Engine control unit 2, Injector, cylinder 6, Injector, cylinder 7, Injector, cylinder 8, Injector, cylinder 9, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage, Ignition coil 9 with output stage	280
21. Knock sensor 3, Knock sensor 4, Engine control unit 2	281
22. Hall sender 2, Hall sender 4, Intake manifold flap potentiometer 2, Engine control unit 2	282
23. Air mass meter 2, Sender 2 for secondary air pressure, Engine control unit 2, Camshaft control valve 2	283
24. Secondary air pump 2 relay, Engine control unit 2, Activated charcoal filter system solenoid valve 2, Fuel metering valve 2, Secondary air pump motor 2	284
25. Lambda probe 2, Lambda probe 2 after catalytic converter, Engine control unit 2, Control relay	285
26. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert	286
27. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, Control unit in dash panel insert	287
28. Battery isolation unit 2, Motronic current supply relay 2, Optional equipment main fuse	288
29. Blocking diode, Terminal 15 relay, Emergency "OFF" relay	289
30. Emergency "OFF" switch 1, Emergency "OFF" switch 2, Emergency "OFF" warning lamp	290
031 - Basic equipment	291-327
1. Basic equipment	291
2. Battery, Battery monitor control unit, Battery isolation igniter	292
3. Starter, Alternator, Starter motor relay	293
4. Ignition/starter switch, Steering column electronics control unit	294
5. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit	295
6. Steering column electronics control unit	296
7. Fuse carrier 3, Fuse carrier 4	297
8. Terminal 15 voltage supply relay, Relay for power sockets	298
9. Onboard supply control unit	299
10. Light switch. Switch and instrument illumination regulator. Onboard supply control unit	300

11. Light switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit	301
12. Operating unit in front of centre console, Onboard supply control unit	302
13. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Front passenger side wiper motor control unit, Washer pump	303
14. Headlight washer system relay, Onboard supply control unit, High-level brake light bulb, Left washer jet heater element	304
15. Onboard supply control unit, Output module for left headlight	305
16. Onboard supply control unit, Output module for right headlight	306
17. Onboard supply control unit, Left brake and tail light bulb, Right brake and tail light bulb	307
18. Onboard supply control unit, Right reversing light bulb, Right brake and turn signal bulb, Left brake, turn signal and tail light bulb	308
19. Onboard supply control unit, Right tail light bulb, Left tail light bulb	309
20. Onboard supply control unit, Right brake and turn signal bulb	310
21. Onboard supply control unit, Front left side marker bulb, Rear left side marker bulb, Rear fog light	311
22. Reversing light switch, Heated rear window relay, Onboard supply control unit, Left number plate light, Right number plate light	312
23. Brake light switch, Brake pedal switch, Bonnet contact switch, Clutch position sender, Onboard supply control unit	313
24. Onboard supply control unit, 12 V socket 2, Tank filler flap locking motor, Luggage compartment light	314
25. Rear lid lock unit, Parking brake contact switch, Bonnet contact switch, Onboard supply control unit, Luggage compartment release solenoid, Rear lid central locking motor, Bonnet release motor	315
26. Glove compartment light switch, Onboard supply control unit, Storage compartment illumination bulb, Cigarette lighter, 12 V socket, Glove compartment light	316
27. Engine compartment light	317
28. Front interior light, Left footwell light, Right footwell light	318
29. Humidity sender, Light sensor, Automatic anti-dazzle interior mirror	319
30. Main beam assist control unit, Automatic anti-dazzle interior mirror	320
31. Control unit in dash panel insert, Data bus diagnostic interface	321
32. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	322
33. Control unit in dash panel insert, Radio controlled clock receiver	323
34. Brake fluid level warning contact, Washer fluid warning contact, Front left brake pad wear sender, Front right brake pad wear sender, Control unit in dash panel insert, Brake pad warning lamp	324
35. Coolant shortage indicator switch, Fuel gauge sender, Fuel gauge, Ambient temperature sensor, Control unit in dash panel insert	325
36. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	326
37. Bonnet contact switch, High-level brake light bulb, Heated partition glass	327
032 - Radio navigation system	328-337
1. Radio navigation system	328
2. Navigation system with CD drive control unit, Data bus diagnostic interface	329
3. Navigation system with CD drive control unit, Digital sound package control unit	330
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	331
5. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	332
6. Navigation system with CD drive control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	333
7. Navigation system with CD drive control unit, GPS aerial, TV aerial 3, Aerial amplifier 4, Microphone unit in front roof module	334
8. Navigation system with CD drive control unit, TV card reader	335
9. Navigation system with CD drive control unit, Reversing camera system control unit, Reversing camera	336
10. Navigation system with CD drive control unit, Reversing camera system control unit	337
033 - Convenience system	338-356
1. Convenience system	338
2. Driver door control unit	339
3. Driver door control unit	340
4. Microswitch for lowering driver window, Driver door control unit, Central locking SAFELOCK function warning lamp	341
5. Driver side central locking lock unit, Driver door control unit	342
6. Alarm system off switch, Driver door control unit	343
7. Rear lid remote release button, Fuel tank flap release button, Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	344
8. Mirror adjustment switch. Driver side interior locking button for central locking system. Driver	345

door control unit, Driver side door interior handle illumination bulb, Driver side door warning lamp, Front left entry light	
9. Driver door control unit, Driver side mirror adjustment motor	346
10. Front passenger door control unit	347
11. Microswitch for lowering front passenger window, Front passenger side central locking lock unit, Front passenger door control unit	348
12. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side door interior handle illumination bulb, Front right entry light, Front passenger side door warning lamp	349
13. Front passenger door control unit, Front passenger side mirror adjustment motor, Front passenger side automatic anti-dazzle exterior mirror, Heated exterior mirror on front passenger side	350
14. Onboard supply control unit	351
15. Rear lid lock unit, Bonnet contact switch, Onboard supply control unit, Luggage compartment release solenoid, Rear lid central locking motor, Bonnet release motor	352
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial	353
17. Adjustable rear spoiler switch, Onboard supply control unit	354
18. Bonnet contact switch, Onboard supply control unit, Tank filler flap locking motor, Light conductor for front left sill panel moulding ambient lighting, Light conductor for front right sill panel moulding ambient lighting	355
19. Rear lid release switch, Rear lid central locking relay, Rear lid release motor	356
034 - Automated manual gearbox (R tronic) 086	357-364
1. Automated manual gearbox (R tronic) 086	357
2. Automatic gearbox control unit, Fuse carrier 1	358
3. Automatic gearbox control unit	359
4. Brake light switch, Automatic gearbox control unit	360
5. Automatic gearbox control unit, Gearbox hydraulic pump relay, Selector lever valve 1, Selector lever valve 2, Selector lever valve 3, Hydraulic pump for gearbox	361
6. Gearbox hydraulic pressure sender, Gear detection sensor, Sensor 2 for gear detection, Automatic gearbox control unit, Clutch actuator valve	362
7. Gearbox input speed sender, Clutch position sender, Automatic gearbox control unit, Selector lever sensors control unit	363
8. Sport program button, Selector lever sensors control unit, Selector lever position display	364
035 - Radio with Standard sound system	365-373
1. Radio with Standard sound system	365
2. Data bus diagnostic interface, Radio	366
3. Digital sound package control unit, Radio	367
4. Digital sound package control unit, Radio, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	368
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	369
6. Radio	370
7. Radio, CD changer	371
8. Radio	372
9. Aerial selection control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	373
036 - Radio with Bang & Olufsen sound system	374-383
1. Radio with Bang & Olufsen sound system	374
2. Data bus diagnostic interface, Radio	375
3. Digital sound package control unit, Radio	376
4. Digital sound package control unit, Radio, Internal microphone, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	377
5. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker, Rear left mid-range and bass loudspeaker	378
6. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker	379
7. Digital sound package control unit, Radio, Rear right treble loudspeaker, Middle loudspeaker, Rear right mid-range and bass loudspeaker	380
8. Radio, CD changer	381
9. Radio	382
10. Aerial selection control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	383
037 - CAN bus network	384-391
1. CAN bus network	384
2. Connection 1 (powertrain CAN bus, high), in main wiring harness	385
3. Connection 1 (powertrain CAN bus, low), in main wiring harness	386
4. Connection (high bus), in engine compartment wiring harness, Connection (low bus), in engine compartment wiring harness	387

5. Connection 1 (convenience CAN bus, high), in main wiring harness	388
6. Connection 1 (convenience CAN bus, low), in main wiring harness	389
7. Connection 1 (infotainment CAN bus, high), in main wiring harness, Connection 1 (infotainment CAN bus, low), in main wiring harness	390
8. Connection 2 (infotainment CAN bus, high), in main wiring harness, Connection 2 (infotainment CAN bus, low), in main wiring harness	391
038 - Multifunction steering wheel	392-397
1. Multifunction steering wheel	392
2. Steering column electronics control unit	393
3. Operating unit in steering wheel, Horn plate, Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter 2	394
4. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise control system switch, Operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, Steering column electronics control unit	395
5. Ignition/starter switch, Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Steering angle sender, Steering column electronics control unit, Ignition key withdrawal lock solenoid	396
6. Control unit in dash panel insert, Data bus diagnostic interface	397
039 - Steering wheel with paddles	398-400
1. Steering wheel with paddles	398
2. Steering column electronics control unit	399
3. Operating unit in steering wheel, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Horn plate, Steering column electronics control unit, Driver side airbag igniter, Driver side airbag igniter 2	400
040 - Air conditioning system	401-409
1. Air conditioning system	401
2. Climatronic control unit	402
3. Fresh air blower control unit, Climatronic control unit, Fuse 6 on fuse holder B, Fresh air blower	403
4. Refrigerant pressure and temperature sender, Climatronic control unit, Left heat regulation valve, Right heat regulation valve, Air conditioner compressor regulating valve	404
5. Climatronic control unit, Centre vent control motor, Front cold air flap control motor, Footwell flap control motor	405
6. Left vent temperature sender, Evaporator output temperature sender, Climatronic control unit, Defroster flap control motor, Side vent control motor	406
7. Fresh air intake duct temperature sensor, Climatronic control unit, Air flow flap control motor, Air recirculation flap control motor	407
8. Sunlight penetration photosensor, Centre left vent sender, Climatronic control unit, Coolant circulation pump	408
9. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit	409
041 - LED headlights	410-415
1. LED headlights	410
2. Onboard supply control unit	411
3. Onboard supply control unit, Front left headlight	412
4. Onboard supply control unit, Front left headlight	413
5. Onboard supply control unit, Front right headlight	414
6. Onboard supply control unit, Front right headlight	415
042 - Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	416-421
1. Anti-lock brake system (ABS) with electronic differential lock (EDL) and traction control system (TCS) and electronic stabilisation program (ESP)	416
2. ABS control unit, ABS control unit fuse 1	417
3. TCS and ESP button, Brake light switch, Brake pressure sender 1, ABS control unit	418
4. Rear left speed sensor, Front left speed sensor, ABS control unit	419
5. ESP sensor unit, ABS control unit, ABS hydraulic unit	420
6. ABS control unit	421
043 - Garage door opener	422-424
1. Garage door opener	422
2. Garage door operating unit, Garage door operation control unit	423
3. Garage door operating unit, Garage door opener button 1, Onboard supply control unit	424
044 - Front and rear parking aid (PDC)	425-429
1. Front and rear parking aid (PDC)	425
2. Parking aid control unit, Fuse carrier 2	426
3. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	427
4. Rear centre left parking aid sender. Rear right parking aid sender. Rear parking aid warning	428

buzzer, Parking aid control unit	
5. Parking aid button, Operating unit in front of centre console, Parking aid control unit, Parking aid warning lamp	429
045 - Preparation for mobile telephone (Bluetooth)	430-432
1. Preparation for mobile telephone (Bluetooth)	430
2. Data bus diagnostic interface, Telephone transmitter and receiver unit	431
3. Telephone transmitter and receiver unit, Telephone microphone, Aerial for Bluetooth, Microphone unit in front roof module	432
046 - Radio navigation system (RNS-E)	433-448
1. Radio navigation system (RNS-E)	433
2. Navigation system with CD drive control unit, Connection for external audio sources	434
3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface	435
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	436
5. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	437
6. Navigation system with CD drive control unit, Digital sound package control unit	438
7. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	439
8. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Internal microphone, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	440
9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	441
10. Navigation system with CD drive control unit, CD changer	442
11. Navigation system with CD drive control unit, iPod holder	443
12. Navigation system with CD drive control unit, iPod holder	444
13. Navigation system with CD drive control unit	445
14. Navigation system with CD drive control unit, Reversing camera system control unit, Reversing camera	446
15. Navigation system with CD drive control unit, Reversing camera system control unit	447
16. Navigation system with CD drive control unit, Aerial selection control unit, Aerial, Aerial amplifier, GPS aerial, Radio aerial 2, Aerial amplifier 3	448
047 - Radio navigation system, satellite radio	449-466
1. Radio navigation system, satellite radio	449
2. Navigation system with CD drive control unit, Connection for external audio sources	450
3. Navigation system with CD drive control unit, Digital sound package control unit, Data bus diagnostic interface	451
4. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	452
5. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	453
6. Navigation system with CD drive control unit, Digital sound package control unit	454
7. Navigation system with CD drive control unit, Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	455
8. Navigation system with CD drive control unit, Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Internal microphone, Middle loudspeaker, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	456
9. Navigation system with CD drive control unit, Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear left mid-range and bass loudspeaker, Rear right mid-range and bass loudspeaker	457
10. Navigation system with CD drive control unit, CD changer	458
11. Navigation system with CD drive control unit, CD changer, Satellite radio	459
12. Navigation system with CD drive control unit, iPod holder	460
13. Navigation system with CD drive control unit, Satellite radio, iPod holder	461
14. Navigation system with CD drive control unit, Satellite radio	462
15. Navigation system with CD drive control unit	463
16. Navigation system with CD drive control unit, Reversing camera system control unit, Reversing camera	464
17. Navigation system with CD drive control unit, Reversing camera system control unit	465

18. Navigation system with CD drive control unit, Aerial selection control unit, Aerial, Aerial amplifier, GPS aerial, Radio aerial 2, Aerial amplifier 3, Satellite aerial	466
048 - Radio with Bang & Olufsen sound system with satellite radio	467-480
1. Radio with Bang & Olufsen sound system with satellite radio	467
2. Radio	468
3. Digital sound package control unit, Data bus diagnostic interface, Radio	469
4. Digital sound package control unit, Radio, Internal microphone, Centre mid-range and treble loudspeaker, Microphone unit in front roof module	470
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker	471
6. Digital sound package control unit, Radio, Rear left treble loudspeaker, Front right treble loudspeaker, Front right mid-range loudspeaker, Rear left mid-range and bass loudspeaker	472
7. Digital sound package control unit, Radio, Rear right treble loudspeaker, Middle loudspeaker, Rear right mid-range and bass loudspeaker	473
8. Radio, CD changer	474
9. Radio, CD changer, Satellite radio	475
10. Radio	476
11. Radio, Satellite radio	477
12. Radio, Satellite radio	478
13. Aerial selection control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	479
14. Satellite aerial	480
049 - Radio with Standard sound system with satellite radio	481-492
1. Radio with Standard sound system with satellite radio	481
2. Radio	482
3. Digital sound package control unit, Data bus diagnostic interface, Radio	483
4. Digital sound package control unit, Radio, Front left bass loudspeaker, Front right bass loudspeaker, Centre mid-range and treble loudspeaker	484
5. Digital sound package control unit, Radio, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	485
6. Radio, CD changer	486
7. Radio, CD changer, Satellite radio	487
8. Radio	488
9. Radio, Satellite radio	489
10. Radio, Satellite radio	490
11. Aerial selection control unit, Aerial, Aerial amplifier, Radio aerial 2, Aerial amplifier 3	491
12. Satellite aerial	492
050 - Power operated convertible roof	493-503
1. Power operated convertible roof	493
2. Convertible roof actuation control unit	494
3. Convertible roof actuation button, Button to open rear window, Convertible roof actuation control unit	495
4. Convertible roof actuation control unit, Convertible roof actuation hydraulic pump relay, Hydraulic pump relay 2 for convertible roof, Convertible roof actuation hydraulic pump	496
5. Convertible roof actuation control unit, Power operated convertible roof valve 1	497
6. Convertible roof actuation control unit, Rear window motor relay 1, Rear window motor relay 2, Rear window motor, Heated rear window	498
7. Convertible roof front switch, Front right convertible roof switch, Convertible roof actuation control unit, Right convertible roof flap motor, Left convertible roof flap motor	499
8. Convertible roof flap retracted switch, left, Convertible roof flap extended switch, left, Convertible roof flap centre position switch, left, Convertible roof actuation control unit	500
9. Convertible roof stowed switch, Convertible roof latch open switch, Convertible roof compartment lid open switch, Tensioning strut stowed switch, left, Upper right tensioning strut switch, Convertible roof actuation control unit	501
10. Left latch switch for convertible roof, Right latch switch for convertible roof, Convertible roof compartment lid locked switch, left, Convertible roof actuation control unit	502
11. Rear window switch, bottom, Tensioning strut stowed switch, right, Convertible roof compartment lid released switch, right, Convertible roof actuation control unit	503
051 - Preparation for mobile telephone	504-511
1. Preparation for mobile telephone	504
2. Telephone transmitter and receiver unit	505
3. Telephone transmitter and receiver unit, Aerial for Bluetooth	506
4. Telephone transmitter and receiver unit, Mobile telephone, Telephone bracket	507
5. Radio and telephone aerial, Aerial amplifier for mobile telephone, Telephone bracket	508
6. Control unit for seat belt microphone, Microphone unit in front roof module	509
7. Control unit for seat belt microphone, Driver seat belt tensioner igniter 1, Microphone 1 on driver side. Microphone 2 on driver side. Microphone 3 on driver side	510

8. Control unit for seat belt microphone, Front passenger seat belt tensioner igniter 1, Microphone 1 on front passenger side, Microphone 2 on front passenger side, Microphone 3 on front passenger side	511
052 - 4.2l petrol engine , CNDA	512-535
1. 4.2l petrol engine , CNDA	512
2. Battery isolation igniter	513
3. Starter, Alternator, Starter motor relay, Starter motor relay 2	514
4. Main relay, Engine control unit, Engine component current supply relay	515
5. Engine control unit	516
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	517
7. Oil temperature sender 2, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Camshaft control valve 1, Intake manifold flap valve, Exhaust camshaft control valve 1	518
8. Accelerator position sender, Throttle valve module, Engine control unit	519
9. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	520
10. Engine speed sender, Coolant temperature sender, Brake servo pressure sensor, Fuel pressure sender for low-pressure, Sender 1 for secondary air pressure, Engine control unit	521
11. Intake air temperature sender, Air mass meter, Engine control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve	522
12. Secondary air pump relay, Engine control unit, Secondary air inlet valve, Right electrohydraulic engine mounting solenoid valve, Exhaust flap 1 valve, Secondary air pump motor	523
13. Lambda probe, Lambda probe after catalytic converter, Engine control unit	524
14. Brake pedal switch, Clutch position sender, Engine control unit	525
15. Radiator fan control unit, Brake servo relay, Engine control unit, Radiator fan	526
16. Engine control unit, Vacuum pump for brakes	527
17. Engine control unit 2	528
18. Engine control unit 2, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage	529
19. Secondary air pump 2 relay, Engine control unit 2, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 7, Injector, cylinder 8, Camshaft control valve 2, Exhaust camshaft control valve 2, Secondary air pump motor 2	530
20. Hall sender 2, Knock sensor 3, Knock sensor 4, Hall sender 4, Throttle valve module 2, Engine control unit 2	531
21. Air mass meter 2, Intake manifold flap potentiometer 2, Sender 2 for secondary air pressure, Continued coolant circulation relay, Engine control unit 2, Left electrohydraulic engine mounting solenoid valve, Fuel metering valve 2	532
22. Lambda probe 2, Lambda probe 2 after catalytic converter, Engine control unit 2, Control relay	533
23. Fuel gauge sender, Fuel system pressurisation pump, Control unit in dash panel insert	534
24. Oil pressure switch, Coolant shortage indicator switch, Oil level and oil temperature sender, Control unit in dash panel insert	535
053 - Basic equipment, right-hand drive	536-570
1. Basic equipment, right-hand drive	536
2. Battery, Battery monitor control unit, Battery isolation igniter	537
3. Starter, Alternator, Starter motor relay	538
4. Ignition/starter switch, Steering column electronics control unit	539
5. Turn signal switch, Headlight dipper and flasher switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit	540
6. Steering column electronics control unit	541
7. Fuse carrier 3, Fuse carrier 4	542
8. Terminal 15 voltage supply relay, Relay for power sockets	543
9. Onboard supply control unit	544
10. Light switch, Switch and instrument illumination regulator, Onboard supply control unit	545
11. Light switch, Treble horn, Bass horn, Horn relay, Onboard supply control unit	546
12. Operating unit in front of centre console, Onboard supply control unit	547
13. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Front passenger side wiper motor control unit, Washer pump	548
14. Headlight washer system relay, Onboard supply control unit, Additional brake light bulb, Left washer jet heater element	549
15. Onboard supply control unit, Output module for left headlight	550
16. Onboard supply control unit, Output module for right headlight	551
17. Onboard supply control unit, Left brake and tail light bulb, Right brake and tail light bulb	552
18. Onboard supply control unit, Right tail light bulb, Left tail light bulb	553
19. Onboard supply control unit, Rear fog light, Left number plate light, Right number plate light	554
20. Reversing light switch, Heated rear window relay, Onboard supply control unit	555
21. Brake light switch. Brake pedal switch. Bonnet contact switch. Clutch position sender. Onboard	556

supply control unit	
22. Onboard supply control unit, 12 V socket 2, Tank filler flap locking motor, Luggage compartment light	557
23. Rear lid lock unit, Parking brake contact switch, Bonnet contact switch, Onboard supply control unit, Rear lid central locking motor, Bonnet release motor	558
24. Glove compartment light switch, Onboard supply control unit, Storage compartment illumination bulb, Cigarette lighter, 12 V socket, Glove compartment light	559
25. Engine compartment light	560
26. Front interior light, Left footwell light, Right footwell light	561
27. Humidity sender, Light sensor, Automatic anti-dazzle interior mirror	562
28. Main beam assist control unit, Automatic anti-dazzle interior mirror	563
29. Control unit in dash panel insert, Data bus diagnostic interface	564
30. Immobiliser reader coil, Control unit in dash panel insert, Data bus diagnostic interface	565
31. Control unit in dash panel insert, Radio controlled clock receiver	566
32. Brake fluid level warning contact, Washer fluid warning contact, Front left brake pad wear sender, Front right brake pad wear sender, Control unit in dash panel insert, Brake pad warning lamp	567
33. Coolant shortage indicator switch, Fuel gauge sender, Fuel gauge, Ambient temperature sensor, Control unit in dash panel insert	568
34. Oil pressure switch, Oil level and oil temperature sender, Control unit in dash panel insert	569
35. Bonnet contact switch, Additional brake light bulb, Heated partition glass	570
054 - Convenience system, right-hand drive	571-589
1. Convenience system, right-hand drive	571
2. Driver door control unit	572
3. Driver door control unit	573
4. Microswitch for lowering driver window, Driver door control unit, Central locking SAFELOCK function warning lamp	574
5. Driver side central locking lock unit, Driver door control unit	575
6. Alarm system off switch, Driver door control unit	576
7. Rear lid remote release button, Fuel tank flap release button, Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	577
8. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver door control unit, Driver side door interior handle illumination bulb, Driver side door warning lamp, Front right entry light	578
9. Driver door control unit, Driver side mirror adjustment motor	579
10. Front passenger door control unit	580
11. Microswitch for lowering front passenger window, Front passenger side central locking lock unit, Front passenger door control unit	581
12. Window regulator switch in front passenger door, Front passenger door control unit, Front passenger side door interior handle illumination bulb, Front left entry light, Front passenger side door warning lamp	582
13. Front passenger door control unit, Front passenger side mirror adjustment motor, Front passenger side automatic anti-dazzle exterior mirror, Heated exterior mirror on front passenger side	583
14. Onboard supply control unit	584
15. Rear lid lock unit, Bonnet contact switch, Onboard supply control unit, Rear lid central locking motor, Bonnet release motor	585
16. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Central locking and anti-theft alarm system aerial	586
17. Adjustable rear spoiler switch, Onboard supply control unit	587
18. Bonnet contact switch, Onboard supply control unit, Tank filler flap locking motor, Light conductor for front left sill panel moulding ambient lighting, Light conductor for front right sill panel moulding ambient lighting	588
19. Rear lid release switch, Rear lid central locking relay, Rear lid release motor	589
055 - 7-speed dual clutch gearbox 0BZ	590-598
1. 7-speed dual clutch gearbox 0BZ	590
2. Fuse carrier 1	591
3. Gearbox input speed sender, Hydraulic pressure sender 1, Mechatronic unit for dual clutch gearbox	592
4. Gearbox oil temperature sender, Gear selector movement sensor 1, Clutch temperature sender 1, Mechatronic unit for dual clutch gearbox, Clutch cooling valve 1, Main pressure valve	593
5. Automatic gearbox control unit 2, Clutch cooling valve 2, Parking lock solenoid valve 2	594
6. Parking lock sender, Automatic gearbox control unit 2, Parking lock solenoid, Parking lock solenoid valve	595
7. Automatic gearbox control unit 2, Fuse carrier 3, Gearbox coolant pump	596
8. Selector lever sensors control unit	597
9. Selector lever sensors control unit	598
056 - LED headlights	599-606
1. LED headlights	599

2. Onboard supply control unit, Fuse carrier 3	600
3. Output module 3 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left turn signal bulb	601
4. Output module 1 for left LED headlight, Onboard supply control unit, Left headlight main beam bulb, Left static cornering light, Left headlight fan	602
5. Output module 2 for left LED headlight, Onboard supply control unit, Bulb 2 for left dipped beam, Left headlight dipped beam bulb	603
6. Output module 3 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right turn signal bulb	604
7. Output module 1 for right LED headlight, Onboard supply control unit, Right headlight main beam bulb, Right static cornering light, Right headlight fan	605
8. Output module 2 for right LED headlight, Onboard supply control unit, Bulb 2 for right dipped beam, Right headlight dipped beam bulb, Fuse carrier 2	606
057 - LED headlights with laser main beams	607-614
1. LED headlights with laser main beams	607
2. Onboard supply control unit, Fuse carrier 3	608
3. Output module 3 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left turn signal bulb	609
4. Output module 1 for left LED headlight, Onboard supply control unit, Left headlight main beam bulb, Left additional main beam bulb, Left headlight fan	610
5. Output module 2 for left LED headlight, Onboard supply control unit, Bulb 2 for left dipped beam, Left headlight dipped beam bulb	611
6. Output module 3 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right turn signal bulb	612
7. Output module 1 for right LED headlight, Onboard supply control unit, Right headlight main beam bulb, Right additional main beam bulb, Right headlight fan	613
8. Output module 2 for right LED headlight, Onboard supply control unit, Bulb 2 for right dipped beam, Right headlight dipped beam bulb, Fuse carrier 2	614
801 - - Fitting locations: Fuses - 3	615-641
1. Fuses	615-641
1.1 Overview of fuses	615
1.2 Fuses (SB) on fuse holder B	616-625
1.2.1 Position of fuses on fuse holder B, up to May 2009	616
1.2.2 Position of fuses on fuse carrier ST2, brown	617
1.2.3 Position of fuses on fuse carrier ST3, black	618
1.2.4 Position of fuses on fuse carrier ST4, red	618
1.2.5 Position of fuses on fuse carrier ST5, brown	619
1.2.6 Position of fuses on fuse carrier ST6, black	620
1.2.7 Position of fuses on fuse holder B, from June 2009	621
1.2.8 Position of fuses on fuse carrier ST2, brown	622
1.2.9 Position of fuses on fuse carrier ST3, black	623
1.2.10 Position of fuses on fuse carrier ST4, red	624
1.2.11 Position of fuses on fuse carrier ST5, brown	624
1.2.12 Position of fuses on fuse carrier ST6, black	625
1.3 Fuses (SD) on main fuse box	626-628
1.4 Fuses (S) on main distribution	629-630
1.5 Position of fuses (SC) on fuse holder C	631-639
1.5.1 Fuse locations Coup	631
1.5.2 Position of fuses on fuse carrier ST1, black	632
1.5.3 Position of fuses on fuse carrier ST3, black, V8 engine	633
1.5.4 Position of fuses on fuse carrier ST3, black, V10 engine	634
1.5.5 Fuse locations Spyder	635
1.5.6 Position of fuses on fuse carrier ST1, black	636
1.5.7 Position of fuses on fuse carrier ST2, black	637
1.5.8 Position of fuses on fuse carrier ST3, black, V8 engine	638
1.5.9 Position of fuses on fuse carrier ST3, black, V10 engine	639
1.6 Fuses on 9 point relay and fuse carrier	640-641
802 - -Fitting locations: coupling stations and connectors of wiring harnesses - 3	642-650
1. Coupling stations and connectors of wiring harnesses	642-650
1.1 Overview of coupling stations and connectors	642
1.2 Coupling station under right front seat	643
1.3 Coupling stations under right rear shelf	643
1.4 Coupling station under left front seat	644
1.5 Coupling station right behind centre console	645
1.6 Diagnostic connection	645
1.7 Left A-pillar couplina point	646

1.8 Coupling point, glove compartment	647
1.9 Rear bumper coupling point	648
1.10 Front bumper coupling point	649-650
803 - - Fitting locations: Earth points - 3	651-662
1. Earth points	651-662
1.1 Overview of earth points in rear part of vehicle	651-654
1.2 Overview of earth points in vehicle interior	655-658
1.3 Overview of earth points in front part of vehicle	659-662
804 - -Fitting locations : control units - 3	663-710
1. Control units	663-710
1.1 Overview of control units	663-665
1.2 onboard supply control unit -J519-	666-668
1.2.1 Location and connector assignment up to May 2009	666-667
1.2.2 Location and connector assignment from June 2009	668
1.3 Front passenger door control unit -J387-	669-670
1.4 Automatic gearbox control unit -J217-	671-673
1.5 Engine control unit -J623- (right)/engine control unit 2 -J624- (left)	674
1.6 Electronically controlled damping control unit -J250-	675-677
1.7 Tyre pressure monitor control unit -J502-/digital sound package control unit -J525-	678-679
1.8 Convenience system central control unit -J393-, is dropped from June 2009	680
1.9 Driver door control unit -J386-	681-683
1.10 Control unit for parking aid -J446-	684-685
1.11 Data bus diagnostic interface -J533-	686
1.12 Steering column electronics control unit -J527-	687-688
1.13 ABS control unit -J104-	689-690
1.14 Airbag control unit -J234-	691-692
1.15 Convertible roof actuation control unit -J256-	693
1.16 Control unit in dash panel insert -J285-	694-695
1.17 Climatronic control unit -J255-	696
1.18 Battery monitor control unit -J367-	697
1.19 Garage door operation control unit -J530-	698
1.20 Wiper motor control unit -J400-/Front passenger side wiper motor control unit -J584-	699
1.21 Left gas discharge bulb control unit -J343-/Right gas discharge light control unit -J344-	700
1.22 Power output module 1 for LED left headlight -A31-/Power output module 1 for right LED headlight -A27-	701
1.23 Convertible roof control units	702-710
1.23.1 Front right convertible roof switch -F434-	704
1.23.2 Convertible roof latch open switch -F294-	705
1.23.3 Right convertible roof master cylinder/right fin cylinder	705
1.23.4 Right convertible top cover motor -V381-	706
1.23.5 Convertible roof box lid cylinder on right	706
1.23.6 Convertible roof box lid cylinder on left	707
1.23.7 Left convertible roof master cylinder/left fin cylinder	707
1.23.8 Left convertible top cover motor -V383-	708
1.23.9 Convertible roof actuation hydraulic pump -V118-	708
1.23.10 Valve block	709
1.23.11 Rear window down switch -F416-/Rear window centre switch -F423-	709
1.23.12 Rear window motor -V456-	710
1.23.13 Convertible roof front switch -F202-, left	710
805 - - Fitting locations: Relays - 3	711-718
1. Relays	711-718
1.1 Overview of relay carriers	711
1.2 Relay carrier, in front right footwell	712-715
1.2.1 Location and position of relays, up to May 2009	712-713
1.2.2 Location and position of relays, from June 2009	714-715
1.3 Relay on onboard supply control unit -J519-, up to May 2009	716
1.4 Relays on 9 point relay and fuse carrier	717-718
806 - -Fitting locations: Routing in the vehicle - 3	719-724
1. Routing in the vehicle	719-724
1.1 Routing door	719
1.2 Routing in the interior	720
1.3 Engine compartment routing	721
1.4 Roof/A-pillars routing	722
1.5 Routing luggage compartment	723
1.6 Dash panel routing	724