

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 General notes</b>	<b>2</b>
2.1 Types of tyre	2
2.2 General notes on drive shaft	2
<b>3 Repair instructions</b>	<b>3</b>
3.1 Leaks at shock absorbers	3
3.2 Noises from shock absorbers	4
3.3 Checking shock absorbers when removed	5
3.4 Checking shock absorbers on shock tester	5
3.5 Maximum values "a" in mm	6
3.6 Rules for cleanliness	7
3.7 General notes	7
3.8 General repair instructions	8
3.9 Contact corrosion	8
3.10 Gaskets, seals	8
3.11 Nuts, bolts	9
3.12 Electrical components	9
3.13 Repairing damaged threads in longitudinal member (subframe to body)	10
3.14 Lifting suspension to unladen position - vehicles with coil springs	10
<b>4 Technical data</b>	<b>13</b>
4.1 Running gear	13
4.2 Steering	13
<b>5 Disposal</b>	<b>14</b>
5.1 Releasing gas and draining gas-filled shock absorbers	14
<b>40 - Front suspension</b>	<b>17</b>
<b>1 Front axle</b>	<b>17</b>
1.1 Overview - front axle	17
<b>2 Subframe</b>	<b>18</b>
2.1 Assembly overview - anti-roll bar	18
2.2 Removing and installing anti-roll bar	19
2.3 Removing and installing coupling rod	21
<b>3 Suspension strut, upper suspension links</b>	<b>22</b>
3.1 Assembly overview - suspension strut, upper links	22
3.2 Removing and installing suspension strut	23
3.3 Removing and installing upper wishbone	24
<b>4 Lower wishbone, swivel joint</b>	<b>27</b>
4.1 Assembly overview - lower wishbone, swivel joint	27
4.2 Removing and installing lower wishbone	27
<b>5 Wheel bearing</b>	<b>31</b>
5.1 Assembly overview - wheel bearing	31
5.2 Removing and installing wheel bearing housing	31
5.3 Removing and installing wheel bearing unit	34
5.4 Servicing wheel bearing unit	34
<b>6 Drive shaft</b>	<b>40</b>
6.1 Assembly overview - drive shaft	40
6.2 Removing and installing drive shaft	42
6.3 Loosening and tightening bolt securing drive shaft	44

6.4	Dismantling and assembling drive shaft	46
<b>42</b>	<b>- Rear suspension</b>	<b>56</b>
<b>1</b>	<b>Rear axle</b>	<b>56</b>
1.1	Overview - rear axle	56
<b>2</b>	<b>Anti-roll bar</b>	<b>57</b>
2.1	Assembly overview - anti-roll bar	57
2.2	Removing and installing anti-roll bar	58
2.3	Removing and installing coupling rod	60
<b>3</b>	<b>Suspension links, track rod</b>	<b>62</b>
3.1	Assembly overview - wishbones	62
3.2	Assembly overview - track rod	62
3.3	Removing and installing upper wishbone	63
3.4	Removing and installing lower transverse links	65
3.5	Removing and installing track rod	68
<b>4</b>	<b>Suspension strut/shock absorber, spring</b>	<b>70</b>
4.1	Assembly overview - suspension strut/shock absorber, spring	70
4.2	Removing and installing suspension strut	71
<b>5</b>	<b>Wheel bearing, trailing arm</b>	<b>74</b>
5.1	Assembly overview - wheel bearing	74
5.2	Removing and installing wheel bearing housing	74
5.3	Removing and installing wheel bearing unit	78
5.4	Servicing wheel bearing unit	80
<b>6</b>	<b>Drive shaft</b>	<b>85</b>
6.1	Assembly overview - drive shaft	85
6.2	Loosening and tightening bolt securing drive shaft	87
6.3	Removing and installing drive shaft	89
6.4	Dismantling and assembling drive shaft	92
<b>43</b>	<b>- Self-levelling suspension</b>	<b>100</b>
<b>1</b>	<b>Electronic damping control</b>	<b>100</b>
1.1	Overview of fitting locations - electronic damping control	100
1.2	Removing and installing electronically controlled damping control unit J250	101
1.3	Re-adapting normal level	101
<b>2</b>	<b>Vehicle level senders</b>	<b>103</b>
2.1	Assembly overview - front vehicle level senders	103
2.2	Assembly overview - rear vehicle level senders	103
2.3	Removing and installing front vehicle level sender G78/G289	105
2.4	Removing and installing rear vehicle level sender G76/G77	105
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>107</b>
<b>1</b>	<b>Wheels, tyres</b>	<b>107</b>
<b>2</b>	<b>Tyre Pressure Monitoring System</b>	<b>108</b>
2.1	Overview of fitting locations - Tyre Pressure Monitoring System	108
2.2	Assembly overview - tyre pressure sensor	109
2.3	Removing and installing Tyre Pressure Monitoring System control unit J502	110
2.4	Removing and installing Tyre Pressure Monitoring System aerial	112
2.5	Changing tyres on vehicles with Tyre Pressure Monitoring System	113
2.6	Removing and installing metal valve body	114
<b>3</b>	<b>Wheel alignment</b>	<b>116</b>
3.1	Notes on wheel alignment	116
3.2	Test requirements	116
3.3	Preparations for measurement	117
3.4	Wheel alignment procedure	119

3.5	When does wheel alignment have to be checked? .....	119
3.6	Explanatory notes on production control numbers (PR numbers) .....	120
3.7	Wheel runout compensation .....	121
3.8	Checking unladen position for wheel alignment .....	121
3.9	Wheel alignment specifications .....	122
3.10	Adjusting camber at rear wheels .....	123
3.11	Adjusting toe setting at rear wheels .....	124
3.12	Adjusting camber at front wheels .....	124
3.13	Adjusting toe setting at front wheels .....	125
3.14	Basic setting for steering angle sender G85 .....	126
<b>4</b>	<b>Dynamic steering .....</b>	<b>128</b>
4.1	Removing and installing active steering control unit J792 .....	128
4.2	Basic setting for dynamic steering .....	129
<b>48</b>	<b>Steering .....</b>	<b>132</b>
<b>1</b>	<b>Steering wheel .....</b>	<b>132</b>
1.1	Assembly overview - steering wheel .....	132
1.2	Removing and installing steering wheel .....	134
<b>2</b>	<b>Steering column .....</b>	<b>136</b>
2.1	Assembly overview - steering column .....	136
2.2	Checking steering column for damage .....	138
2.3	Handling and transporting steering column .....	138
2.4	Removing and installing steering column .....	140
2.5	Removing and installing intermediate steering shaft .....	141
<b>3</b>	<b>Steering rack .....</b>	<b>145</b>
3.1	Assembly overview - steering rack .....	145
3.2	Handling and transporting steering rack .....	149
3.3	Removing and installing steering rack .....	149
3.4	Removing and installing boot .....	153
3.5	Removing and installing track rod .....	154
3.6	Removing and installing track rod ball joint .....	155
3.7	Re-adapting end stops of steering rack .....	158