

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Notes on use and safety for LED headlights and Audi laser lights	1
2 Repair notes	3
2.1 Rules for cleanliness	3
2.2 General notes	3
2.3 Contact corrosion	3
2.4 ESD (electrostatic discharge) workplace	3
2.5 Routing and attachment of lines and wiring	4
3 Battery	5
3.1 Battery - general notes	5
3.2 Battery types	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Exploded view - battery	6
1.2 Disconnecting and connecting battery	7
1.3 Removing and installing earth cable with battery monitor control unit J367	8
1.4 Removing and installing battery	8
1.5 Charging battery	10
2 Alternator	12
2.1 Exploded view - alternator	12
2.2 Removing and installing alternator	12
2.3 Checking alternator	13
3 Starter	14
3.1 Exploded view - starter	14
3.2 Removing and installing starter	15
90 - Gauges, instruments	16
1 Dash panel insert	16
1.1 Exploded view - dash panel insert	16
1.2 Removing and installing dash panel insert with control unit in dash panel insert J285	17
2 Horn	18
2.1 Exploded view - horn	18
2.2 Removing and installing treble horn H2 / bass horn H7	19
2.3 Removing and installing reverse warning beeper H29 - South Korea	19
92 - Windscreen wash/wipe system	20
1 Windscreen wiper system	20
1.1 Overview of fitting locations - windscreen wiper system	20
1.2 Exploded view - windscreen wiper system	21
1.3 Moving windscreen wipers to service position	23
1.4 Removing and installing wiper blade	24
1.5 Removing and installing wiper arms	24
1.6 Adjusting wiper arms	25
1.7 Removing and installing wiper motor	27
1.8 Removing and installing rain and light sensor	29
2 Windscreen washer system	34
2.1 Exploded view - windscreen washer system	34
2.2 Removing and installing washer fluid reservoir	35



2.3	Removing and installing windscreen washer fluid level sender	36
2.4	Removing and installing washer pump	36
2.5	Removing and installing washer jets	36
2.6	Adjusting washer jets	37
3	Washer fluid hoses	38
94	Lights, bulbs, switches - exterior	39
1	Headlights	39
1.1	Exploded view - headlights	39
1.2	Removing and installing headlights	41
1.3	Adjusting headlights	43
1.4	Adapting headlights for driving on the left side of the road	47
1.5	Adapting headlights for driving on the right side of the road	47
1.6	Removing and installing output module for headlight	47
1.7	Removing and installing headlight range control unit	48
2	Side marker lights	50
2.1	Overview - side marker lights	50
2.2	Removing and installing front side marker light	50
2.3	Removing and installing rear side marker light	52
3	Lights in exterior mirror	55
3.1	Exploded view - lights in exterior mirror	55
3.2	Removing and installing turn signal	56
4	Tail light cluster	57
4.1	Exploded view - tail light cluster on body	57
4.2	Removing and installing tail light cluster	57
4.3	Correcting installation position of tail light cluster	58
5	High-level brake light	59
5.1	Exploded view - high-level brake light	59
5.2	Removing and installing high-level brake light	61
6	Number plate light	63
6.1	Removing and installing number plate light X4 / X5	63
7	Entry and start authorisation	64
7.1	Overview of fitting locations - entry and start authorisation system	64
7.2	Overview of fitting locations - keyless entry system	65
7.3	Exploded view - exterior door handle for keyless entry system	66
7.4	Removing and installing front exterior door handle switches	66
7.5	Removing and installing interior aerial 1 for entry and start system R138	67
7.6	Removing and installing luggage compartment aerial for entry and start system R137	67
7.7	Removing and installing left aerial for entry and start authorisation R200	68
7.8	Removing and installing right aerial for entry and start authorisation R201	68
8	Steering column switch module	69
8.1	Exploded view - steering column switch module	69
8.2	Removing and installing steering column switch module	69
9	Parking aid	71
9.1	Overview - parking aid	71
9.2	Removing and installing front parking aid warning buzzer H22	72
9.3	Removing and installing rear parking aid warning buzzer H15	73
9.4	Removing and installing front parking aid senders	73
9.5	Removing and installing rear parking aid senders	74
96	Lights, bulbs, switches - interior	75
1	Lights	75
1.1	Overview of fitting locations - lights in dash panel	75
1.2	Overview of fitting locations - lights in front doors	77

1.3	Overview of fitting locations - background lighting in doors	78
1.4	Overview of fitting locations - lights in centre console	79
1.5	Overview of fitting locations - lights in storage compartment	80
1.6	Overview of fitting locations - lights in engine compartment	81
1.7	Overview of fitting locations - lights in luggage compartment	82
1.8	Overview of fitting locations - lights in roof trim	83
1.9	Removing and installing glove compartment light W6	83
1.10	Removing and installing footwell light W9 / W10	84
1.11	Removing and installing central locking SAFELock function warning lamp K133	84
1.12	Removing and installing entry light W92 / W93	84
1.13	Removing and installing door warning lamp W30 / W36	85
1.14	Removing and installing door interior handle illumination bulb L146 / L147	85
1.15	Removing and installing door storage compartment illumination bulb L160 / L161	86
1.16	Removing and installing front door background lighting bulb	86
1.17	Removing and installing storage box light	86
1.18	Removing and installing selector lever position display Y5	87
1.19	Removing and installing luggage compartment light	87
1.20	Removing and installing engine compartment light W27	87
2	Controls	88
2.1	Overview of fitting locations - controls in dash panel	88
2.2	Overview of fitting locations - controls in front doors	90
2.3	Overview of fitting locations - controls in centre console	91
2.4	Overview of fitting locations - controls in B-pillar	93
2.5	Overview of fitting locations - controls in roof trim	95
2.6	Removing and installing light switch E1	95
2.7	Removing and installing switches in dash panel	96
2.8	Removing and installing switches/buttons in centre console	96
2.9	Removing and installing glove compartment light switch E26	97
2.10	Removing and installing mirror adjustment switch E43 / E168	97
2.11	Removing and installing operating unit for window regulator in driver door E512	97
2.12	Removing and installing window regulator switch in front passenger door E107	98
2.13	Removing and installing driver side interior locking button for central locking system E308	98
2.14	Removing and installing rear lid remote release button E233	98
2.15	Removing and installing rear lid release switch E165	99
2.16	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	99
2.17	Removing and installing electromechanical parking brake button E538	100
2.18	Removing and installing convertible roof actuation button E137 / button to open rear lid window E361	100
2.19	Removing and installing interior light/reading light (front)	101
2.20	Removing and installing garage door operating unit E284	102
3	Further lights and controls in vehicle interior	103
3.1	Overview of fitting locations - further lights and controls in vehicle interior	103
4	Anti-theft alarm system	104
4.1	Overview - interior monitoring	104
4.2	Removing and installing alarm horn H12	105
4.3	Removing and installing anti-theft alarm sensor G578	105
5	Immobiliser	106
5.1	Exploded view - immobiliser	106
5.2	Removing and installing immobiliser reader coil	107
6	Cigarette lighter, socket	108
6.1	Exploded view - cigarette lighter, 12 V socket	108
6.2	Removing and installing cigarette lighter U1	108
6.3	Removing and installing cigarette lighter illumination bulb L28	110
6.4	Removing and installing electric socket U	111



6.5	Renewing electric socket U	111
97 - Wiring		113
1	Relay carriers, fuse carriers, electronics boxes	113
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	113
1.2	Removing and installing relay and fuse carrier (front passenger's footwell)	119
1.3	Removing and installing fuse holder (rear right)	120
1.4	Removing and installing relay and fuse carrier (rear right)	121
1.5	Removing and installing electronics box	123
1.6	Removing and installing relay and fuse holder in electronics box	125
1.7	Removing and installing main fuse holder	129
2	Control units	131
2.1	Overview of fitting locations - control units	131
2.2	Exploded view - data bus diagnostic interface	132
2.3	Removing and installing onboard supply control unit J519	132
2.4	Removing and installing garage door operation control unit	134
2.5	Removing and installing data bus diagnostic interface J533	134
3	Connectors	136
3.1	Overview of fitting locations - connectors	136
3.2	Unplugging door disconnecter	137
3.3	Removing and installing connector point at A-pillar (left-side)	137
3.4	Removing and installing connector point at A-pillar (right-side)	138
3.5	Removing and installing connector point at rear shelf	139
3.6	Repairing electrical wiring harnesses and electrical connectors	139
4	Releasing and dismantling connector housings	140
5	Cleaning contact surfaces	141
6	Repairing aerial wires	142
7	Fibre optic cables	143
8	Vehicle diagnostic, testing and information systems	144