

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	2
1.2 Safety precautions when using testers and measuring instruments during a road test	3
1.3 Safety precautions when working on pyrotechnic components	3
1.4 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	5
1.5 Additional safety regulations for side airbags	5
1.6 Additional safety regulations for curtain airbags	6
1.7 Safety regulations for crash sensors (pressure sensors) for front side airbag	6
1.8 Additional safety regulations for working on seat occupied sensor controlling deactivation of passenger airbag - country-specific version	7
1.9 Procedure for dealing with seat occupied sensor controlling deactivation of passenger airbag following an accident - country-specific version	7
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	8
1.11 Checking airbag mounting components following an accident	9
1.12 Accident in which no airbag was triggered	10
1.13 Checking seat belts	10
1.14 Checking belt webbing	10
1.15 Checking automatic belt retractor (locking action)	11
1.16 Visual inspection of belt buckle	12
1.17 Functional check of belt buckle	12
1.18 Checking guide fittings and latch plate	12
1.19 Checking securing components and anchorage points following an accident	12
1.20 Checking child seat restraint function of seat belt for additional child seats (not for driver's seat belt; country-specific version)	13
1.21 Checking child seat anchors following an accident	13
1.22 Safety regulations for automatic anti-dazzle interior mirror	14
1.23 Additional safety precautions for Automatic Rollover Support System	14
68 - Interior equipment	16
1 Storage compartments/covers/trim panels	16
1.1 Overview of fitting locations - storage compartments/covers/trim panels	16
1.2 Assembly overview - dash panel cover (driver side)	18
1.3 Assembly overview - steering column trim	19
1.4 Assembly overview - glove compartment	20
1.5 Removing and installing dash panel cover (driver side)	22
1.6 Removing and installing dash panel cover (centre)	24
1.7 Removing and installing upper steering column trim	25
1.8 Removing and installing lower steering column trim	26
1.9 Removing and installing glove compartment opening mechanism	27
1.10 Removing and installing lock cylinder for glove compartment opening mechanism	28
1.11 Removing and installing glove compartment	30
1.12 Removing and installing glove compartment cover	32
1.13 Removing and installing restrictor for glove compartment cover	33
2 Equipment	34
2.1 Assembly overview - sun visors	34
2.2 Assembly overview - windbreak	35
2.3 Removing and installing sun visor	37
2.4 Removing and installing mounting for windbreak	38
2.5 Removing and installing guide for windbreak	38
2.6 Removing and installing mounting base for windbreak	39
3 Centre console	44



3.1	Assembly overview - centre console	44
3.2	Removing and installing rear centre console trim	49
3.3	Removing and installing cover for centre console	50
3.4	Removing and installing centre console insert	51
3.5	Removing and installing front centre console storage compartment	52
3.6	Removing and installing centre console	53
3.7	Removing and installing cup holder	54
3.8	Removing and installing bracket for centre console	55
4	Interior mirror	56
4.1	Assembly overview - interior mirror	56
4.2	Removing and installing interior mirror	57
4.3	Switching automatic anti-dazzle function on and off	58
4.4	Switching compass display on and off	59
4.5	Setting magnetic deflection zone	59
4.6	Calibrating digital compass	60
4.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	61
4.8	Selecting the applicable deflection zone from the map	62
69	Passenger protection	68
1	Seat belts	68
1.1	Overview of fitting locations - seat belts and anchorage points	68
1.2	Assembly overview - front three-point seat belt	69
1.3	Assembly overview - front belt buckle	73
1.4	Removing and installing front three-point seat belt	74
1.5	Removing and installing front belt end fitting	79
1.6	Removing and installing front belt buckle	80
2	Child seat anchors	81
2.1	Assembly overview - front child seat anchors	81
2.2	Assembly overview - rear child seat anchors	81
2.3	Removing and installing front child seat anchor	82
2.4	Removing and installing rear child seat anchor	83
3	Airbag system	85
3.1	Overview of fitting locations - airbag system	85
4	Airbag control unit	88
4.1	Assembly overview - airbag control unit	88
4.2	Removing and installing airbag control unit J234	88
5	Battery isolation igniter	91
5.1	Assembly overview - battery isolation igniter	91
5.2	Removing and installing battery isolation igniter	93
6	Airbag (driver side)	94
6.1	Assembly overview - driver airbag	94
6.2	Removing and installing airbag unit with igniters	95
6.3	Removing and installing connector at airbag	98
7	Airbag (passenger side)	101
7.1	Assembly overview - front passenger airbag	101
7.2	Removing and installing front passenger airbag unit with igniters	102
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	105
8	Side airbags	106
8.1	Assembly overview - front side airbag	106
8.2	Removing and installing front side airbag with igniter	108
8.3	Removing and installing wire for side airbag	112
9	Curtain airbags	115
9.1	Assembly overview - curtain airbag	115

9.2	Removing and installing curtain airbag with igniter	116
10	Knee airbags	119
10.1	Assembly overview - knee airbag	119
10.2	Removing and installing knee airbag with igniter	121
11	Crash sensors for airbags	129
11.1	Overview of fitting locations - crash sensors for airbags	129
11.2	Removing and installing front airbag crash sensor for driver side G283	131
11.3	Removing and installing front side airbag crash sensor G179/G180	133
11.4	Removing and installing rear side airbag crash sensor G256/G257	136
12	Seat position sensor	139
12.1	Assembly overview - seat position sensor	139
12.2	Removing and installing seat position sensor	140
13	Seat occupied recognition system	144
13.1	Overview of fitting locations - seat occupied recognition system	144
13.2	Removing and installing seat occupied sensor	146
14	Automatic Rollover Support System	152
14.1	Assembly overview - Automatic Rollover Support System	152
14.2	Removing and installing reinforcement	154
14.3	Removing and installing cross piece connecting rollover bar	156
14.4	Removing and installing rollover bar	157
14.5	Retracting extended rollover bars	162
70	Trim, insulation	163
1	Front door trim	163
1.1	Assembly overview - front door trim	163
1.2	Removing and installing mid-range loudspeaker trim	168
1.3	Removing and installing bass loudspeaker trim	169
1.4	Removing and installing front door trim	170
1.5	Removing and installing front armrest	173
1.6	Removing and installing front door puller	174
1.7	Removing and installing switch trim	174
1.8	Removing and installing interior door handle	175
1.9	Removing and installing vent	176
1.10	Removing and installing air duct	177
2	Dash panel	179
2.1	Assembly overview - dash panel	179
2.2	Removing and installing dash panel cover (side)	184
2.3	Removing and installing trim panel for dash panel	185
2.4	Removing and installing loudspeaker trim	187
2.5	Removing and installing dash panel	188
2.6	Removing and installing loudspeaker mounting	192
2.7	Removing and installing centre vent	193
2.8	Removing and installing defroster vent (front centre)	194
2.9	Removing and installing side defroster vent	195
2.10	Removing and installing trim for dash panel insert	196
3	Dash panel cross member	199
3.1	Assembly overview - dash panel cross member	199
3.2	Removing and installing dash panel cross member	201
4	Passenger compartment trim panels	208
4.1	Overview of fitting locations - passenger compartment trim panels	208
4.2	Assembly overview - sill panel moulding	210
4.3	Assembly overview - A-pillar trim	211
4.4	Assembly overview - B-pillar trim	213
4.5	Assembly overview - C-pillar trim	214



4.6	Assembly overview - side trim	215
4.7	Assembly overview - foot rest and floor covering	217
4.8	Assembly overview - rear shelf	221
4.9	Assembly overview - back panel trim	223
4.10	Assembly overview - back panel cover	226
4.11	Assembly overview - windscreen frame trim	227
4.12	Assembly overview - storage compartment (rear)	227
4.13	Removing and installing sill panel moulding	229
4.14	Removing and installing A-pillar trim	231
4.15	Removing and installing B-pillar trim	234
4.16	Removing and installing C-pillar trim	236
4.17	Removing and installing side trim	237
4.18	Removing and installing foot rest	239
4.19	Removing and installing floor covering	243
4.20	Removing and installing rear shelf	244
4.21	Removing and installing bracket for rear shelf	246
4.22	Removing and installing loudspeaker trim	247
4.23	Removing and installing cap	248
4.24	Removing and installing back panel cover	249
4.25	Removing and installing back panel trim	252
4.26	Removing and installing storage compartment (rear)	255
4.27	Removing and installing storage compartment lock cylinder	258
4.28	Removing and installing windscreen frame trim	262
5	Luggage compartment trim panels	264
5.1	Overview of fitting locations - luggage compartment trim panels	264
5.2	Removing and installing luggage compartment trim	267
6	Roof trim panels	273
6.1	Assembly overview - moulded headliner	273
6.2	Removing and installing moulded headliner	273
6.3	Attaching roof reinforcement to body	276
72	Seat frames	278
1	Overview - seat versions	278
1.1	Overview of fitting locations - seat versions	278
2	Front seats	279
2.1	Overview of fitting locations - electrical and electronic components	279
2.2	Assembly overview - front seat	283
2.3	Assembly overview - backrest release mechanism	286
2.4	Assembly overview - front seat backrest	287
2.5	Assembly overview - seat pan	292
2.6	Removing and installing front seat	301
2.7	Connecting and disconnecting airbag adapter	306
2.8	Attaching front seat to seat repair stand	308
2.9	Connecting and disconnecting modular wiring	310
2.10	Removing and installing front seat backrest	311
2.11	Removing and installing backrest cover panel	315
2.12	Dismantling and assembling seat pan	326
2.13	Removing and installing backrest release mechanism	334
2.14	Removing and installing seat adjustment operating unit E470/E471	337
2.15	Removing and installing seat depth adjustment button E350/E867	339
2.16	Removing and installing switch module for front seat E663/E664	339
2.17	Removing and installing seat height adjustment switch E364/E365	340
2.18	Removing and installing control unit for seat functions	341
3	Front seat pneumatic system	343
3.1	Overview of fitting locations - pneumatic system	343

3.2	Connection diagram - pneumatic system	345
3.3	Assembly overview - pneumatic system	345
3.4	Severing and connecting pneumatic lines	346
3.5	Servicing pneumatic lines	348
3.6	Removing and installing pneumatic module	348
3.7	Removing and installing air cushion for seat bolster adjustment	351
74	Seat - padding, covers	353
1	Covers and padding on front seats	353
1.1	Assembly overview - seat pan cover and padding	353
1.2	Assembly overview - backrest cover and padding	355
1.3	Assembly overview - seat heater elements	357
1.4	Removing and installing seat pan cover and padding	358
1.5	Removing and installing backrest cover and padding	364
1.6	Separating seat pan cover and padding	369
1.7	Separating backrest cover and padding	370
1.8	Removing and installing seat heater element Z6/Z8	372
1.9	Removing and installing backrest heater element Z7/Z9	373