

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	1
1.3 Safety precautions when working on the cooling system .....	2
1.4 Safety precautions when working on the convertible roof .....	2
<b>2 Repair instructions</b> .....	<b>3</b>
2.1 Routing and attachment of pipes, hoses and wiring .....	3
2.2 Contact corrosion .....	3
2.3 Bonding surfaces for self-adhesive components .....	3
2.4 Secure threaded connections .....	4
2.5 Rules for cleanliness .....	4
2.6 Identification plates .....	4
2.7 Impact wrenches .....	4
<b>50 - Body - front</b> .....	<b>6</b>
<b>1 Lock carrier</b> .....	<b>6</b>
1.1 Assembly overview - lock carrier .....	6
1.2 Removing and installing lock carrier .....	8
1.3 Removing and installing headlight retainers .....	9
1.4 Removing and installing bracket for gas strut .....	10
1.5 Removing and installing brace for wheel housing liner .....	11
<b>2 Wing</b> .....	<b>12</b>
2.1 Assembly overview - wing .....	12
2.2 Removing and installing wing .....	14
2.3 Adjusting wing .....	14
2.4 Removing and installing wing mounting flange .....	16
2.5 Removing and installing closure plate .....	17
2.6 Removing and installing closure plate reinforcement .....	17
<b>3 Bulkhead</b> .....	<b>19</b>
3.1 Assembly overview - plenum chamber cover .....	19
3.2 Removing and installing plenum chamber cover .....	19
3.3 Removing and installing bumper cover trim .....	20
3.4 Removing and installing trim for headlight and wheel housing liner .....	20
<b>53 - Body - rear</b> .....	<b>22</b>
<b>1 Side panel</b> .....	<b>22</b>
1.1 Assembly overview - side panel .....	22
1.2 Removing and installing side panel .....	25
<b>2 Longitudinal member/rear member</b> .....	<b>31</b>
2.1 Assembly overview - longitudinal member .....	31
2.2 Assembly overview - rear member .....	33
2.3 Assembly overview - rear struts/braces .....	37
2.4 Removing and installing longitudinal member .....	39
2.5 Removing and installing rear member .....	44
2.6 Removing and installing strut brace .....	47
2.7 Removing and installing cross brace .....	48
2.8 Removing and installing reinforcement struts .....	49
<b>3 Trim and insulation panels</b> .....	<b>56</b>
3.1 Assembly overview - trim and insulation panels in engine compartment .....	56
3.2 Removing and installing convertible roof compartment centre cover .....	58
3.3 Removing and installing convertible roof compartment side cover .....	59



<b>55 - Bonnet, rear lid</b>	<b>61</b>
<b>1 Front lid</b>	<b>61</b>
1.1 Assembly overview - front lid	61
1.2 Assembly overview - Bowden cable	64
1.3 Removing and installing front lid	68
1.4 Adjusting front lid	68
1.5 Removing and installing front lid seal	73
1.6 Removing and installing hinge	73
1.7 Removing and installing striker	74
1.8 Removing and installing gas strut	75
1.9 Releasing gas from gas strut	75
1.10 Removing and installing impact guard	76
1.11 Removing and installing Bowden cable	77
1.12 Adjusting Bowden cable for front lid lock	82
1.13 Removing and installing front lid lock	84
1.14 Removing and installing front lid release motor V394	85
<b>2 Rear lid</b>	<b>87</b>
2.1 Assembly overview - rear lid	87
2.2 Assembly overview - Bowden cable	94
2.3 Removing and installing rear lid	97
2.4 Adjusting rear lid	98
2.5 Removing and installing hinge	104
2.6 Removing and installing adjusting buffer	105
2.7 Removing and installing gas strut	105
2.8 Preparing gas strut for disposal	106
2.9 Removing and installing Bowden cable	106
2.10 Adjusting Bowden cable for rear lid lock	111
2.11 Removing and installing rear lid lock	112
2.12 Removing and installing mounting for rear lid lock	114
2.13 Removing and installing striker	115
2.14 Removing and installing rear lid release motor V139	116
2.15 Removing and installing rear lid trim	118
2.16 Removing and installing air outlet grille	119
<b>3 Tank flap unit</b>	<b>122</b>
3.1 Assembly overview - tank flap unit	122
3.2 Removing and installing tank flap unit	124
3.3 Removing and installing trim panel for tank flap	127
3.4 Removing and installing drain hose for tank flap unit	127
<b>4 Convertible roof compartment lid</b>	<b>129</b>
4.1 Assembly overview - convertible roof compartment lid	129
4.2 Assembly overview - convertible roof compartment seals	133
4.3 Removing and installing convertible roof compartment lid	134
4.4 Adjusting convertible roof compartment lid	135
4.5 Removing and installing hinge guide	138
4.6 Removing and installing mounting for convertible roof compartment lid hinge	139
4.7 Removing and installing guide for convertible roof compartment lid	141
4.8 Removing and installing striker	141
4.9 Removing and installing bump stop	142
4.10 Removing and installing convertible roof flap motor V381 / V383	142
4.11 Removing and installing ventilation grille	144
4.12 Removing and installing seal for convertible roof compartment cover (front)	144
4.13 Removing and installing convertible roof compartment seal (rear)	145
4.14 Removing and installing seal for water drain and convertible roof flap	146
<b>57 - Front doors, door components, central locking</b>	<b>148</b>

<b>1</b>	<b>Door</b>	<b>148</b>
1.1	Assembly overview - door	148
1.2	Assembly overview - door seals	152
1.3	Removing and installing door	154
1.4	Adjusting door	154
1.5	Removing and installing door arrester	158
1.6	Removing and installing inner door seal	159
1.7	Removing and installing door seal for roof trim strip	166
1.8	Removing and installing outer door seal	167
1.9	Removing and installing seal for B-pillar cover	168
<b>2</b>	<b>Door components</b>	<b>170</b>
2.1	Assembly overview - window regulator	170
2.2	Assembly overview - door handle and door lock	171
2.3	Assembly overview - window guides and window slot seals	173
2.4	Removing and installing window regulator	173
2.5	Removing and installing window regulator motor	174
2.6	Removing and installing microswitch for lowering driver window F272	175
2.7	Removing and installing mounting bracket	175
2.8	Removing and installing lock cylinder	177
2.9	Removing and installing cap for lock cylinder	177
2.10	Removing and installing door lock	178
2.11	Removing and installing striker	178
2.12	Removing and installing operating cable for interior door handle	178
2.13	Removing and installing inner door cover	179
2.14	Removing and installing outer window slot seal	179
2.15	Removing and installing trim for outer door opener	180
<b>3</b>	<b>Central locking system</b>	<b>181</b>
3.1	Overview of fitting locations - central locking system	181
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	184
3.3	Removing and installing convenience system central control unit J393	184
3.4	Removing and installing front lid contact switch F387	185
3.5	Removing and installing engine lid contact switch F266	186
3.6	Removing and installing tank filler flap locking motor V155	187
3.7	Removing and installing interface control unit for vehicle location system J843	188
<b>61</b>	<b>Convertible roof, hardtop, canopy</b>	<b>189</b>
<b>1</b>	<b>Convertible roof</b>	<b>189</b>
1.1	Assembly overview - convertible roof	189
1.2	Assembly overview - convertible roof frame	190
1.3	Assembly overview - main mounting for convertible roof	191
1.4	Assembly overview - convertible roof locking mechanism	193
1.5	Overview of fitting locations - microswitches	195
1.6	Removing and installing convertible roof	195
1.7	Removing and installing convertible roof locking mechanism	203
1.8	Removing and installing mounting for convertible roof locking mechanism	204
1.9	Removing and installing locking element	204
1.10	Removing and installing control lever for convertible roof locking mechanism	204
1.11	Removing and installing tensioning strut switch for convertible roof locking mechanism	205
1.12	Removing and installing switch for convertible roof locking readiness	205
1.13	Removing and installing switch for convertible roof compartment lid locking mechanism	206
1.14	Removing and installing switch for hydraulic cylinder for convertible roof compartment lid	206
1.15	Removing and installing switch on windscreen frame for convertible roof compartment lid	207
1.16	Service position of convertible roof and convertible roof compartment lid	208
1.17	Manual operation	209



<b>2</b>	<b>Convertible roof cover</b>	<b>210</b>
2.1	Assembly overview - insulation and convertible roof headliner	210
2.2	Assembly overview - tensioning cables and control cables for convertible roof cover	212
2.3	Assembly overview - tensioning cables and control cables for convertible roof headliner	213
2.4	Removing and installing convertible roof cover	215
2.5	Removing and installing insulation	219
2.6	Removing and installing tensioning cable for convertible roof cover	221
2.7	Removing and installing convertible roof headliner	224
2.8	Procedure for repairing tensioning and control cables	226
<b>3</b>	<b>Attachments</b>	<b>228</b>
3.1	Assembly overview - convertible roof seals	228
3.2	Assembly overview - convertible roof trim	230
3.3	Assembly overview - water drain	232
3.4	Removing and installing convertible roof seals	233
3.5	Removing and installing convertible roof trim	236
3.6	Removing and installing water drip tray for convertible roof compartment	237
3.7	Removing and installing water drain hose for rear window	237
<b>4</b>	<b>Hydraulic system</b>	<b>239</b>
4.1	Overview of fitting locations - hydraulic system	239
4.2	Assembly overview - hydraulic system	240
4.3	Assembly overview - hydraulic pump	242
4.4	Removing and installing hydraulic pump	243
4.5	Removing and installing hydraulic pump motor	244
4.6	Checking fluid level in hydraulic system	245
4.7	Filling and bleeding hydraulic system	246
4.8	Removing and installing hydraulic line	248
4.9	Removing and installing hydraulic cylinders	250
<b>5</b>	<b>Electrical and electronic components</b>	<b>255</b>
5.1	Removing and installing convertible roof actuation control unit J256	255
<b>63</b>	<b>Bumpers</b>	<b>256</b>
<b>1</b>	<b>Front bumper</b>	<b>256</b>
1.1	Assembly overview - bumper cover	256
1.2	Assembly overview - bumper carrier	262
1.3	Assembly overview - attachments, aero kit	262
1.4	Removing and installing bumper cover	263
1.5	Adjusting bumper cover	266
1.6	Removing and installing reinforcement for side section of bumper cover	268
1.7	Removing and installing bumper cover mounting	271
1.8	Removing and installing air intake grille	273
1.9	Removing and installing closure plate for bumper cover	276
1.10	Removing and installing lower part of spoiler	276
1.11	Removing and installing spoiler lip	279
1.12	Removing and installing bumper carrier	279
1.13	Removing and installing moulded foam insert	280
1.14	Removing and installing attachments - aero kit	280
<b>2</b>	<b>Rear bumper</b>	<b>285</b>
2.1	Assembly overview - bumper cover	285
2.2	Assembly overview - bumper cover (centre section)	290
2.3	Assembly overview - bumper carrier	291
2.4	Assembly overview - attachments, aero kit	292
2.5	Removing and installing bumper cover	293
2.6	Removing and installing bumper cover (centre section)	296
2.7	Removing and installing base plate for bumper cover	298
2.8	Adjusting bumper cover	300

2.9	Removing and installing bumper cover mounting	302
2.10	Removing and installing air outlet grille	303
2.11	Removing and installing tailpipe trim	305
2.12	Removing and installing mounting for tailpipe trim	307
2.13	Removing and installing bumper carrier	307
2.14	Removing and installing attachments - aero kit	308
<b>64</b>	<b>- Glazing</b>	<b>314</b>
<b>1</b>	<b>Repair instructions</b>	<b>314</b>
1.1	Minimum drying times for bonded windows	314
1.2	Repairing windows	314
1.3	Tools and materials required for installation and removal	315
1.4	Preparing undamaged windows for installation	318
1.5	Preparing new windows for installation	319
1.6	Preparing body flange for installation	320
1.7	Cleaning off adhesive sealant	321
<b>2</b>	<b>Windscreen</b>	<b>322</b>
2.1	Assembly overview - windscreen	322
2.2	Removing and installing windscreen	324
<b>3</b>	<b>Rear window</b>	<b>329</b>
3.1	Assembly overview - rear window	329
3.2	Removing and installing rear window	331
3.3	Removing and installing rear window motor V456	337
3.4	Removing and installing rear window frame	337
3.5	Removing and installing seal for rear window frame	338
3.6	Removing and installing heat shield	339
<b>4</b>	<b>Side windows</b>	<b>341</b>
4.1	Assembly overview - rear side window	341
4.2	Removing and installing rear side window	341
<b>5</b>	<b>Partition glass</b>	<b>345</b>
5.1	Assembly overview - partition glass	345
5.2	Removing and installing partition glass	345
<b>6</b>	<b>Door windows</b>	<b>348</b>
6.1	Assembly overview - front door window	348
6.2	Removing and installing front door window	348
6.3	Adjusting front door window	349
<b>66</b>	<b>- Exterior equipment</b>	<b>357</b>
<b>1</b>	<b>Radiator grille/front trim</b>	<b>357</b>
1.1	Assembly overview - radiator grille	357
1.2	Removing and installing radiator grille	361
1.3	Removing and installing reinforcement strut	362
1.4	Removing and installing radiator grille trim	362
1.5	Removing and installing mounting bracket for parking aid sender in radiator grille	364
1.6	Removing and installing number plate holder	364
<b>2</b>	<b>Spoiler</b>	<b>365</b>
2.1	Assembly overview - spoiler	365
2.2	Removing and installing spoiler	371
2.3	Adjusting spoiler	377
2.4	Removing and installing spoiler mounting	379
2.5	Removing and installing spoiler trim	380
2.6	Removing and installing air outlet grille	381
2.7	Removing and installing rear spoiler adjustment control unit J223	381
<b>3</b>	<b>Strips/trim panels/extensions</b>	<b>383</b>
3.1	Assembly overview - trim strip and covers	383

3.2	Assembly overview - side blade	388
3.3	Assembly overview - sill panel trim	390
3.4	Assembly overview - side member trim	391
3.5	Assembly overview - trim panel for A-pillar	393
3.6	Assembly overview - heat shield	393
3.7	Removing and installing trim strip	396
3.8	Removing and installing cover	406
3.9	Removing and installing side blade	411
3.10	Removing and installing retaining frame for side blade (top)	413
3.11	Removing and installing grille for side blade	413
3.12	Removing and installing sill panel trim	414
3.13	Removing and installing side member trim	415
3.14	Removing and installing bracket for side member trim	416
3.15	Removing and installing trim panel for side member trim	416
3.16	Removing and installing trim panel for A-pillar	419
3.17	Removing and installing heat shield for back panel	420
3.18	Removing and installing heat shield for floor	423
3.19	Removing and installing heat shield for bumper carrier mounting	425
<b>4</b>	<b>Noise insulation</b>	<b>426</b>
4.1	Assembly overview - noise insulation	426
4.2	Removing and installing noise insulation	428
<b>5</b>	<b>Underbody cladding</b>	<b>430</b>
5.1	Assembly overview - underbody cladding	430
5.2	Assembly overview - underbody struts	432
5.3	Removing and installing underbody cladding	433
5.4	Removing and installing fuel tank cover	434
<b>6</b>	<b>Exterior mirror</b>	<b>435</b>
6.1	Assembly overview - exterior mirror	435
6.2	Removing and installing exterior mirror	437
6.3	Removing and installing mirror glass	438
6.4	Removing and installing mirror adjustment unit	439
6.5	Removing and installing mirror cover	440
6.6	Removing and installing mirror trim	440
<b>7</b>	<b>Wheel housing liner</b>	<b>441</b>
7.1	Assembly overview - front wheel housing liner	441
7.2	Assembly overview - rear wheel housing liner	441
7.3	Removing and installing front wheel housing liner	442
7.4	Removing and installing rear wheel housing liner	443
<b>8</b>	<b>Lettering and badges</b>	<b>445</b>
8.1	Dimensions - lettering and badges on front lid	445
8.2	Dimensions - lettering and badges at rear	445
8.3	Dimensions - lettering and badges on sides	446
8.4	General notes on renewing lettering and badges	448
8.5	Removing and installing lettering and badges for radiator grille	449