

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions for Automatic Rollover Support System	4
2.3 Safety precautions when working on the cooling system	4
2.4 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Important notes	5
3.2 General notes	5
3.3 Information on handling fine dust, aluminium dust and steel dust	6
3.4 Routing and attachment of pipes, hoses and wiring	7
3.5 Contact corrosion	7
3.6 Bonding surfaces for adhesive strips	7
3.7 Self-locking bolts	7
3.8 Identification plates	7
3.9 Impact wrenches	7
3.10 Moulded foam insert	8
3.11 Repairing joints with flow-drill screws	9
3.12 Dent removal	11
3.13 Surface treatment	11
3.14 Matching the surface contour	12
3.15 Helicoil plus Twinsert	12
4 Vehicle identification data	22
4.1 Type plate / chassis number	22
4.2 Vehicle data sticker	22
5 Body construction	23
5.1 Body construction	26
5.2 Servicing studs N 912 244 02	26
5.3 Aluminium structure	27
6 Repair concept for structural CFRP repairs	33
6.1 Procedure from diagnosis to repair	33
7 Evaluation form for CFRP (carbon fibre-reinforced plastic) structures with accident damage	34
7.1 Mandatory report before repair	34
7.2 Damaged areas	34
8 What is CFRP (carbon fibre-reinforced plastic)?	43
8.1 Work on CFRP components	43
8.2 Body	43
8.3 Fibre-reinforced plastics (FRP) from a design point of view	44
8.4 Important notes relating to the use of CFRP in series-production vehicles	44
8.5 Safety measures	48
9 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	50
10 Processing body structure adhesive D 180 004 M2	52
10.1 Preparing bonding surfaces	53
11 Body dimensions	67
11.1 Body - front	67
11.2 Body - rear	68
11.3 Floor group	69



12	Overview of attachment pairings	72
13	Overview of rivets and tools	73
13.1	Overview of rivets used for repair measures	78
13.2	Rivets accessible from one side only	78
14	Using edge milling unit -VAS 882 005-	80
14.1	General information	80
14.2	Assembling unit/changing milling tool	83
14.3	Separating flanged edges	93
14.4	Separating panels at corners and along surfaces	99
14.5	Separating outer edges	102
14.6	Roof - Renewal	105
14.7	Separating laser weld seams using round head milling unit	107
14.8	Aluminium panels	109
15	Tools	112
15.1	Straightening jig	115
50 - Body - front		117
1	Safety precautions	117
2	Front longitudinal member - Renewal	118
2.1	Tools	118
2.2	Procedure	118
3	Front longitudinal member - Partial renewal	137
3.1	Tools	137
3.2	Procedure	138
4	Repair solution for retaining bracket (casting) on chassis (bottom)	147
4.1	Tools	147
4.2	Procedure	148
5	Front cross member - Renewal	153
5.1	Tools	153
5.2	Procedure	153
6	Luggage compartment floor - Renewal	160
6.1	Tools	160
6.2	Procedure	161
7	Luggage compartment panels (side) - Renewal	170
7.1	Tools	170
7.2	Procedure	171
8	Longitudinal member for wing - Renewal	178
8.1	Tools	178
8.2	Procedure	179
9	Suspension turret cover - Renewal	182
9.1	Tools	182
9.2	Procedure	183
51 - Body - centre		233
1	Safety precautions	233
2	Roof - Renewal	234
2.1	Tools	234
2.2	Procedure	235
3	Front roof cross member - Renewal	243
3.1	Tools	243
3.2	Procedure	243
4	Door frame - Renewal	247
4.1	Tools	247

4.2	Procedure	248
5	Repair solution for plastic covers on B-pillar	264
5.1	Tools	264
5.2	Procedure	265
6	B-pillar (CFRP component) - Renewal	274
6.1	Tools	274
6.2	Procedure	275
7	B-pillar (CFRP component), Spyder - Renewal	315
7.1	Tools	315
7.2	Procedure	316
53 - Body - rear		355
1	Safety precautions	355
2	Rear longitudinal member - Renewal	356
2.1	Tools	356
2.2	Procedure	357
3	Rear longitudinal member, Spyder - Renewal	369