

Contents

00 - Technical data	1
1 Overview - power transmission	1
2 Identification	2
2.1 Identification of final drive	2
3 Technical data	3
3.1 Capacities	3
4 Safety information	4
4.1 General safety regulations	4
4.2 Safety precautions when working on vehicles with start/stop system	4
4.3 Safety precautions when using testers and measuring instruments during a road test	5
4.4 Safety precautions when tow-starting and towing	5
5 Repair instructions	6
5.1 Rules for cleanliness	6
5.2 General notes	6
5.3 General repair instructions	6
5.4 Contact corrosion	8
6 Electrical components	9
6.1 Overview of fitting locations - electrical components	9
39 - Final drive - front differential	10
1 Final drive	10
1.1 Assembly overview - final drive	10
1.2 Removing and installing final drive	12
1.3 Removing and installing housing for central shaft	17
1.4 Renewing ball bearing for central shaft	20
2 Assembly mountings	26
2.1 Assembly overview - assembly mountings	26
2.2 Removing and installing bonded rubber bush	28
3 Gear oil	32
3.1 Overview of fitting locations - drain and inspection plugs	32
3.2 Checking gear oil level	32
3.3 Draining and filling gear oil	34
4 High-performance oil for all-wheel drive coupling	36
4.1 Checking oil level for all-wheel drive coupling	36
4.2 Draining and filling high-performance oil for all-wheel drive coupling	36
5 Oil seals	39
5.1 Overview of fitting locations - oil seals	39
5.2 Renewing left oil seal	40
5.3 Renewing right oil seal	40
6 Front differential	42
6.1 Removing and installing left flange shaft	42
6.2 Removing and installing right flange shaft	42
7 All-wheel drive coupling	44
7.1 Overview of fitting locations - all-wheel drive coupling	44
7.2 Assembly overview - all-wheel drive coupling	44
7.3 Removing and installing hydraulic pressure sender for all-wheel drive G942	45
7.4 Removing and installing hydraulic temperature sender for all-wheel drive G943	47
7.5 Removing and installing all-wheel drive coupling	48
7.6 Removing and installing all-wheel drive coupling pump V181	54
7.7 Removing and installing control unit	56
8 Propshaft	58



8.1	Assembly overview - propshaft	58
8.2	Assembly overview - transmission shaft (in engine)	59
8.3	Removing and installing propshaft	59
8.4	Removing and installing transmission shaft (in engine)	62
8.5	Removing and installing ball bearings for transmission shaft (in engine)	64