

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
<b>2 Safety information</b> .....	<b>2</b>
2.1 Safety precautions when working on vehicle .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	3
2.3 Safety precautions when using testers and measuring instruments during a road test .....	3
2.4 Safety precautions when tow-starting and towing .....	4
<b>3 Repair instructions</b> .....	<b>5</b>
3.1 Rules for cleanliness .....	5
3.2 General notes .....	5
3.3 General repair instructions .....	6
3.4 Fitting body covers .....	8
3.5 Contact corrosion .....	8
3.6 Routing and attachment of pipes, hoses and wiring .....	9
<b>4 Technical data</b> .....	<b>10</b>
4.1 Capacities .....	10
<b>5 Overview - power transmission</b> .....	<b>11</b>
<b>30 - Clutch</b> .....	<b>12</b>
<b>1 Clutch</b> .....	<b>12</b>
1.1 Assembly overview - dual clutch .....	12
1.2 Assembly overview - clutch carrier .....	14
1.3 Removing and installing clutch carrier .....	15
1.4 Removing and installing clutch .....	18
1.5 Removing and installing clutch cover .....	23
1.6 Renewing input shaft bearing .....	24
<b>34 - Controls, housing</b> .....	<b>28</b>
<b>1 Selector mechanism</b> .....	<b>28</b>
1.1 Assembly overview - selector mechanism .....	28
1.2 Assembly overview - manual release mechanism for parking lock .....	29
1.3 Checking selector mechanism .....	30
1.4 Removing and installing selector lever handle .....	34
1.5 Detaching and attaching selector lever boot on selector lever handle .....	36
1.6 Manual release from position P .....	37
1.7 Removing and installing selector mechanism .....	39
1.8 Removing and installing manual release cable for parking lock .....	39
<b>2 Removing and installing gearbox</b> .....	<b>44</b>
2.1 Removing gearbox .....	44
2.2 Installing gearbox .....	54
2.3 Tightening torques for gearbox .....	56
<b>3 Securing to engine and gearbox support</b> .....	<b>57</b>
<b>4 Assembly mountings</b> .....	<b>61</b>
4.1 Assembly overview - assembly mountings .....	61
<b>5 ATF circuit</b> .....	<b>63</b>
5.1 Assembly overview - ATF circuit .....	63
5.2 Assembly overview - oil pan .....	64
5.3 Assembly overview - drain, sealing and inspection plugs .....	66
5.4 Assembly overview - auxiliary hydraulic unit .....	67
5.5 Removing and installing ATF cooler .....	68
5.6 Removing and installing ATF filter .....	71



5.7	Removing and installing oil pan	72
5.8	Removing and installing auxiliary hydraulic unit	74
<b>6</b>	<b>ATF</b>	<b>78</b>
6.1	Checking ATF level	78
6.2	Draining and filling ATF	84
<b>7</b>	<b>Mechatronic unit</b>	<b>90</b>
7.1	Assembly overview - mechatronic unit	90
7.2	Removing and installing mechatronic unit	92
<b>35 - Gears, shafts</b>		<b>99</b>
<b>1</b>	<b>Parking lock</b>	<b>99</b>
1.1	Assembly overview - parking lock	99
1.2	Removing and installing cover for parking lock	100
1.3	Removing and installing parking lock	103
<b>39 - Final drive - rear differential</b>		<b>108</b>
<b>1</b>	<b>Seals</b>	<b>108</b>
1.1	Overview of fitting locations - oil seals	108
1.2	Renewing left oil seal	108
1.3	Renewing right oil seal	112
1.4	Renewing input shaft oil seal	113
1.5	Renewing oil seal for transmission shaft in gearbox	116
<b>2</b>	<b>Rear differential</b>	<b>118</b>
2.1	Assembly overview - differential	118
2.2	Assembly overview - differential lock	120
2.3	Dismantling and assembling differential lock	121
2.4	Removing and installing left flange shaft	125
2.5	Removing and installing bearing for left flange shaft	127
2.6	Removing and installing differential	128
2.7	Removing and installing right flange shaft	130
2.8	Removing and installing bearing for right flange shaft	132
<b>3</b>	<b>Gearbox control system</b>	<b>136</b>
3.1	Overview of fitting locations - gearbox control system	136
3.2	Assembly overview - senders in gearbox housing	138
3.3	Removing and installing gearbox control unit	140
3.4	Removing and installing gearbox input speed sender G182/clutch temperature sender 1 G658	143
3.5	Removing and installing clutch temperature sender 2 G659	145
<b>39 - Final drive - front differential</b>		<b>147</b>
<b>1</b>	<b>Final drive - front differential</b>	<b>147</b>