

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the ignition system	4
3 Repair instructions	5
3.1 Identification plates	5
3.2 Use of impact wrenches	5
3.3 Risk of damage to components	6
3.4 Rules for cleanliness	6
3.5 Checking for leaks on vehicle	7
3.6 Foreign material in engine	7
3.7 Cleaning engine	8
3.8 Contact corrosion	8
3.9 Routing and attachment of pipes, hoses and wiring	8
3.10 Fitting protective covers on bodywork	8
3.11 Checking vacuum system	9
3.12 Installing radiators and condensers	10
3.13 Nuts, bolts	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Placing engine/gearbox assembly on scissor-type assembly platform	82
1.3 Separating engine and gearbox	84
1.4 Securing engine to engine and gearbox support	87
1.5 Installing engine	91
2 Assembly mountings	97
2.1 Assembly overview - assembly mountings	97
2.2 Removing and installing engine mountings	100
2.3 Removing and installing gearbox mounting	101
3 Engine cover panel	106
3.1 Assembly overview - engine compartment covers	106
3.2 Removing and installing engine compartment cover	107
13 - Crankshaft group	111
1 Cylinder block (pulley end)	111
1.1 Assembly overview - poly V-belt drive	111
1.2 Removing and installing poly V-belt	113
1.3 Removing and installing poly V-belt tensioner	114
1.4 Removing and installing bracket for ancillaries	115
1.5 Removing and installing vibration damper	115
1.6 Renewing crankshaft oil seal (pulley end)	116
2 Cylinder block (gearbox end)	120
2.1 Assembly overview - cylinder block (gearbox end)	120
2.2 Removing and installing flywheel	120
2.3 Renewing crankshaft oil seal (gearbox end)	123



3	Crankshaft	125
3.1	Assembly overview - crankshaft	125
3.2	Allocation of main bearing shells	129
3.3	Crankshaft dimensions	132
3.4	Measuring axial clearance of crankshaft	132
3.5	Measuring radial clearance of crankshaft	133
3.6	Removing and installing intake module and retaining frame	133
4	Pistons and conrods	139
4.1	Assembly overview - pistons and conrods	139
4.2	Removing and installing pistons	141
4.3	Checking pistons and cylinder bores	143
4.4	Checking radial clearance of conrod bearings	144
5	Auxiliary drive	145
5.1	Assembly overview - auxiliary drive	145
5.2	Removing and installing spur gear drive	146
5.3	Renewing oil seal for AC compressor drive	148
15	Cylinder head, valve gear	151
1	Timing chain cover	151
1.1	Assembly overview - timing chain cover	151
1.2	Removing and installing timing chain cover	154
2	Chain drive	164
2.1	Assembly overview - camshaft timing chains	164
2.2	Assembly overview - drive chain for valve gear	168
2.3	Assembly overview - drive chain	170
2.4	Removing camshaft timing chain from camshafts	170
2.5	Removing and installing camshaft timing chain	179
2.6	Removing and installing drive chain for valve gear	182
2.7	Removing and installing drive chain for auxiliary drive	183
3	Cylinder head	187
3.1	Assembly overview - cylinder head	187
3.2	Removing and installing cylinder head cover	191
3.3	Removing and installing cylinder head	195
3.4	Checking compression	201
4	Valve gear	204
4.1	Assembly overview - valve gear	204
4.2	Measuring axial clearance of camshaft	207
4.3	Measuring radial clearance of camshaft	208
4.4	Removing and installing camshaft	209
4.5	Checking hydraulic compensation elements	214
4.6	Removing and installing valve stem oil seals	216
5	Inlet and exhaust valves	225
5.1	Checking valve guides	225
5.2	Checking valves	226
5.3	Valve dimensions	226
17	Lubrication	227
1	Sump/oil pump	227
1.1	Assembly overview - sump/oil pump	227
1.2	Engine oil	229
1.3	Removing and installing oil pump	229
1.4	Removing and installing oil level and oil temperature sender G266	232
2	Engine oil cooler	233
2.1	Assembly overview - engine oil cooler	233

2.2	Removing and installing engine oil cooler	238
2.3	Removing and installing mounting plate for engine oil cooler, pressure regulating valve and oil filter housing	241
3	Crankcase breather	244
3.1	Assembly overview - crankcase breather system	244
3.2	Removing and installing crankcase breather hoses	246
4	Oil filter/oil pressure switches	250
4.1	Assembly overview - oil filter housing/oil pressure switches	250
4.2	Removing and installing oil filter housing	252
4.3	Removing and installing oil pressure switch F22	254
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	254
4.5	Checking oil pressure and oil pressure switch	255
4.6	Removing and installing oil temperature sender 2 G664	257
5	Oil circuit	258
5.1	Assembly overview - oil circuit	258
5.2	Oil spray jets/valves	260
5.3	Removing and installing oil reservoir	261
19	Cooling	263
1	Cooling system/coolant	263
1.1	Connection diagram - coolant hoses	263
1.2	Assembly overview - coolant expansion tank	264
1.3	Checking cooling system for leaks	265
1.4	Draining and filling cooling system	267
2	Coolant pump/thermostat assembly	275
2.1	Assembly overview - coolant pump	275
2.2	Assembly overview - thermostat	276
2.3	Assembly overview - electric coolant pump	277
2.4	Removing and installing electric coolant pump	278
2.5	Removing and installing coolant pump	279
2.6	Removing and installing thermostat	282
2.7	Checking thermostat	284
2.8	Removing and installing coolant temperature sender G62	285
3	Coolant pipes	286
3.1	Assembly overview - coolant pipes	286
3.2	Assembly overview - lower coolant pipes	288
3.3	Fitting coolant hoses	291
3.4	Removing and installing coolant pipes	291
3.5	Removing and installing lower coolant pipes	296
3.6	Removing and installing coolant pipes for gearbox	309
4	Radiators/radiator fans	312
4.1	Assembly overview - radiators/radiator fans	312
4.2	Assembly overview - auxiliary radiator	314
4.3	Removing and installing radiator	315
4.4	Removing and installing radiator fans	320
4.5	Removing and installing auxiliary radiator	322
24	Mixture preparation - injection	324
1	Injection system	324
1.1	Overview of fitting locations - injection system	324
2	Vacuum system	335
2.1	Connection diagram - vacuum system	335
3	Air filter	337
3.1	Assembly overview - air filter housing	337
3.2	Removing and installing air filter housing	341



3.3	Aligning brackets for air filter housing	343
4	Intake manifold	346
4.1	Assembly overview - intake manifold	346
4.2	Assembly overview - lower part of intake manifold with fuel rail	348
4.3	Removing and installing upper part of intake manifold	350
4.4	Removing and installing lower part of intake manifold with fuel rail	355
4.5	Removing and installing throttle valve module	357
5	Injectors	359
5.1	Assembly overview - fuel rail with injectors	359
5.2	Removing and installing injectors	362
5.3	Cleaning injectors	367
6	Senders and sensors	369
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	369
6.2	Removing and installing actuator for structure-borne sound	371
6.3	Removing and installing control unit for structure-borne sound	373
6.4	Removing and installing fuel pressure senders	374
6.5	Removing and installing air mass meter G70	375
6.6	Removing and installing pressure differential sender	376
7	High-pressure pump	377
7.1	Assembly overview - high-pressure pump	377
7.2	Removing and installing high-pressure pipe	379
7.3	Removing and installing high-pressure pump	380
8	Lambda probe	383
8.1	Assembly overview - Lambda probe	383
8.2	Removing and installing Lambda probe	384
9	Engine control unit	387
9.1	Assembly overview - engine control unit	387
9.2	Removing and installing engine control unit J623	389
26 - Exhaust system		392
1	Exhaust pipes/silencers	392
1.1	Assembly overview - silencer	392
1.2	Removing and installing silencer	395
1.3	Checking exhaust system for leaks	399
2	Emission control system	401
2.1	Assembly overview - emission control system	401
2.2	Removing and installing catalytic converter	405
2.3	Removing and installing particulate filter	407
2.4	Checking vacuum unit for exhaust flap	408
3	Exhaust gas temperature regulation	410
3.1	Assembly overview - exhaust gas temperature regulation	410
3.2	Removing and installing exhaust gas temperature sender	411
4	Secondary air system	415
4.1	Assembly overview - secondary air system	415
4.2	Removing and installing secondary air pump motor V101	418
4.3	Secondary air pump motor 2 V189	418
4.4	Checking secondary air inlet valve	419
4.5	Removing and installing combination valve	421
4.6	Removing and installing sender 1 for secondary air pressure G609	424
28 - Ignition system		426
1	Ignition system	426
1.1	Assembly overview - ignition system	426

1.2	Test data - spark plugs	428
1.3	Removing and installing ignition coils	428
1.4	Removing and installing knock sensor	430
1.5	Removing and installing Hall senders	431
1.6	Removing and installing engine speed sender G28	433