

Contents

00	Technical data	1
1	Safety information	1
1.1	Safety precautions when working on the fuel system	1
1.2	Safety precautions when working on vehicles with start/stop system	1
1.3	Safety precautions when using testers and measuring instruments during a road test	2
2	Repair instructions	3
2.1	Rules for cleanliness	3
2.2	Test conditions	3
2.3	Checking fuel tank for leaks	3
2.4	Contact corrosion	4
2.5	Fitting protective covers on bodywork	4
2.6	Routing and attachment of pipes, hoses and wiring	4
20	Fuel supply system	5
1	Fuel tank	5
1.1	Exploded view - fuel tank	5
1.2	Routing and attachment of earth connection for electrostatic discharge	13
1.3	Draining fuel tank	15
1.4	Removing and installing fuel tank	31
2	Fuel delivery unit/fuel gauge senders	52
2.1	Exploded view - fuel delivery unit/fuel gauge senders	52
2.2	Removing and installing fuel delivery unit/fuel gauge senders	56
2.3	Removing and installing fuel gauge senders in fuel tank chamber (right-side)	68
2.4	Removing and installing fuel gauge senders in fuel tank chamber (left-side)	79
3	Plug-in connectors	90
3.1	Disconnecting plug-in connectors	90
4	Fuel filter	95
4.1	Assembly overview - fuel filter	95
4.2	Removing and installing fuel filter	95
5	Activated charcoal filter system	106
5.1	Connection diagram - activated charcoal filter system	106
5.2	Assembly overview - activated charcoal filter system	107
5.3	Removing and installing activated charcoal filter	111
5.4	Removing and installing tank pressure sensor G400	113
5.5	Checking fuel system for leaks	114
6	Accelerator mechanism	118
6.1	Assembly overview - accelerator pedal module	118
6.2	Removing and installing accelerator pedal module with accelerator position sender G79/ G185	118
7	Fuel pump	121
7.1	Checking fuel system pressurisation pump G6	121
7.2	Suction-jet pumps: operation	126
7.3	Removing and installing fuel pump control unit J538	127