

001 - Basic equipment	1-21
1. Basic equipment	1
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Steering angle sender, Steering column electronics control unit	2
3. Fuse holder C, Fuse carrier 2, Fuse carrier 4, Fuse carrier 5	3
4. Treble horn, Bass horn, Horn relay, Onboard supply control unit	4
5. Centre switch module in dash panel, Rear spoiler adjustment control unit, Onboard supply control unit	5
6. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Front passenger side wiper motor control unit, Washer pump, Left washer jet heater element, Right washer jet heater element	6
7. Brake fluid level warning contact, Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	7
8. Glove compartment light switch, Onboard supply control unit, Light 1 for front centre console background lighting, Light for centre dash panel background lighting, Glove compartment light, Left footwell light, Right footwell light	8
9. Onboard supply control unit, Storage compartment illumination bulb, Left engine compartment light, Right engine compartment light	9
10. Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender, Onboard supply control unit	10
11. Light switch, Onboard supply control unit	11
12. Data bus diagnostic interface	12
13. Convenience system central control unit	13
14. Convenience system central control unit, High-level brake light bulb, Luggage compartment light	14
15. Terminal 15 voltage supply relay, Convenience system central control unit, Left number plate light, Right number plate light	15
16. Heated rear window relay, Convenience system central control unit, Central locking and anti-theft alarm system aerial, Cigarette lighter, 12 V socket	16
17. Heated rear window, Heated partition glass	17
18. Brake light switch, Engine/motor control unit	18
19. Emergency assistance call button, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Front roof module, Front left reading light, Front right reading light, Automatic anti-dazzle interior mirror	19
20. Dash panel insert operating button, Fuel gauge sender 3, Control unit in dash panel insert	20
21. Control unit in dash panel insert, Control unit 1 for information electronics, Display in dash panel insert	21
002 - 5.2l petrol engine , CSPA,CSPB,DARA,DKAA,DKAB,DKAD	22-55
1. 5.2l petrol engine , CSPA,CSPB,DARA,DKAA,DKAB,DKAD	22
2. Battery monitor control unit, Battery isolation igniter, Jump start connection	23
3. Fuse holder A, Fuse holder B	24
4. Fuse holder B	25
5. Main relay, Engine component current supply relay, Starter relay 1, Starter relay 2, Engine electronics fuse	26
6. Engine/motor control unit	27
7. Oil pressure switch, Secondary air pump relay, Engine/motor control unit, Secondary air pump motor	28
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	29
9. Coolant temperature sender, Throttle valve module, Engine/motor control unit, Ignition coil 5 with output stage	30
10. Air mass measurement module, Intake air temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve, Fuel metering valve, Exhaust flap 1 valve	31
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Camshaft control valve 1, Piston cooling jet control valve	32
12. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5	33
13. Fuel pressure sender, Fuel pressure sender 2, Oil temperature sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve	34
14. Oil pressure switch for reduced oil pressure, Knock sensor 1, Knock sensor 2, Exhaust gas temperature sender 1, Sender 1 for secondary air pressure, Engine/motor control unit	35
15. Hall sender, Hall sender 3, Engine/motor control unit, Exhaust camshaft control valve 1	36
16. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater. Lambda probe 1 heater after catalytic converter	37

17. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Air filter bypass flap valve	38
18. Engine/motor control unit	39
19. Engine/motor control unit	40
20. Brake light switch, Coolant shortage indicator sender, Convenience system central control unit	41
21. Tank pressure sensor, Brake servo relay, Control unit for fuel tank leak detection, Vacuum pump for brakes	42
22. Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 3, Control unit in dash panel insert, Fuel pump control unit	43
23. Radiator fan, Radiator fan, Radiator fan 2, Radiator fan 2	44
24. Engine/motor control unit 2	45
25. Secondary air pump 2 relay, Engine/motor control unit 2, Secondary air pump motor 2	46
26. Engine/motor control unit 2, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage, Ignition coil 9 with output stage	47
27. Throttle valve module 2, Engine/motor control unit 2, Ignition coil 10 with output stage, Fuel metering valve 2	48
28. Air mass meter 2, Intake air temperature sender 2, Fuel pressure sender 2 for low pressure, Engine/motor control unit 2, Left electrohydraulic engine mounting solenoid valve, Exhaust camshaft control valve 2	49
29. Engine/motor control unit 2, Injector, cylinder 6, Injector, cylinder 8, Activated charcoal filter solenoid valve 2, Camshaft control valve 2, Injector, cylinder 10	50
30. Engine/motor control unit 2, Injector 2, cylinder 6, Injector 2, cylinder 7, Injector 2, cylinder 10	51
31. Engine speed sender, Lambda probe 2, Lambda probe 2 after catalytic converter, Engine/motor control unit 2	52
32. Hall sender 2, Knock sensor 3, Knock sensor 4, Exhaust gas temperature sender 1 for bank 2, Hall sender 4, Engine/motor control unit 2	53
33. Engine/motor control unit 2, Mechatronic unit for dual clutch gearbox	54
34. Automatic gearbox control unit 2, Continued coolant circulation pump	55
003 - 7-speed dual clutch gearbox 0BZ	56-62
1. 7-speed dual clutch gearbox 0BZ	56
2. Gearbox input speed sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	57
3. Gearbox oil temperature sender, Gear selector movement sensor 1, Gear selector movement sensor 2, Gear selector movement sensor 3, Gear selector movement sensor 4, Hydraulic pressure sender 1, Hydraulic pressure sender 2, Clutch temperature sender 1, Mechatronic unit for dual clutch gearbox, Clutch cooling valve 1, Main pressure valve	58
4. Automatic gearbox control unit 2	59
5. Clutch temperature sender 2, Parking lock sender, Automatic gearbox control unit 2, Clutch cooling valve 2, Parking lock solenoid, Parking lock solenoid valve, Parking lock solenoid valve 2	60
6. Selector lever, Selector lever sensors control unit, Selected range display	61
7. Selector lever, Button for selector lever release, Parking lock button, Selector lever position sender, Parking lock indicator lamp	62
004 - Fuse assignment	63-89
1. Fuse assignment	63
2. Battery monitor control unit, Battery isolation igniter, Jump start connection	64
3. Starter, Alternator, Voltage regulator, Engine component power supply relay, Fuse holder B, Fuse carrier 1	65
4. Main relay, Fuse holder A, Engine electronics fuse	66
5. Fuse holder B, Fuse carrier 2	67
6. Secondary air pump relay, Secondary air pump 2 relay, Coupling point on engine, top	68
7. Coupling point on engine, top	69
8. Coupling point on engine, top	70
9. Connection 4 in engine compartment wiring harness, Connection 5 in engine compartment wiring harness	71
10. Engine/motor control unit	72
11. Fuse holder C, Fuse carrier 1	73
12. Fuse holder C, Fuse carrier 1	74
13. Fuse holder C, Fuse carrier 1	75
14. Fuse holder C, Fuse carrier 1, Coupling point on left A-pillar, bottom, Coupling point in E-box in engine compartment	76
15. Fuse holder C, Fuse carrier 2, Coupling point in E-box in engine compartment	77
16. Fuse holder C, Fuse carrier 2, Fuse carrier 3	78
17. Toll collection sender, Fuse holder C, Fuse carrier 3, Fuse carrier 4	79
18. Terminal 15 voltage supply relay, Fuse carrier 4	80
19. Radiator fan fuse for 2nd speed, Fuse 1 (30), Fuse 2 (30), Fuse 3 (30)	81
20. Radiator fan single fuse. Driver seat adjustment thermal fuse 1. Front passenger seat adjustment	82

thermal fuse 1	
21. Fuse carrier 5	83
22. Fuse carrier 5	84
23. Fuse holder C, Fuse carrier 6	85
24. Fuse holder D, Fuse carrier 1	86
25. Fuse holder D, Fuse carrier 1	87
26. Fuse holder D, Fuse carrier 2, Fuse carrier 3	88
27. Fuse holder D, Fuse carrier 2	89
005 - Convenience system, left-hand drive , (LOL)	90-107
1. Convenience system, left-hand drive , (LOL)	90
2. Coupling point for front left door	91
3. Alarm system off switch, Driver exterior door handle switch, Contact sensor for front left exterior door handle, Driver door control unit, Onboard supply control unit, Light conductor for front left sill panel moulding background lighting	92
4. Driver side central locking lock unit, Driver door control unit, Driver side window regulator motor	93
5. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side interior door handle illumination bulb, Driver door storage compartment illumination bulb, Light for left air vent illumination, Front left entry light, Light conductor for driver side background lighting	94
6. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver door control unit	95
7. Rear lid remote release button, Operating unit for window regulator in driver door, Driver door control unit	96
8. Driver door control unit	97
9. Driver side door warning lamp	98
10. Light conductor for front right sill panel moulding background lighting	99
11. Front passenger exterior door handle switch, Contact sensor for front right exterior door handle, Front passenger door control unit, Front passenger side window regulator motor	100
12. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side interior door handle illumination bulb, Front right entry light	101
13. Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger door storage compartment illumination bulb, Light for right air vent illumination, Light conductor for front passenger side background lighting	102
14. Front passenger side window regulator button, Front passenger door control unit, Passenger side exterior mirror	103
15. Front passenger door control unit, Convenience system central control unit, Passenger side exterior mirror, Tank filler flap locking motor, Bonnet release motor, Front passenger side door warning lamp	104
16. Bonnet contact switch, Convenience system central control unit	105
17. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Central locking and anti-theft alarm system aerial, Aerial amplifier 3	106
18. Rear lid release switch, Button for luggage compartment manual release, Rear lid central locking relay, Convenience system central control unit, Rear lid central locking motor	107
006 - Airbag systems	108-114
1. Airbag systems	108
2. Airbag control unit, Airbag igniter on driver side, Airbag igniter 2 on driver side	109
3. Key-operated switch to deactivate airbag on front passenger side, Front airbag crash sensor for driver side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	110
4. Front airbag crash sensor for front passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Trigger for driver side rollover bar, Trigger for passenger side rollover bar	111
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Igniter for exhaust valve for front passenger airbag	112
6. Driver side belt switch, Front passenger side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	113
7. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	114
007 - Data bus diagnostic interface and diagnostic connector	115-127
1. Data bus diagnostic interface and diagnostic connector	115
2. Data bus diagnostic interface	116
3. Data bus diagnostic interface, Connection 2 (powertrain CAN bus, high), in main wiring harness, Connection 2 (powertrain CAN bus, low), in main wiring harness	117
4. Data bus diagnostic interface	118
5. Data bus diaagnostic interface	119

6. Data bus diagnostic interface	120
7. Data bus diagnostic interface	121
8. Data bus diagnostic interface, Diagnostic connection, Connection 1 (CAN bus high), in engine wiring harness, Connection 1 (CAN bus low), in engine wiring harness	122
9. Control unit for seat and steering column adjustment with memory function, Control unit for front passenger seat adjustment with memory function, Connection 1 (CAN bus high), in engine wiring harness, Connection 1 (CAN bus low), in engine wiring harness	123
10. Control unit in dash panel insert, Driver door control unit, Front passenger door control unit, Control unit for electronic steering column lock, Active steering control unit	124
11. Operating and display unit for front air conditioning system, Fresh air blower control unit, Convenience system central control unit, Reversing camera system control unit, Control unit 1 for information electronics	125
12. Electronically controlled damping control unit, Connection 2 (LIN bus) in main wiring harness, Connection 3 (LIN bus) in main wiring harness, Connection 4 (LIN bus) in main wiring harness	126
13. Digital sound package control unit, TV tuner, Connection 1 (diagnosis), in main wiring harness, Connection 6 (LIN bus) in main wiring harness	127
008 - Air conditioning system , (9AK)	128-134
1. Air conditioning system , (9AK)	128
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Data bus diagnostic interface, Fresh air blower	129
3. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Onboard supply control unit, Dash panel central vent illumination bulb	130
4. Operating and display unit for front air conditioning system, Footwell vent temperature sender, Evaporator output temperature sender, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Footwell flap control motor	131
5. Temperature flap control motor, Air flow flap control motor, Fresh air flap control motor	132
6. High-pressure sender, Air quality sensor, Humidity sender in fresh air intake duct, Centre vent control motor, Defroster flap control motor	133
7. Air conditioner compressor regulating valve, Continued coolant circulation pump	134
009 - Interface for special functions , (7G9)	135-136
1. Interface for special functions , (7G9)	135
2. Interface control unit for vehicle location system	136
010 - Anti-lock brake system (ABS)	137-141
1. Anti-lock brake system (ABS)	137
2. ABS control unit	138
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, Vacuum sender, ABS control unit, Front left ABS inlet valve	139
4. Button for TCS and electronic stabilisation program, ABS control unit, Data bus diagnostic interface, Rear right ABS outlet valve, ABS hydraulic pump	140
5. Control unit for sensor electronics	141
011 - Multifunction steering wheel	142-147
1. Multifunction steering wheel	142
2. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Steering column electronics control unit	143
3. Cruise control system switch, Steering column electronics control unit, Heated steering wheel	144
4. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	145
5. Multifunction buttons on left in steering wheel, Tiptronic switch (shift down), Sport program button, Multifunction steering wheel control unit	146
6. Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Engine sound generator button, Multifunction steering wheel control unit	147
012 - Tail light clusters with LEDs , (A8S),(8SP)	148-151
1. Tail light clusters with LEDs , (A8S),(8SP)	148
2. Convenience system central control unit	149
3. Convenience system central control unit, Left tail light cluster	150
4. Convenience system central control unit, Right tail light cluster	151
013 - Electrically adjustable rear spoiler , (5J2)	152-154
1. Electrically adjustable rear spoiler , (5J2)	152
2. Rear spoiler adjustment limit switch 1, Rear spoiler adjustment limit switch 2, Adjustable rear spoiler control unit, Adjustable rear spoiler motor, Rear spoiler	153
3. Centre switch module in dash panel, Adjustable rear spoiler switch, Adjustable rear spoiler control unit, Rear spoiler position warning lamp	154
014 - Automatic anti-dazzle interior mirror , (4L6),(4L7)	155-157
1. Automatic anti-dazzle interior mirror , (4L6),(4L7)	155
2. Humidity sender, Rain and light sensor, Light sensor, Automatic anti-dazzle interior mirror	156
3. Main beam assist control unit, Automatic anti-dazzle interior mirror	157
015 - Reversing camera (Rear Assist) . (KA2)	158-159

1. Reversing camera (Rear Assist) , (KA2)	158
2. Reversing camera system control unit, Reversing camera	159
016 - Electromechanical steering , (QZ7)	160-161
1. Electromechanical steering , (QZ7)	160
2. Power steering control unit	161
017 - LED headlights , (8IT)	162-170
1. LED headlights , (8IT)	162
2. Headlight range control unit, Onboard supply control unit	163
3. Onboard supply control unit, Data bus diagnostic interface, Front left side marker bulb, Front right side marker bulb	164
4. Output module 2 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb	165
5. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb	166
6. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left static cornering light	167
7. Output module 2 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb	168
8. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	169
9. Output module 1 for right LED headlight, Convenience system central control unit, Front right headlight, Rear left side marker bulb, Rear right side marker bulb, Right static cornering light	170
018 - LED headlights with laser main beams , (8IZ)	171-180
1. LED headlights with laser main beams , (8IZ)	171
2. Headlight range control unit, Onboard supply control unit	172
3. Output module 2 for left LED headlight, Output module 3 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	173
4. Output module 2 for left LED headlight, Output module 3 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	174
5. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb	175
6. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Front left side marker bulb, Front right side marker bulb, Left static cornering light, Left additional main beam bulb, Left headlight fan	176
7. Output module 2 for right LED headlight, Output module 3 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight	177
8. Output module 2 for right LED headlight, Output module 3 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight	178
9. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	179
10. Output module 1 for right LED headlight, Onboard supply control unit, Data bus diagnostic interface, Front right headlight, Right static cornering light, Right additional main beam bulb, Right headlight fan	180
019 - Tyre Pressure Monitoring System , (7K3),(7K4)	181-183
1. Tyre Pressure Monitoring System , (7K3),(7K4)	181
2. Sender unit for Tyre Pressure Monitoring System in rear right wheel housing, Tyre Pressure Monitoring System control unit	182
3. Sender unit for Tyre Pressure Monitoring System in front left wheel housing, Sender unit for Tyre Pressure Monitoring System in front right wheel housing, Sender unit for Tyre Pressure Monitoring System in rear left wheel housing, Tyre Pressure Monitoring System control unit	183
020 - Parking aid (PDC) , (7X2)	184-188
1. Parking aid (PDC) , (7X2)	184
2. Onboard supply control unit	185
3. Centre switch module in dash panel, Parking aid button, Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit, Parking aid warning lamp	186
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	187
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Onboard supply control unit	188
021 - Garage door opener , (VC1)	189-190
1. Garage door opener , (VC1)	189
2. Garage door operating unit, Garage door opener button 1, Garage door opener button 2, Garage door opener button 3, Garage door operation control unit	190
022 - All-wheel drive , (1X1),(1X2)	191-193
1. All-wheel drive , (1X1),(1X2)	191
2. All-wheel drive control unit. Data bus diagnostic interface. Fuse 1 (30)	192

3. Hydraulic pressure sender for all-wheel drive, Hydraulic temperature sender for all-wheel drive, All-wheel drive control unit, All-wheel drive coupling pump	193
023 - Seat heating , (4A3)	194-197
1. Seat heating , (4A3)	194
2. Operating and display unit for front air conditioning system, Onboard supply control unit, Data bus diagnostic interface	195
3. Front left seat temperature sender, Heated seat cushion for driver seat, Heated seat extension for driver seat, Heated backrest for front left seat	196
4. Front right seat temperature sender, Heated seat cushion for front passenger seat, Heated seat extension for front passenger seat, Heated backrest for front right seat	197
024 - Automatic adaptive suspension, adjustable dampers , (2MN)	198-202
1. Automatic adaptive suspension, adjustable dampers , (2MN)	198
2. Electronically controlled damping control unit	199
3. Rear left vehicle level sender, Front left vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve	200
4. Rear right vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	201
5. Shock absorber damping adjustment button, Steering column electronics control unit, Shock absorber damping adjustment warning lamp	202
025 - Electromechanical parking brake	203-206
1. Electromechanical parking brake	203
2. Control unit for electromechanical parking brake, Right parking brake motor	204
3. Electromechanical parking brake button, Control unit for electromechanical parking brake, Left parking brake motor	205
4. Electromechanical parking brake button, Control unit for electromechanical parking brake, Electromechanical parking brake warning lamp	206
026 - Adjustable seat , (3PN),(3PR)	207-217
1. Adjustable seat , (3PN),(3PR)	207
2. Control unit for seat and steering column adjustment with memory function, Data bus diagnostic interface, Driver seat adjustment thermal fuse 1	208
3. Seat depth adjustment button, Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	209
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Compressor for multicontour driver seat	210
5. Control unit for seat and steering column adjustment with memory function, Valve for backrest side bolster air cushions, driver side, Driver seat backrest adjustment motor, Driver seat depth adjustment motor	211
6. Pressure sensor 1 in driver seat, Control unit for seat and steering column adjustment with memory function, Valve for lower air cushion of lumbar support, driver side	212
7. Control unit for front passenger seat adjustment with memory function, Front passenger seat adjustment thermal fuse 1	213
8. Front passenger seat adjustment operating unit, Front passenger seat depth adjustment button, Control unit for front passenger seat adjustment with memory function	214
9. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Compressor for multicontour front passenger seat	215
10. Control unit for front passenger seat adjustment with memory function, Valve for backrest side bolster air cushions, front passenger side, Front passenger seat backrest adjustment motor, Front passenger seat depth adjustment motor	216
11. Pressure sensor 1 in front passenger seat, Control unit for front passenger seat adjustment with memory function, Valve for upper air cushion of lumbar support, front passenger side	217
027 - Adjustable seat , (3PF)	218-222
1. Adjustable seat , (3PF)	218
2. Driver seat backrest adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Driver seat backrest adjustment motor	219
3. Driver seat height adjustment switch, Driver seat adjustment operating unit, Driver seat height adjustment motor	220
4. Front passenger seat backrest adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Front passenger seat backrest adjustment motor	221
5. Front passenger seat height adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat height adjustment motor	222
028 - Entry and start authorisation , (4F2),(4F6),(4I3)	223-227
1. Entry and start authorisation , (4F2),(4F6),(4I3)	223
2. Convenience system central control unit, Control unit for electronic steering column lock	224
3. Immobiliser reader coil. Convenience system central control unit. Right aerial for entry and	225

start authorisation	
4. Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Left aerial for entry and start authorisation	226
5. Entry and start authorisation button, Convenience system central control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Central locking and anti-theft alarm system aerial, Aerial amplifier 3	227
029 - Active steering (dynamic steering) , (1N8)	228-230
1. Active steering (dynamic steering) , (1N8)	228
2. Active steering control unit, Fuse 3 (30)	229
3. Active steering safety lock actuator, Active steering control unit, Active steering motor	230
030 - Tail light clusters with LEDs, only models with US equipment , (A8U),(8SP)	231-234
1. Tail light clusters with LEDs, only models with US equipment , (A8U),(8SP)	231
2. Convenience system central control unit, Rear left side marker bulb, Rear right side marker bulb	232
3. Convenience system central control unit, Left tail light cluster	233
4. Convenience system central control unit, Right tail light cluster	234
031 - MMI high with navigation system , (I8H)	235-244
1. MMI high with navigation system , (I8H)	235
2. Driver side volume regulator, Multimedia system operating unit, Control unit 1 for information electronics	236
3. Multimedia system operating unit, Control unit 1 for information electronics	237
4. Control unit in dash panel insert, Control unit 1 for information electronics	238
5. Chip card reader control unit, Control unit 1 for information electronics, Connection for external audio sources	239
6. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial	240
7. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, LTE aerial 1	241
8. Reversing camera system control unit, Control unit 1 for information electronics, Aerial, Aerial amplifier, Telephone aerial, Satellite aerial, LTE aerial 2	242
9. Control unit 1 for information electronics, GPS aerial, TV tuner, Radio aerial 2, Aerial amplifier 2, Digital radio aerial	243
10. Control unit 1 for information electronics, Emergency call module control unit and communication unit	244
032 - Digital TV tuner , (QV1)	245-249
1. Digital TV tuner , (QV1)	245
2. TV tuner	246
3. Aerial, Aerial amplifier, TV aerial 1, TV aerial 2, TV tuner, Aerial amplifier 1 for TV	247
4. TV tuner, Radio aerial 2, Aerial amplifier 2, Digital radio aerial	248
5. TV aerial 3, TV tuner, Aerial amplifier 3	249
033 - Mobile telephone , (9ZE),(9ZX)	250-255
1. Mobile telephone , (9ZE),(9ZX)	250
2. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket	251
3. Multimedia system operating unit, Control unit 1 for information electronics, Aerial amplifier 3, LTE aerial 1, LTE aerial 2	252
4. Multimedia system operating unit, Control unit in dash panel insert, Control unit 1 for information electronics	253
5. Control unit 1 for information electronics, Control unit for seat belt microphone, Microphone unit in front roof module, Microphone 1 on driver side, Microphone 1 on front passenger side	254
6. Control unit for seat belt microphone	255
034 - Airbag systems (US equipment)	256-263
1. Airbag systems (US equipment)	256
2. Airbag control unit, Airbag igniter on driver side, Airbag igniter 2 on driver side	257
3. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	258
4. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Trigger for driver side rollover bar, Trigger for passenger side rollover bar	259
5. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Igniter for exhaust valve for front passenger airbag	260
6. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side	261
7. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit, Side airbag igniter on front passenger side	262
8. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	263
035 - Power operated convertible roof . (K8W)	264-272

1. Power operated convertible roof , (K8W)	264
2. Heated rear window relay, Convertible roof actuation control unit	265
3. Convertible roof actuation button, Convertible roof actuation control unit, Convertible roof actuation hydraulic pump relay, Hydraulic pump relay 2 for convertible roof, Convertible roof actuation hydraulic pump	266
4. Convertible roof actuation control unit, Power operated convertible roof valve 1, Power operated convertible roof valve 2, Power operated convertible roof valve 3, Power operated convertible roof valve 4, Power operated convertible roof valve 5	267
5. Rear window switch, bottom, Convertible roof actuation control unit, Coupling point in interior, centre, Rear window lock unit, Heated rear window	268
6. Convertible roof latch closed switch (left-side), Convertible roof latch closed switch (right-side), Convertible roof locking readiness switch (left-side), Convertible roof locking readiness switch (right-side), Tensioning strut stowed switch, left, Tensioning strut stowed switch, right, Convertible roof actuation control unit	269
7. Convertible roof stowed switch, Convertible roof latch open switch, Upper right tensioning strut switch, Upper left tensioning strut switch, Convertible roof actuation control unit	270
8. Convertible roof box lid open switch, Convertible roof box lid locked switch, left, Convertible roof box lid released switch, left, Convertible roof box lid locked switch, right, Convertible roof box lid released switch, right, Convertible roof box lid closed switch, Convertible roof actuation control unit	271
9. Convertible roof actuation control unit, Right convertible roof flap motor, Left convertible roof flap motor	272
036 - Reversing camera (Rear Assist) , (KA2)	273-274
1. Reversing camera (Rear Assist) , (KA2)	273
2. Reversing camera system control unit	274
037 - Emergency call module , (B37)	275-276
1. Emergency call module , (B37)	275
2. Emergency call module control unit and communication unit	276
038 - Sound system , (9VD)	277-279
1. Sound system , (9VD)	277
2. Control unit in dash panel insert, Control unit 1 for information electronics, Front left treble loudspeaker	278
3. Control unit 1 for information electronics, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Centre loudspeaker	279
039 - Sound system , (9VS)	280-287
1. Sound system , (9VS)	280
2. Control unit in dash panel insert, Control unit 1 for information electronics	281
3. Digital sound package control unit, Front right treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2	282
4. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Internal microphone, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Microphone unit in front roof module, Subwoofer	283
5. Digital sound package control unit, Rear left treble loudspeaker, Front left treble loudspeaker, Rear left mid-range loudspeaker	284
6. Digital sound package control unit, Rear right treble loudspeaker, Rear right mid-range loudspeaker	285
7. Digital sound package control unit, Loudspeaker 1 in front left head restraint, Loudspeaker 2 in front left head restraint	286
8. Loudspeaker 1 in front right head restraint, Loudspeaker 2 in front right head restraint	287
040 - Data bus network (FlexRay bus)	288-289
1. Data bus network (FlexRay bus)	288
2. Data bus diagnostic interface	289
041 - MMI high with navigation system , (I8H)	290-299
1. MMI high with navigation system , (I8H)	290
2. Driver side volume regulator, Multimedia system operating unit, Control unit 1 for information electronics	291
3. Multimedia system operating unit, Control unit 1 for information electronics	292
4. Control unit in dash panel insert, Control unit 1 for information electronics	293
5. Chip card reader control unit, Control unit 1 for information electronics, USB hub	294
6. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, USB hub	295
7. Chip card reader control unit, Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, Dedicated short-range communication aerial	296
8. Control unit 1 for information electronics, Aerial, Aerial amplifier, Telephone aerial, LTE aerial 1, LTE aerial 2	297
9. Control unit 1 for information electronics. TV tuner. Radio aerial 2. Aerial amplifier 2. Digital	298



radio aerial	
10. Reversing camera system control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, GPS aerial, Satellite aerial	299
042 - 5.2l petrol engine , DKAC,DMWA,DMWC	300-333
1. 5.2l petrol engine , DKAC,DMWA,DMWC	300
2. Battery monitor control unit, Battery isolation igniter, Jump start connection	301
3. Fuse holder A, Fuse holder B	302
4. Fuse holder B	303
5. Main relay, Engine component power supply relay, Starter relay 1, Starter relay 2, Engine electronics fuse	304
6. Engine/motor control unit	305
7. Oil pressure switch, Secondary air pump relay, Engine/motor control unit, Secondary air pump motor	306
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	307
9. Throttle valve module, Coolant temperature sender, Engine/motor control unit, Ignition coil 5 with output stage	308
10. Air mass measurement module, Intake air temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve, Fuel metering valve, Exhaust flap 1 valve	309
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Camshaft control valve 1, Piston cooling jet control valve	310
12. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5	311
13. Fuel pressure sender, Fuel pressure sender 2, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve	312
14. Oil pressure switch for reduced oil pressure, Knock sensor 1, Knock sensor 2, Sender 1 for secondary air pressure, Oil temperature sender 2, Engine/motor control unit	313
15. Hall sender, Exhaust gas temperature sender 1, Hall sender 3, Pressure differential sender for particulate filter, Engine/motor control unit, Exhaust camshaft control valve 1	314
16. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	315
17. Accelerator pedal module, Accelerator position sender 2, Engine/motor control unit, Air filter bypass flap valve	316
18. Engine/motor control unit	317
19. Temperature and pressure sender for fuel tank, Engine/motor control unit	318
20. Brake light switch, Coolant shortage indicator sender, Convenience system central control unit, Engine/motor control unit	319
21. Tank pressure sensor, Brake servo relay, Control unit for fuel tank leak detection, Vacuum pump for brakes	320
22. Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 3, Control unit in dash panel insert, Fuel pump control unit	321
23. Radiator fan, Radiator fan, Radiator fan 2, Radiator fan 2	322
24. Engine/motor control unit 2	323
25. Secondary air pump 2 relay, Engine/motor control unit 2, Secondary air pump motor 2	324
26. Engine/motor control unit 2, Ignition coil 6 with output stage, Ignition coil 7 with output stage, Ignition coil 8 with output stage, Ignition coil 9 with output stage	325
27. Throttle valve module 2, Engine/motor control unit 2, Ignition coil 10 with output stage, Fuel metering valve 2	326
28. Air mass meter 2, Intake air temperature sender 2, Fuel pressure sender 2 for low pressure, Engine/motor control unit 2, Left electrohydraulic engine mounting solenoid valve, Exhaust camshaft control valve 2	327
29. Engine/motor control unit 2, Injector, cylinder 6, Injector, cylinder 8, Activated charcoal filter solenoid valve 2, Camshaft control valve 2, Injector, cylinder 10	328
30. Engine/motor control unit 2, Injector 2, cylinder 6, Injector 2, cylinder 7, Injector 2, cylinder 10	329
31. Lambda probe 2 after catalytic converter, Lambda probe 2 before catalytic converter, Engine speed sender, Engine/motor control unit 2	330
32. Hall sender 2, Knock sensor 3, Knock sensor 4, Exhaust gas temperature sender 1 for bank 2, Hall sender 4, Engine/motor control unit 2	331
33. Sender 2 for secondary air pressure, Pressure differential sender 2 for particulate filter, Engine/motor control unit 2, Mechatronic unit for dual clutch gearbox	332
34. Automatic gearbox control unit 2, Continued coolant circulation pump	333
043 - Engine sound generator	334-336
1. Engine sound generator	334

2. Suppression filter, Data bus diagnostic interface, Engine sound generator control unit	335
3. Suppression filter, Actuator 1 for engine sound generator, Actuator 2 for engine sound generator	336
044 - Reverse warning beeper , (ER7)	337-338
1. Reverse warning beeper , (ER7)	337
2. Reverse warning beeper, Convenience system central control unit, Left tail light cluster	338
045 - Toll detection system , (B1P)	339-340
1. Toll detection system , (B1P)	339
2. Toll collection sender	340
046 - Convenience system, right-hand drive , (LOR)	341-358
1. Convenience system, right-hand drive , (LOR)	341
2. Coupling point for front right door	342
3. Alarm system off switch, Driver exterior door handle switch, Contact sensor for front right exterior door handle, Driver door control unit, Onboard supply control unit, Light conductor for front right sill panel moulding background lighting	343
4. Driver side central locking lock unit, Driver door control unit, Driver side window regulator motor	344
5. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side interior door handle illumination bulb, Driver door storage compartment illumination bulb, Light for right air vent illumination, Front right entry light, Light conductor for driver side background lighting	345
6. Mirror adjustment switch, Driver side interior locking button for central locking system, Driver door control unit	346
7. Rear lid remote release button, Operating unit for window regulator in driver door, Driver door control unit	347
8. Driver door control unit	348
9. Driver side door warning lamp	349
10. Light conductor for front left sill panel moulding background lighting	350
11. Front passenger exterior door handle switch, Contact sensor for front left exterior door handle, Front passenger door control unit, Front passenger side window regulator motor	351
12. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side interior door handle illumination bulb, Front left entry light	352
13. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Light for left air vent illumination, Light conductor for front passenger side background lighting	353
14. Front passenger side window regulator button, Front passenger door control unit, Passenger side exterior mirror	354
15. Front passenger door control unit, Convenience system central control unit, Passenger side exterior mirror, Tank filler flap locking motor, Front lid release motor, Front passenger side door warning lamp	355
16. Front lid contact switch, Convenience system central control unit	356
17. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Central locking and anti-theft alarm system aerial, Aerial amplifier 3	357
18. Rear lid release switch, Rear lid central locking relay, Rear lid central locking motor	358
801 - - Fitting locations: Earth points - 3	359-362
1. Earth points	359-362
1.1 Earth points in front part	359
1.2 Earth points in middle part, view from left	359
1.3 Earth points in middle part, view from right	360
1.4 Earth points in rear part	361-362
802 - -Fitting locations: Fuses - 1	363-379
1. Fuses	363-379
1.1 Overview of fuse carrier	363
1.2 Fitting location, main fuse carrier	364
1.3 Fitting location, fuse holder on cover for main fuse carrier	365
1.4 Fitting location, relay and fuse carrier 1 -SR1- with fuse holder A -SA-	366
1.5 Fuse assignment on fuse holder A -SA-	367
1.6 Fitting location, relay and fuse carrier 2 -SR2- with fuse holder B -SB-	368
1.7 Fuse assignment on fuse holder B -SB-	369
1.7.1 Fuse assignment, fuse carrier 1 -ST1-, black	369
1.7.2 Fuse assignment, fuse carrier 2 -ST2-, black	369
1.8 Fitting location, relay and fuse carrier 3 -SR3- with fuse holder C -SC-	370-371
1.9 Fuse assignment, fuse holder C -SC-	372-375
1.9.1 Fuse assignment, fuse carrier 1 -ST1-, black	372
1.9.2 Fuse assignment, fuse carrier 2 -ST2-, black	373
1.9.3 Fuse assignment, fuse carrier 3 -ST3-, black	373
1.9.4 Fuse assignment, fuse carrier 4 -ST4-, red	374
1.9.5 Fuse assignment, fuse carrier 5 -ST5-, brown	374
1.9.6 Fuse assignment. fuse carrier 6 -ST6-. black	375

1.10 Fitting location, relay and fuse carrier 4 -SR4- with fuse holder D -SD-	376-377
1.11 Fuse assignment on fuse holder D -SD-	378-379
1.11.1 Fuse assignment, fuse carrier 1 -ST1-, black	378
1.11.2 Fuse assignment, fuse carrier 2 -ST2-, brown	378
1.11.3 Fuse assignment, fuse carrier 3 -ST3-, red	379
803 - -Fitting locations: Relays - 3	380-384
1. Relays	380-384
1.1 Overview of relay carriers	380
1.2 Fitting location, relay and fuse carrier 1 -SR1-	380
1.3 Fitting location, relay and fuse carrier 2 -SR2-	381
1.4 Fitting location, relay and fuse carrier 3 -SR3-	382
1.5 Fitting location, relay and fuse carrier 4 -SR4-	383-384
804 - -Fitting locations: Control units in front part of vehicle - 1	385-402
1. Control units in front part of vehicle	385-402
1.1 Overview of control units in front part of vehicle	385
1.2 Fitting location, ABS control unit -J104-	386-387
1.3 Fitting location radiator fan -VX57- / radiator fan 2 -VX103-	388
1.4 Fitting location, battery monitor control unit -J367-	389-390
1.5 Fitting location, control unit for wiper motor -J400-	391
1.6 Fitting location, all-wheel drive control unit -J492-	392-393
1.7 Fitting location, power steering control unit -J500-	394-395
1.8 Fitting location, garage door operation control unit -J530-	396-397
1.9 Fitting location, front passenger side wiper motor control unit -J584-	398-399
1.10 Fitting location, control units on front headlight -MX1-/-MX2-	400-402
805 - - Fitting locations: Control units in middle part of vehicle - 1	403-485
1. Control units in middle part of vehicle	403-485
1.1 Overview of control units in middle part of vehicle	403-406
1.2 Fitting location Operating and display unit for Climatronic air conditioning system -E87-	407-408
1.3 Fitting location, fresh air blower control unit -J126-	409
1.4 Fitting location, seat and steering column adjustment control unit with memory -J136-/front passenger seat adjustment control unit with memory -J521-	410-413
1.5 Fitting location, adjustable rear spoiler control unit -J223-	414-415
1.6 Fitting location, airbag control unit -J234-	416
1.7 Fitting location, electronically controlled damping control unit -J250-	417-418
1.8 Fitting location, convertible roof actuation control unit -J256-	419-421
1.9 Fitting location, control unit in dash panel insert -J285-	422-423
1.10 Fitting location, door control unit -J386-/-J387-	424-429
1.11 Fitting location, convenience system central control unit -J393-	430-433
1.12 Fitting location, headlight range control unit -J431-	434-435
1.13 Fitting location, multifunction steering wheel control unit -J453-	436
1.14 Fitting location, onboard supply control unit -J519-	437-440
1.15 Fitting location, digital sound package control unit -J525-	441-444
1.15.1 Fitting location Digital sound package control unit -J525-, Coup	441-442
1.15.2 Fitting location Digital sound package control unit -J525-, Spyder	443-444
1.16 Fitting location, steering column electronics control unit -J527-	445-446
1.17 Fitting location, roof electronics control unit -J528-	447-448
1.18 Fitting location, data bus diagnostic interface -J533-	449-452
1.18.1 Fitting location Data bus diagnostic interface -J533-, left-hand drive models	449-450
1.18.2 Fitting location Data bus diagnostic interface -J533-, right-hand drive models	451-452
1.19 Fitting location, selector lever sensors control unit -J587-	453-454
1.20 Fitting location, chip card reader control unit -J676-	455-456
1.21 Fitting location, seat occupied recognition control unit -J706-	457
1.22 Fitting location, control unit for electronic steering column lock -J764-	458-459
1.23 Fitting location Reversing camera system control unit -J772-	460-461
1.24 Fitting location, active steering control unit -J792-	462-463
1.25 Fitting location, control unit 1 for information electronics -J794-	464-466
1.26 Fitting location, interface control unit for vehicle location system -J843-	467-468
1.27 Fitting location Main beam assist control unit -J844-	469-470
1.28 Fitting location, control unit for sensor electronics -J849-	471-472
1.29 Fitting location, control unit for seat belt microphone -J886-	473-474
1.30 Fitting location, engine sound generator control unit -J943-	475-476
1.31 Fitting location emergency call module control unit and communication unit -J949-	477-478
1.32 Fitting location TV tuner -R78-	479-482
1.32.1 Fitting location TV tuner -R78-, Coup	479-480
1.32.2 Fitting location TV tuner -R78-, Spyder	481-482
1.33 Fitting location. aerial amplifier for mobile telephone -R86-	483-485

806 - - Fitting locations: Control units in rear part of vehicle - 3	486-500
1. Control units in rear part of vehicle	486-500
1.1 Overview of control units in rear part of vehicle	486
1.2 Fitting location, Tyre Pressure Monitoring System control unit -J502-	487
1.3 Fitting location, fuel pump control unit -J538-	488-489
1.4 Fitting location, control unit for electromechanical parking brake -J540-	490
1.5 Fitting location, engine control unit -J623-/-J624-	491
1.6 Fitting location, mechatronic unit for dual clutch gearbox -J743-	492-493
1.7 Fitting location Reversing camera system control unit -J772-	494-495
1.8 Fitting location, Control unit for fuel tank leak detection -J909-	496
1.9 Fitting location, automatic gearbox control unit 2 -J1006-	497-500
807 - -Fitting locations: Coupling points - 1	501-518
1. Coupling points	501-518
1.1 Coupling point on front left bumper -TSFVL-	501
1.2 Coupling point in centre of luggage compartment -TKM-	501
1.3 Coupling point on front door -TTVL-/-TTVR-	502
1.4 Coupling point on left A-pillar, bottom -TALU-	503
1.5 Coupling point right A-pillar, bottom -TARU-	504
1.6 Coupling point on dash panel -TCP-	505
1.7 Coupling point for front left seat -TSVL-	506
1.8 Coupling point for front right seat -TSVR-	507
1.9 Coupling point in centre of interior -TIM-	508-509
1.10 Coupling point in interior -TI-	510-511
1.11 Coupling point on rear lid, left -THKL-	512
1.12 Coupling point in luggage compartment, centre -THRM-	513
1.13 Coupling point on top of engine -TMO-/coupling point in engine compartment, left -TML-	514-515
1.14 Coupling point in electronics box in engine compartment -TEBM-	516
1.15 Coupling point on rear left bumper -TSFHL-	517-518