

Contents

00 - Technical data	1
1 Identification	1
1.1 PR number and type of brake system	1
2 Repair notes	2
2.1 General notes	2
2.2 General repair instructions	2
3 Technical data	3
3.1 Technical data for brakes	3
4 Brake test	6
4.1 General notes	6
4.2 Testing vehicles with front-wheel drive	6
4.3 Testing vehicles with four-wheel drive	6
45 - Anti-lock brake system	8
1 General notes	8
1.1 Notes for repair work on the ABS	8
1.2 Vehicle diagnostic, testing and information system	9
2 Overview of fitting locations	11
2.1 Overview of fitting locations - ABS/ESP	11
3 Control unit and hydraulic unit	15
3.1 Exploded view - control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104 / ABS hydraulic unit N55	16
3.3 Basic setting of inlet valves and separating valves (Mark 60EC)	34
4 Sensors	35
4.1 Exploded view - front wheel speed sensor	35
4.2 Exploded view - rear wheel speed sensor	36
4.3 Removing and installing brake light switch	38
4.4 Removing and installing ESP sensor unit G419	41
4.5 Removing and installing brake servo vacuum sender	42
4.6 Removing and installing front wheel speed sensor G45 / G47	43
4.7 Removing and installing rear wheel speed sensor G44 / G46	43
46 - Brakes - mechanism	45
1 Front brakes	45
1.1 Exploded view - front brakes	45
1.2 Removing and installing brake pads	54
1.3 Removing and installing brake caliper	67
1.4 Renewing brake caliper	75
1.5 Removing and installing brake disc	77
1.6 Pressing back piston in front brake caliper	78
1.7 Removing and installing vibration dampers	80
2 Rear brakes	82
2.1 Exploded view - rear brakes	82
2.2 Removing and installing brake pads	84
2.3 Removing and installing brake caliper	86
2.4 Pressing back piston in rear brake caliper	89
3 Parking brake	90
3.1 Exploded view - parking brake	90
3.2 Removing and installing parking brake lever	91
3.3 Adjusting parking brake	91
3.4 Removing and installing parking brake switch	92
3.5 Removing and installing handbrake cable (rear)	94



3.6	Removing and installing guide tubes for handbrake cable	96
3.7	Detaching and attaching handbrake cable at brake caliper	96
4	Brake pedal	97
4.1	Exploded view - brake pedal	97
4.2	Separating brake pedal from brake servo	97
4.3	Removing and installing brake pedal	98
47 - Brakes - hydraulics	100	
1	Front brake caliper	100
1.1	Exploded view - front brake caliper	100
1.2	Removing and installing brake caliper piston	102
2	Rear brake caliper	108
2.1	Exploded view - rear brake caliper	108
2.2	Removing and installing brake caliper piston	109
3	Brake servo / brake master cylinder	112
3.1	Exploded view - brake servo / brake master cylinder	112
3.2	Removing and installing brake servo	118
3.3	Removing and installing brake master cylinder	126
3.4	Removing and installing brake fluid reservoir	131
3.5	Removing and installing sound generator	133
4	Vacuum system	134
4.1	Checking non-return valve	134
4.2	Removing and installing non-return valve	134
4.3	Checking vacuum system	134
4.4	Removing and installing vacuum pump	136
5	Brake lines	142
5.1	Routing of brake lines	142
6	Hydraulic system	145
6.1	General notes on brake fluid	145
6.2	Bleeding brake system	145