

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General notes</b>	<b>1</b>
1.1 General notes on drive shaft	1
<b>2 Repair instructions</b>	<b>3</b>
2.1 Leaks at shock absorbers	3
2.2 Checking shock absorbers when removed	3
2.3 Checking shock absorbers on shock tester	4
2.4 General notes	7
2.5 Contact corrosion	8
2.6 Repairing damaged threads in longitudinal member (subframe to body)	8
2.7 Lifting suspension to unladen position - vehicles with coil springs	9
2.8 Steering rack	12
2.9 Gaskets and seals	13
2.10 Nuts, bolts	13
2.11 Electrical components	13
2.12 Guided Fault Finding, Vehicle Self-Diagnosis and Test Instruments	14
<b>3 Technical data</b>	<b>15</b>
3.1 Running gear	15
3.2 Steering	15
3.3 Wheels, tyres	15
<b>4 Disposal</b>	<b>16</b>
4.1 Releasing gas and draining front gas-filled shock absorbers	16
4.2 Releasing gas and draining rear gas-filled shock absorbers	18
<b>40 - Front suspension</b>	<b>20</b>
<b>1 Front axle</b>	<b>20</b>
1.1 Overview - front axle	20
<b>2 Subframe</b>	<b>21</b>
2.1 Exploded view - subframe	21
2.2 Removing and installing subframe	23
2.3 Servicing subframe	27
2.4 Fixing position of subframe	36
2.5 Removing and installing anti-roll bar	38
<b>3 Suspension strut, upper links</b>	<b>40</b>
3.1 Exploded view - suspension strut, upper links	40
3.2 Removing and installing suspension strut	41
3.3 Servicing suspension strut	44
<b>4 Lower wishbone, swivel joint</b>	<b>47</b>
4.1 Removing and installing lower wishbone	47
4.2 Renewing bonded rubber bush for lower wishbone	50
4.3 Renewing mounting bracket with wishbone bush	53
4.4 Checking swivel joint	55
4.5 Removing and installing swivel joint	55
<b>5 Wheel bearing</b>	<b>58</b>
5.1 Exploded view - wheel bearing	58
5.2 Removing and installing wheel bearing housing	60
5.3 Removing and installing wheel bearing unit	63
<b>6 Drive shaft</b>	<b>65</b>
6.1 Exploded view - drive shaft	65
6.2 Removing and installing drive shaft	76
6.3 Loosening and tightening bolt securing drive shaft	92
6.4 Dismantling and assembling drive shaft	97



6.5	Checking outer constant velocity joint	125
6.6	Checking inner constant velocity joint	126
<b>42</b>	<b>Rear suspension</b>	<b>129</b>
<b>1</b>	<b>Rear axle</b>	<b>129</b>
1.1	Overview - rear axle	129
1.2	Removing and installing rear axle	131
<b>2</b>	<b>Subframe</b>	<b>141</b>
2.1	Exploded view - subframe	141
2.2	Servicing subframe	150
2.3	Removing and installing diagonal struts	167
2.4	Removing and installing cross member - Roadster	168
<b>3</b>	<b>Anti-roll bar</b>	<b>169</b>
3.1	Exploded view - anti-roll bar	169
3.2	Removing and installing anti-roll bar	170
<b>4</b>	<b>Suspension links, track rod</b>	<b>173</b>
4.1	Removing and installing upper transverse link	173
4.2	Removing and installing lower transverse links	176
4.3	Removing and installing track rod	180
<b>5</b>	<b>Suspension strut/shock absorber, spring</b>	<b>184</b>
5.1	Exploded view - suspension strut/shock absorber, spring	184
5.2	Removing and installing shock absorber	186
5.3	Servicing shock absorber	189
5.4	Removing and installing spring	195
<b>6</b>	<b>Wheel bearing, trailing arm</b>	<b>198</b>
6.1	Exploded view - wheel bearing	198
6.2	Removing and installing wheel bearing housing	202
6.3	Removing and installing wheel bearing unit	209
6.4	Renewing bonded rubber bush for wheel bearing housing	214
6.5	Removing and installing trailing arm with mounting bracket	220
6.6	Servicing trailing arm	227
6.7	Removing and installing stone deflector	232
<b>7</b>	<b>Drive shaft</b>	<b>233</b>
7.1	Exploded view - drive shaft	233
7.2	Removing and installing drive shaft	237
7.3	Dismantling and assembling drive shaft	239
7.4	Loosening and tightening bolt securing drive shaft	250
7.5	Checking outer constant velocity joint	253
7.6	Checking inner constant velocity joint	254
<b>43</b>	<b>Self-levelling suspension</b>	<b>257</b>
<b>1</b>	<b>Electronic damping control</b>	<b>257</b>
1.1	Overview of fitting locations - electronic damping control	257
1.2	Removing and installing electronically controlled damping control unit J250	258
1.3	Re-adapting reference position (default position)	258
<b>2</b>	<b>Vehicle level senders</b>	<b>260</b>
2.1	Removing and installing front vehicle level senders G78 / G289	260
2.2	Removing and installing rear vehicle level senders G76 / G77	261
<b>44</b>	<b>Wheels, tyres, vehicle geometry</b>	<b>265</b>
<b>1</b>	<b>Wheels, tyres</b>	<b>265</b>
1.1	Tightening torque for wheel bolts	265
<b>2</b>	<b>Tyre Pressure Loss Indicator / Tyre Pressure Monitoring System</b>	<b>266</b>
2.1	System description - Tyre Pressure Loss Indicator / Tyre Pressure Monitoring System	266

2.2	Overview of fitting locations - Tyre Pressure Monitoring System	269
2.3	Exploded view - tyre pressure sensor	271
2.4	Removing and installing Tyre Pressure Monitoring System control unit J502	271
2.5	Removing and installing Tyre Pressure Monitoring System control unit 2 J793	272
2.6	Removing and installing tyre pressure sensor G222 / G223 / G224 / G225	272
2.7	Changing tyres on vehicles with Tyre Pressure Monitoring System	274
<b>3</b>	<b>Wheel alignment</b>	<b>275</b>
3.1	Notes on wheel alignment	275
3.2	Test requirements	276
3.3	Preparations for measurement	276
3.4	Wheel alignment specifications	278
3.5	When does wheel alignment have to be checked?	279
3.6	Explanatory notes on production control numbers (PR nos.)	280
3.7	Adjusting camber at front wheels	281
3.8	Adjusting camber at rear wheels	282
3.9	Adjusting toe setting at rear wheels	283
3.10	Adjusting toe setting at front wheels	283
<b>48 - Steering</b>		<b>284</b>
<b>1</b>	<b>Steering wheel</b>	<b>284</b>
1.1	Exploded view - steering wheel	284
1.2	Removing and installing steering wheel	285
<b>2</b>	<b>Steering column</b>	<b>286</b>
2.1	Exploded view - steering column	286
2.2	Checking steering column for damage	288
2.3	Handling and transporting steering column	289
2.4	Removing and installing steering column	290
2.5	Removing and installing mounting bracket with strut	293
<b>3</b>	<b>Steering rack</b>	<b>295</b>
3.1	Exploded view - steering rack	295
3.2	Differences between steering racks (generations 2 and 3)	298
3.3	Removing and installing steering rack	299
3.4	Servicing steering rack	305
3.5	Removing and installing boot	308
3.6	Removing and installing track rod	310
3.7	Removing and installing bonded rubber bush for generation 2 steering rack	314
3.8	Renewing sensor wiring	315
3.9	Renewing and adjusting hydraulic thrust piece	320
3.10	Renewing and adjusting thrust piece at steering pinion end	325
3.11	Removing and installing steering pinion with steering moment sender G269	332
<b>4</b>	<b>Sensors</b>	<b>336</b>
4.1	Removing and installing steering angle sender G85	336