

Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Safety precautions | 1 |
| 1.1 Safety precautions when working on vehicles with start/stop system | 1 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1 |
| 1.3 Safety precautions when handling gas discharge bulbs | 2 |
| 2 Repair notes | 4 |
| 2.1 Contact corrosion | 4 |
| 2.2 Routing and securing wiring | 4 |
| 3 Battery | 5 |
| 3.1 Battery types | 5 |
| 3.2 Battery - general notes | 5 |
| 27 - Starter, current supply, CCS | 6 |
| 1 Battery | 6 |
| 1.1 Exploded view - battery | 6 |
| 1.2 Removing and installing battery | 7 |
| 1.3 Disconnecting and connecting battery | 9 |
| 1.4 Checking battery | 10 |
| 1.5 Charging battery | 10 |
| 1.6 Removing and installing earth cable with battery monitor control unit J367 | 13 |
| 1.7 Removing and installing battery cut-off relay/battery isolation igniter | 13 |
| 2 Alternator | 15 |
| 2.1 Exploded view - alternator | 15 |
| 2.2 Removing and installing alternator | 16 |
| 2.3 Checking alternator | 31 |
| 3 Starter | 32 |
| 3.1 Exploded view - starter | 32 |
| 3.2 Removing and installing starter | 34 |
| 4 Cruise control system (CCS) | 43 |
| 90 - Gauges, instruments | 44 |
| 1 Dash panel insert | 44 |
| 1.1 Exploded view - dash panel insert | 44 |
| 1.2 Removing and installing dash panel insert with control unit in dash panel insert J285 | 45 |
| 1.3 Pin assignment on multi-pin connectors in dash panel insert | 47 |
| 1.4 Pin assignment on fuel gauge senders | 49 |
| 1.5 Pin assignment on coolant temperature sender | 51 |
| 1.6 Removing and installing ambient temperature sensor | 55 |
| 2 Clock | 56 |
| 2.1 Removing and installing radio-controlled clock receiver | 56 |
| 3 Horn | 57 |
| 3.1 Exploded view - horn | 57 |
| 3.2 Removing and installing treble horn H2 / bass horn H7 | 58 |
| 92 - Windscreen wash/wipe system | 59 |
| 1 Windscreen wiper system | 59 |
| 1.1 Exploded view - windscreen wiper system | 59 |
| 1.2 Moving windscreen wipers to service position | 60 |
| 1.3 Removing and installing wiper blade | 61 |
| 1.4 Removing and installing wiper arms | 62 |
| 1.5 Adjusting wiper arms | 63 |
| 1.6 Removing and installing windscreen wiper motor V | 64 |

| | | |
|-----------|---|------------|
| 1.7 | Renewing windscreen wiper motor | 65 |
| 1.8 | Removing and installing rain and light sensor | 66 |
| 2 | Windscreen washer system | 70 |
| 2.1 | Exploded view - windscreen washer system | 70 |
| 2.2 | Removing and installing washer fluid reservoir | 71 |
| 2.3 | Removing and installing washer jets | 72 |
| 2.4 | Adjusting washer jets | 72 |
| 3 | Headlight washer system | 74 |
| 3.1 | Exploded view - headlight washer system | 74 |
| 3.2 | Removing and installing washer fluid reservoir | 74 |
| 3.3 | Removing and installing washer jets | 75 |
| 3.4 | Adjusting washer jets | 76 |
| 4 | Washer fluid hoses | 77 |
| 4.1 | Repairing washer fluid hoses | 77 |
| 94 | Lights, bulbs, switches - exterior | 78 |
| 1 | Headlights | 78 |
| 1.1 | Exploded view - headlights | 78 |
| 1.2 | Removing and installing headlights | 84 |
| 1.3 | Adjusting headlights | 87 |
| 1.4 | Removing and installing front turn signal bulb M5 / M7 | 98 |
| 1.5 | Installing repair kit for headlight housing | 99 |
| 1.6 | Adapting headlights for driving on the left side of the road | 100 |
| 1.7 | Adapting headlights for driving on the right side of the road | 100 |
| 1.8 | Removing and installing headlight range control motor V48 / V49 | 101 |
| 1.9 | Removing and installing headlight dipped beam bulb | 103 |
| 1.10 | Removing and installing headlight main beam bulb M30 / M32 | 104 |
| 1.11 | Removing and installing gas discharge bulb L13 / L14 | 105 |
| 1.12 | Removing and installing side light bulb M1 / M3 | 106 |
| 1.13 | Removing and installing daytime running light bulb L174 / L175 | 107 |
| 1.14 | Removing and installing headlight screen adjustment solenoid | 108 |
| 1.15 | Removing and installing swivel module position sensor G474 / G475 | 108 |
| 1.16 | Removing and installing dynamic cornering light control motor V318 / V319 | 108 |
| 1.17 | Removing and installing gas discharge bulb control unit J343 / J344 | 108 |
| 2 | Fog lights | 110 |
| 2.1 | Exploded view - fog light | 110 |
| 2.2 | Removing and installing fog lights | 111 |
| 2.3 | Removing and installing fog light bulb L22 / L23 | 111 |
| 2.4 | Adjusting fog lights | 112 |
| 3 | Lights in exterior mirror | 113 |
| 3.1 | Exploded view - lights in exterior mirror | 113 |
| 3.2 | Removing and installing exterior mirror turn signal bulb L131 / L132 | 114 |
| 4 | Tail light cluster | 115 |
| 4.1 | Exploded view - tail light cluster on body | 115 |
| 4.2 | Removing and installing bulb carrier | 117 |
| 4.3 | Removing and installing tail light cluster | 118 |
| 4.4 | Removing and installing rear fog light | 118 |
| 5 | High-level brake light | 119 |
| 5.1 | Exploded view - high-level brake light | 119 |
| 5.2 | Removing and installing high-level brake light bulb | 119 |
| 6 | Number plate light | 122 |
| 6.1 | Removing and installing number plate light X4 / X5 | 122 |
| 7 | Steering column switch module | 123 |
| 7.1 | Exploded view - steering column switch module | 123 |

| | | |
|-----------|---|------------|
| 7.2 | Removing and installing steering column electronics control unit J527 | 124 |
| 7.3 | Removing and installing turn signal switch E2 | 126 |
| 7.4 | Removing and installing intermittent wiper switch E22 | 127 |
| 7.5 | Pin assignment on steering column electronics control unit | 127 |
| 7.6 | Removing and installing ignition/starter switch | 130 |
| 7.7 | Removing and installing lock cylinder | 132 |
| 7.8 | Removing and installing steering lock housing | 133 |
| 7.9 | Removing and installing ignition key withdrawal lock solenoid N376 | 135 |
| 8 | Parking aid | 136 |
| 8.1 | Overview - parking aid | 136 |
| 8.2 | Removing and installing parking aid control unit J446 | 137 |
| 8.3 | Removing and installing rear parking aid warning buzzer H15 | 137 |
| 8.4 | Removing and installing rear parking aid senders | 138 |
| 9 | Automatic headlight range control | 139 |
| 9.1 | Overview - automatic headlight range control | 139 |
| 9.2 | Removing and installing headlight range control unit | 139 |
| 96 | Lights, bulbs, switches - interior | 141 |
| 1 | Lights | 141 |
| 1.1 | Overview of fitting locations - lights in dash panel | 141 |
| 1.2 | Overview of fitting locations - lights in front doors | 143 |
| 1.3 | Overview of fitting locations - lights in centre console | 144 |
| 1.4 | Overview of fitting locations - lights in roof trim | 145 |
| 1.5 | Removing and installing central locking SAFELOCK function warning lamp K133 | 146 |
| 1.6 | Removing and installing glove compartment light W6 | 146 |
| 1.7 | Removing and installing footwell illumination bulb (front) L151 / L152 | 147 |
| 1.8 | Removing and installing door interior handle illumination bulb L146 / L147 | 147 |
| 1.9 | Removing and installing front entry light W31 / W32 | 148 |
| 1.10 | Removing and installing door warning lamp W30 / W36 | 149 |
| 1.11 | Removing and installing selector lever position display Y26 | 149 |
| 1.12 | Removing and installing right luggage compartment light W35 | 151 |
| 1.13 | Removing and installing vanity mirror light bulb L31 | 151 |
| 1.14 | Renewing bulb for front interior light W1 / W13 / W19 | 152 |
| 2 | Controls | 155 |
| 2.1 | Overview of fitting locations - controls in dash panel | 156 |
| 2.2 | Overview of fitting locations - controls in front doors | 157 |
| 2.3 | Overview of fitting locations - controls in centre console | 158 |
| 2.4 | Overview of fitting locations - controls in roof trim | 159 |
| 2.5 | Removing and installing light switch E1 | 159 |
| 2.6 | Removing and installing switch and instrument illumination regulator E20 | 160 |
| 2.7 | Removing and installing headlight range control regulator E102 | 160 |
| 2.8 | Removing and installing front passenger side airbag deactivated warning lamp K145 | 161 |
| 2.9 | Removing and installing switches in dash panel | 161 |
| 2.10 | Removing and installing glove compartment light switch E26 | 162 |
| 2.11 | Removing and installing adjustable rear spoiler switch E127 | 163 |
| 2.12 | Removing and installing hazard warning lights button E229 | 163 |
| 2.13 | Removing and installing TCS and ESP button E256 | 163 |
| 2.14 | Removing and installing parking aid button E266 | 163 |
| 2.15 | Removing and installing shock absorber damping adjustment button E387 | 163 |
| 2.16 | Removing and installing operating unit in front of centre console E461 | 163 |
| 2.17 | Removing and installing sport program button E541 | 163 |
| 2.18 | Removing and installing switches/buttons in centre console | 163 |
| 2.19 | Removing and installing mirror adjustment switch E43 / E168 | 165 |
| 2.20 | Removing and installing operating unit for window regulator in driver door E512 | 166 |
| 2.21 | Removing and installing window regulator switch in front passenger door E107 | 166 |



| | | |
|--------------------|---|------------|
| 2.22 | Removing and installing alarm system off switch E217 | 166 |
| 2.23 | Removing and installing door contact switch F2 / F3 | 167 |
| 2.24 | Removing and installing driver side interior locking button for central locking system E308 | 167 |
| 2.25 | Removing and installing rear lid remote release button E233 | 168 |
| 2.26 | Removing and installing rear lid contact switch | 169 |
| 2.27 | Removing and installing contact switch for vanity mirror F147 / F148 | 169 |
| 2.28 | Removing and installing interior light/reading light (front) | 169 |
| 2.29 | Removing and installing garage door operating unit E284 | 170 |
| 3 | Anti-theft alarm system | 171 |
| 3.1 | Overview - interior monitoring | 171 |
| 3.2 | Removing and installing alarm horn H12 | 172 |
| 3.3 | Removing and installing anti-theft alarm sensor G578 | 172 |
| 4 | Immobiliser | 174 |
| 4.1 | Removing and installing immobiliser control unit | 174 |
| 5 | Cigarette lighter, socket | 175 |
| 5.1 | Exploded view - cigarette lighter, 12 V socket | 175 |
| 5.2 | Removing and installing cigarette lighter U1 | 175 |
| 97 - Wiring | | 178 |
| 1 | Component protection | 178 |
| 2 | Relay carriers, fuse carriers, electronics boxes | 179 |
| 2.1 | Overview of fitting locations - relay carriers, fuse carriers, electronics boxes | 179 |
| 2.2 | Removing and installing electronics box | 182 |
| 2.3 | Removing and installing relay and fuse holder in electronics box | 184 |
| 2.4 | Removing and installing main fuse box in luggage compartment (rear right) at battery | 185 |
| 2.5 | Removing and installing fuse holder in dash panel (left-side) | 186 |
| 2.6 | Removing and installing relay and fuse carrier behind dash panel (driver's side) | 188 |
| 2.7 | Removing and installing relay and fuse holder in luggage compartment (right-side) | 189 |
| 3 | Control units | 191 |
| 3.1 | Removing and installing onboard supply control unit J519 | 191 |
| 3.2 | Removing and installing convenience system central control unit J393 | 193 |
| 3.3 | Removing and installing data bus diagnostic interface J533 | 193 |
| 3.4 | Removing and installing garage door operation control unit | 194 |
| 4 | Connectors | 195 |
| 4.1 | Unplugging door disconnecter (left-side) | 195 |
| 4.2 | Unplugging door disconnecter (right-side) | 195 |
| 4.3 | Repairing electrical wiring harnesses and electrical connectors | 196 |
| 5 | Releasing and dismantling connector housings | 197 |
| 6 | Cleaning contact surfaces | 198 |
| 7 | Repairing aerial wires | 199 |
| 8 | Fibre optic cables | 200 |
| 9 | Vehicle diagnostic, testing and information systems | 201 |