

## Contents

<b>27 - Starter, current supply, CCS</b> .....	<b>1</b>
<b>1 Battery</b> .....	<b>1</b>
1.1 Basic information on the battery .....	1
1.2 Battery types .....	1
1.3 Warnings and safety precautions .....	3
1.4 Battery terminal screw connection .....	5
<b>2 Checking battery</b> .....	<b>6</b>
2.1 Test sequence .....	6
2.2 Visual inspection .....	8
2.3 Checking colour indicator of magic eye .....	9
2.4 Checking battery using vehicle diagnostic tester .....	10
2.5 Battery tester with printer VAS 6161 .....	11
2.6 Battery tester with printer VAS 5097 A .....	17
2.7 Current draw test .....	23
2.8 Checking open-circuit voltage of battery, stock vehicles .....	24
<b>3 Charging battery</b> .....	<b>26</b>
3.1 Charging battery .....	26
3.2 Service charging .....	27
3.3 Totally discharged batteries .....	27
<b>4 Alternator</b> .....	<b>29</b>
4.1 Checking alternator .....	29
4.2 Bosch alternator up to 2000 - assembly overview .....	30
4.3 Bosch alternator from 2001 onwards - assembly overview .....	30
4.4 Removing and installing voltage regulator - Bosch alternator from 2001 onwards .....	31
4.5 Bosch alternator from 2007 onwards - assembly overview .....	32
4.6 Removing and installing voltage regulator - Bosch alternator from 2007 onwards .....	33
4.7 Checking carbon brushes - all types of Bosch alternators from 2001 onwards .....	34
4.8 Valeo alternator up to 2000 - assembly overview .....	34
4.9 Valeo alternator from 2001 onwards - assembly overview .....	35
4.10 Removing and installing voltage regulator - Valeo alternator from 2001 onwards .....	36
4.11 Checking carbon brushes - Valeo alternator from 2001 onwards .....	38
4.12 Removing and installing voltage regulator - Valeo alternator from 2007 onwards .....	38
4.13 Checking carbon brushes - Valeo alternator from 2007 onwards .....	39
4.14 Hitachi alternator - assembly overview .....	41
4.15 Removing and installing voltage regulator - Hitachi alternator .....	42
4.16 Checking carbon brushes - Hitachi alternator .....	44
4.17 Removing and installing poly V-belt pulley without freewheel .....	44
4.18 Removing and installing poly V-belt pulley with freewheel .....	45
4.19 Checking poly V-belt pulley with freewheel .....	52
<b>92 - Windscreen wash/wipe system</b> .....	<b>53</b>
<b>1 Washer fluid hoses</b> .....	<b>53</b>
1.1 Disconnecting and connecting washer fluid hose connectors .....	53
1.2 Servicing a smooth washer fluid pipe .....	55
1.3 Servicing a washer fluid hose with corrugated tube .....	56
<b>94 - Lights, bulbs, switches - exterior</b> .....	<b>59</b>
<b>1 Safety information for handling gas discharge bulbs</b> .....	<b>59</b>
<b>96 - Lights, bulbs, switches - interior</b> .....	<b>61</b>
<b>1 Immobiliser</b> .....	<b>61</b>
1.1 General notes .....	61
1.2 Defective transponder or loss of key .....	61



1.3	Renewing reader coil .....	61
1.4	Procedure for renewing lock set .....	62
<b>2</b>	<b>Towing bracket .....</b>	<b>63</b>
2.1	Removing and installing socket for towing bracket - version 1 .....	63
2.2	Removing and installing socket for towing bracket - version 2 .....	65
2.3	Removing and installing socket for towing bracket - version 3 .....	67
2.4	Removing and installing socket for towing bracket - version 4 .....	69
<b>97 - Wiring</b>	<b>.....</b>	<b>72</b>
<b>1</b>	<b>Vehicle diagnostic, testing and information systems .....</b>	<b>72</b>
1.1	Connecting vehicle diagnostic tester .....	72
<b>2</b>	<b>Repairing wiring harnesses and connectors .....</b>	<b>74</b>
2.1	General information on repairs to the vehicle electrical system .....	74
2.2	Wiring harness repair set .....	77
2.3	Description of tools .....	80
2.4	Repairing wiring harnesses .....	86
2.5	Repairing fibre optic cables .....	100
2.6	Repairing aerial wires .....	114
2.7	Repairing connector housings and electrical connectors .....	127
2.8	Releasing and dismantling connector housings .....	129
<b>3</b>	<b>Contact surface cleaning set VAS 6410 .....</b>	<b>131</b>
3.1	Using contact surface cleaning set VAS 6410 .....	131
<b>4</b>	<b>ESD (electrostatic discharge) workplace VAS 6613 .....</b>	<b>139</b>
4.1	Using ESD workplace VAS 6613 .....	139