

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on pyrotechnic components	2
1.2 Safety precautions when working on vehicles with start/stop system	4
1.3 Safety precautions when working on interior mirror	5
1.4 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components)	5
1.5 Additional safety regulations for side airbags	5
1.6 Additional safety regulations for curtain airbags	6
1.7 Safety regulations for crash sensors (pressure sensors) for side airbag (front)	7
1.8 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	7
1.9 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	8
1.10 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	8
1.11 Checking airbag mounting components following an accident	10
1.12 Accident in which no airbag was triggered	10
1.13 Checking seat belts	11
1.14 Checking belt	11
1.15 Checking automatic belt retractor (locking action)	12
1.16 Visual inspection of belt buckle	13
1.17 Functional check of belt buckle	13
1.18 Checking guide fittings and latch plate	13
1.19 Checking securing components and anchorage points following an accident	13
1.20 Checking child seat restraint function of seat belt for additional child seats (not for driver's seat belt; country-specific version)	14
1.21 Checking child seat anchors following an accident	14
2 General information	15
2.1 Interior mirror	15
3 Notes on repairs	16
3.1 Contact corrosion	16
3.2 Routing and attaching pipes and wiring	16
68 - Interior equipment	17
1 Shelves / trim panels	17
1.1 Overview of fitting locations - shelves/covers/trim panels	17
1.2 Exploded view - dash panel cover (driver side)	19
1.3 Exploded view - steering column trim	20
1.4 Exploded view - glove box	21
1.5 Exploded view - trim for handbrake lever	22
1.6 Removing and installing dash panel cover (driver side)	23
1.7 Removing and installing trim cover for dash panel insert	23
1.8 Removing and installing steering column trim (top)	24
1.9 Removing and installing steering column trim (bottom)	24
1.10 Manually releasing glove box lid	24
1.11 Removing and installing trim panel for glove box lid	25
1.12 Removing and installing glove box opening mechanism	26
1.13 Removing and installing glove box	27
1.14 Removing and installing cushioning element for glove box lid	30
1.15 Removing and installing handbrake lever trim	30
1.16 Removing and installing storage net	31
2 Equipment	33
2.1 Exploded view - sun visors	33

2.2	Exploded view - centre bracket for sun visor	35
2.3	Exploded view - windbreak	36
2.4	Removing and installing sun visor	37
2.5	Removing and installing centre bracket for sun visor	37
2.6	Removing and installing windbreak (or mount for windbreak)	38
3	Centre console	39
3.1	Exploded view - centre console	39
3.2	Removing and installing centre console footwell trim (front)	42
3.3	Removing and installing bracket for centre console footwell trim (front)	42
3.4	Removing and installing insert for centre console	43
3.5	Removing and installing trim panel for centre console	45
3.6	Removing and installing switch panel insert for centre console	46
3.7	Installation position of convertible roof actuation button E137 and cabriolet windbreak switch E278	46
3.8	Removing and installing grip moulding for handbrake lever	46
3.9	Removing and installing ashtray (front)	47
3.10	Removing and installing ashtray lid	47
3.11	Removing and installing ashtray trim (front)	47
3.12	Removing and installing centre console	48
3.13	Removing and installing bracket for centre console	50
4	Centre armrest (front)	51
4.1	Exploded view - centre armrest (front)	51
4.2	Removing and installing centre armrest (top section)	52
4.3	Removing and installing holder for padding	52
5	Interior mirror	53
5.1	Removing and installing interior mirror	53
5.2	Switching automatic anti-dazzle function on and off	54
5.3	Switching compass display on and off	54
5.4	Setting magnetic deflection zone	55
5.5	Calibrating digital compass	55
5.6	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	56
5.7	Selecting the applicable deflection zone from the map	56
5.8	Checking operation of automatic anti-dazzle interior mirror	62
69	Passenger protection	64
1	Seat belts	64
1.1	Overview of fitting locations - seat belts and anchorage points	64
1.2	Exploded view - three-point seat belt (front)	67
1.3	Exploded view - outer three-point seat belt (rear)	68
1.4	Exploded view - belt buckle (front)	70
1.5	Exploded view - belt buckle (rear)	72
1.6	Removing and installing three-point seat belt (front)	72
1.7	Removing and installing three-point seat belt (rear)	74
1.8	Removing and installing belt guide (rear)	80
1.9	Removing and installing belt end fitting (front)	81
1.10	Removing and installing outer belt end fitting (rear)	82
1.11	Removing and installing belt buckle (front)	82
1.12	Removing and installing belt buckle (rear)	87
2	Child seat anchors	89
2.1	Exploded view - child seat anchors (front)	89
2.2	Exploded view - child seat anchors (rear)	90
2.3	Removing and installing child seat anchor (rear)	92
3	Airbag system	96
3.1	Overview of fitting locations - airbag system	96

4	Airbag control unit	98
4.1	Exploded view - airbag control unit	98
4.2	Removing and installing airbag control unit J234	98
5	Battery isolation igniter	101
5.1	Exploded view - battery isolation igniter	101
5.2	Removing and installing battery isolation igniter	101
6	Airbag (driver side)	104
6.1	Exploded view - airbag (driver side)	104
6.2	Removing and installing airbag unit with igniters	105
6.3	Renewing connector at airbag	107
7	Airbag (front passenger side)	109
7.1	Exploded view - airbag (front passenger side)	109
7.2	Removing and installing airbag unit (front passenger side) with igniters	110
7.3	Removing and installing brackets for airbag unit (front passenger side)	112
7.4	Removing and installing key operated switch to deactivate front passenger side airbag ..	112
8	Side airbags	114
8.1	Exploded view - side airbag (front)	114
8.2	Removing and installing side airbag (front) with airbag igniter	115
9	Knee airbags	117
9.1	Exploded view - knee airbag	117
9.2	Removing and installing knee airbag with airbag igniter	119
9.3	Removing and installing knee bolster (dash panel cover, driver side)	123
9.4	Removing and installing supports (left and right) for knee airbag	124
9.5	Removing and installing retaining bracket (above knee airbag, driver side)	128
10	Crash sensors for airbags	129
10.1	Overview of fitting locations - crash sensors for airbags	129
10.2	Removing and installing front airbag crash sensor for driver side G283	131
10.3	Removing and installing crash sensor for side airbag (front) G179 / G180	133
11	Seat position sensor	136
11.1	Exploded view - seat position sensor	136
11.2	Removing and installing seat position sensor	137
12	Belt-fastened recognition	139
12.1	Removing and installing seat occupied sensor (front passenger side) G128	139
13	Seat occupied recognition system	141
13.1	Exploded view - seat occupied recognition system	141
13.2	Removing and installing seat occupied sensor	142
70 - Trim, insulation		146
1	Door trim (front)	146
1.1	Exploded view - door trim (front)	146
1.2	Removing and installing mid-range loudspeaker trim	148
1.3	Removing and installing bass loudspeaker trim	149
1.4	Removing and installing trim panel	150
1.5	Removing and installing door trim (front)	150
1.6	Removing and installing trim for mirror cover	153
1.7	Removing and installing interior door handle	153
1.8	Removing and installing armrest (front)	154
1.9	Removing and installing door puller (front)	155
1.10	Removing and installing trim for buttons	155
2	Dash panel	157
2.1	Overview of fitting locations - dash panel	157
2.2	Exploded view - dash panel	159
2.3	Removing and installing dash panel cover (side)	161
2.4	Removing and installing loudspeaker trim	161

2.5	Removing and installing trim cover for centre console	162
2.6	Removing and installing trim for dash panel insert	162
2.7	Removing and installing mounting frame for radio/navigation system	163
2.8	Removing and installing dash panel	163
2.9	Removing and installing dash panel vent	166
2.10	Removing and installing defroster vent (front centre)	167
2.11	Removing and installing defroster vent (side)	168
3	Central tube for dash panel	169
3.1	Exploded view - central tube for dash panel	169
3.2	Removing and installing central tube for dash panel	172
4	Passenger compartment trim panels	178
4.1	Overview of fitting locations - passenger compartment trim panels	178
4.2	Overview of fitting locations - back panel trim	181
4.3	Exploded view - sill panel trim	182
4.4	Exploded view - A-pillar trim	184
4.5	Exploded view - C-pillar trim	188
4.6	Exploded view - side trim	189
4.7	Exploded view - foot rest and floor covering	190
4.8	Exploded view - storage compartments (left and right)	195
4.9	Exploded view - centre storage compartment	196
4.10	Exploded view - centre storage compartment (bottom)	197
4.11	Exploded view - back panel cover	198
4.12	Exploded view - rollover bar trim	199
4.13	Removing and installing sill panel trim	200
4.14	Removing and installing A-pillar trim	201
4.15	Removing and installing C-pillar trim	208
4.16	Removing and installing bracket for C-pillar trim, rear side trim and luggage compartment side trim	210
4.17	Removing and installing side trim	210
4.18	Removing and installing belt exit point trim	212
4.19	Removing and installing foot rest	213
4.20	Removing and installing floor covering	215
4.21	Removing and installing centre storage compartment	217
4.22	Removing and installing centre storage compartment (bottom)	218
4.23	Removing and installing rollover bar trim	218
4.24	Removing and installing back panel cover	219
4.25	Removing and installing back panel side trim	220
4.26	Removing and installing convertible roof compartment trim (front)	221
5	Luggage compartment trim panels	223
5.1	Overview of fitting locations - luggage compartment trim panels	223
5.2	Exploded view - rear shelf	226
5.3	Exploded view - luggage compartment side trim	227
5.4	Exploded view - luggage compartment trim (front and top)	229
5.5	Exploded view - luggage compartment floor	230
5.6	Exploded view - lock carrier trim	233
5.7	Exploded view - rear lid trim	235
5.8	Removing and installing rear lid trim (bottom)	236
5.9	Removing and installing rear lid trim (top)	237
5.10	Removing and installing rear lid trim	237
5.11	Removing and installing rear shelf	238
5.12	Removing and installing lock carrier trim	239
5.13	Removing and installing luggage compartment side trim	240
5.14	Removing and installing fastening ring	242
5.15	Removing and installing luggage compartment floor	243
5.16	Removing and installing trim for rear lid lock	243

6	Roof trim panels	244
6.1	Exploded view - roof end trim	244
6.2	Exploded view - moulded headliner	245
6.3	Exploded view - locking element trim	246
6.4	Exploded view - trim for windscreen frame	247
6.5	Removing and installing roof end trim	247
6.6	Removing and installing moulded headliner	248
6.7	Removing and installing trim for windscreen frame	250
7	Convertible roof compartment	252
7.1	Exploded view - convertible roof compartment	252
72	Seat frames	255
1	Overview of seat versions	255
1.1	Overview of fitting locations - seat versions	255
1.2	Moving front seat to service position	256
1.3	Attaching front seat to seat repair stand	257
2	Front seats	260
2.1	Overview of fitting locations - electrical and electronic components	262
2.2	Exploded view - front seat	264
2.3	Exploded view - backrest release mechanism and Easy Entry system	268
2.4	Exploded view - front seat backrest	271
2.5	Exploded view - backrest cover panel	273
2.6	Exploded view - lumbar support	275
2.7	Exploded view - head restraint	276
2.8	Exploded view - seat pan	277
2.9	Exploded view - modular wire routing	279
2.10	Exploded view - trim (sill side and tunnel side)	280
2.11	Exploded view - lumbar support adjustment switch E176 / E177	282
2.12	Exploded view - retaining bracket for trim (sill side)	283
2.13	Exploded view - seat height adjustment unit and seat height adjuster (seat with manual adjustment)	284
2.14	Exploded view - spring mat	285
2.15	Exploded view - storage compartment	286
2.16	Exploded view - storage compartment components	287
2.17	Exploded view - seat and backrest adjustment actuators	288
2.18	Exploded view - seat rake adjustment motor V243 / V244	289
2.19	Exploded view - seat longitudinal adjustment motor V288	290
2.20	Exploded view - backrest adjustment motor V45 / V46	291
2.21	Exploded view - lumbar support longitudinal and height adjustment motors	292
2.22	Exploded view - seat height adjustment motor V245 / V246	293
2.23	Exploded view - limit switch E69 / E70	294
2.24	Exploded view - lumbar support adjustment switch E176 / E177	295
2.25	Exploded view - switches for seat longitudinal adjustment, seat rake adjustment, seat height adjustment and backrest adjustment E64 / E96 / E98 / E222 / E334 / E363 / E364 / E365	296
2.26	Removing and installing front seat	297
2.27	Connecting and disconnecting airbag adapter	307
2.28	Removing and installing seat height adjuster	309
2.29	Removing and installing seat height adjustment unit	311
2.30	Removing and installing lumbar support adjustment unit	314
2.31	Removing and installing backrest adjustment unit	318
2.32	Removing and installing front seat backrest	320
2.33	Removing and installing head restraint	331
2.34	Removing and installing head restraint guide	331
2.35	Dismantling and assembling seat pan	334
2.36	Removing and installing trim for backrest release mechanism	337



2.37	Removing and installing trim (tunnel side)	341
2.38	Removing and installing side trim panels	343
2.39	Removing and installing backrest release mechanism	345
2.40	Adjusting backrest release mechanism	352
2.41	Unplugging and plugging in connectors	354
2.42	Connector point connectors	357
2.43	Modular wire routing versions	357
2.44	Modular wire routing with corrugated tube on front seat	357
2.45	Removing and installing seat rail cover	360
2.46	Removing and installing seat longitudinal adjustment motor V288	363
2.47	Removing and installing seat rake adjustment motor V243 / V244	365
2.48	Removing and installing backrest adjustment motor V45 / V46	367
2.49	Removing and installing lumbar support longitudinal adjustment motor V125 / V126	368
2.50	Removing and installing lumbar support height adjustment motor V129 / V130	370
2.51	Removing and installing seat height adjustment motor V245 / V246	373
2.52	Removing and installing limit switch E69 / E70	375
2.53	Removing and installing lumbar support adjustment switch E176 / E177	378
2.54	Removing and installing seat longitudinal adjustment switch, seat rake adjustment switch, seat height adjustment switch and backrest adjustment switch (E64 , E96 , E98 , E222 , E334 , E363 , E364 , E365)	379
2.55	Removing and installing toothed segment for seat height adjustment	379
2.56	Removing and installing stop for longitudinal seat adjustment	381
2.57	Removing and installing lumbar support adjustment switch E176 / E177	382
2.58	Removing and installing seat adjustment actuator	383
2.59	Removing and installing backrest cover panel	383
2.60	Removing and installing retaining bracket for trim (sill side)	388
2.61	Removing and installing seat longitudinal adjustment handle	389
2.62	Removing and installing spring mat	389
2.63	Removing and installing trim with Easy Entry handle	392
2.64	Removing and installing retainer for Easy Entry system	394
2.65	Removing and installing storage compartment	394
2.66	Dismantling and assembling storage compartment	397
3	Rear seats	400
3.1	Overview of fitting locations - rear seats	400
3.2	Exploded view - seat bench/individual seats	402
3.3	Exploded view - locking mechanism	403
3.4	Exploded view - rear seat backrest	403
3.5	Exploded view - seat frame	405
3.6	Exploded view - outer backrest frame and backrest pan	406
3.7	Removing and installing seat bench/individual seats	407
3.8	Removing and installing seat frame	408
3.9	Removing and installing rear seat backrest	409
3.10	Removing and installing cap for centre mounting	412
3.11	Removing and installing outer backrest frame	413
3.12	Removing and installing backrest pan	414
3.13	Removing and installing trim for locking mechanism	414
3.14	Removing and installing locking mechanism for rear seat backrest	415
3.15	Removing and installing button for release mechanism	418
3.16	Removing and installing outer filler piece	420
74	Seat - padding, covers	421
1	Covers and padding on front seats	421
1.1	Exploded view - seat pan cover and padding	421
1.2	Exploded view - backrest cover and padding	423
1.3	Exploded view - head restraint cover and padding	424
1.4	Overview - seat heating elements	425

1.5	Overview - backrest heating element	426
1.6	Removing and installing seat pan cover and padding	426
1.7	Removing and installing backrest cover and padding	430
1.8	Separating seat pan cover and padding	435
1.9	Separating backrest cover and padding	436
1.10	Removing and installing head restraint cover and padding	436
1.11	Removing and installing seat heating element Z6 / Z8	438
1.12	Removing and installing backrest heating element Z7 / Z9	439
2	Covers and padding on rear seats	441
2.1	Exploded view - cover and padding	441
2.2	Removing and installing cover and padding	442
2.3	Detaching seat cover from padding	445