

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety briefing/employee qualification</b> .....	<b>1</b>
1.1 Qualification .....	1
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions .....	2
2.2 Safety precautions when working on the cooling system .....	4
2.3 Safety precautions when using testers and measuring instruments during a road test .....	4
2.4 Work that requires high-voltage system to be de-energised .....	5
<b>3 Repair instructions</b> .....	<b>6</b>
3.1 Important notes .....	6
3.2 Information on handling fine dust, aluminium dust and steel dust .....	7
3.3 Routing and attachment of pipes, hoses and wiring .....	8
3.4 Contact corrosion .....	8
3.5 Bonding surfaces for adhesive strips .....	8
3.6 Self-locking bolts .....	8
3.7 Identification plates .....	8
3.8 Impact wrenches .....	8
3.9 Repairing joints with flow-drill screws .....	9
3.10 Moulded foam inserts .....	11
3.11 Bonded joints .....	12
3.12 Corrosion protection .....	13
3.13 Surface treatment .....	13
3.14 Matching the surface contour .....	14
3.15 Body construction .....	15
<b>4 Vehicle identification data</b> .....	<b>17</b>
4.1 Type plate and vehicle identification number .....	17
4.2 Vehicle data sticker .....	17
<b>5 Overview of riveting attachments (pairs of tools)</b> .....	<b>19</b>
5.1 Overview of rivets and tools .....	20
5.2 Overview of rivets used for repair measures .....	25
5.3 Thread repair for M6 pop rivet nut .....	25
5.4 Rivets accessible from one side only .....	25
5.5 Inserting pop rivet bolts WHT 005 180 .....	26
<b>6 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b> .....	<b>27</b>
<b>7 Using edge milling unit -VAS 882 005-</b> .....	<b>29</b>
7.1 General information .....	29
7.2 Assembling unit/changing milling tool .....	32
7.3 Separating flanged edges .....	42
7.4 Separating panels at corners and along surfaces .....	48
7.5 Separating outer edges .....	51
7.6 Roof - Renewal .....	54
7.7 Separating laser weld seams using round head milling unit .....	56
7.8 Aluminium panels .....	58
<b>8 Processing body structure adhesive D 180 004 M2</b> .....	<b>61</b>
8.1 Preparing bonding surfaces .....	62
<b>9 Body panel gaps/shut lines</b> .....	<b>76</b>
9.1 Body - front and centre .....	76
<b>10 Body dimensions</b> .....	<b>79</b>
10.1 Floor group, front .....	79
10.2 Floor group, rear .....	80

10.3	Body - front	80
10.4	Body - centre	82
10.5	Body - rear	83
<b>11</b>	<b>Tools</b>	<b>85</b>
<b>12</b>	<b>Straightening jig</b>	<b>89</b>
12.1	Procedure for repairing structural body damage on Audi vehicles	89
12.2	Overview	89
12.3	Portal gauge	103
<b>50 - Body - front</b>		<b>105</b>
<b>1</b>	<b>Safety precautions</b>	<b>105</b>
<b>2</b>	<b>Longitudinal member, upper part with console - Renewal (Coupé and Roadster identical)</b>	<b>106</b>
2.1	Tools	106
2.2	Procedure	107
<b>3</b>	<b>Support, left-side - Renewal (Coupé and Roadster identical)</b>	<b>113</b>
3.1	Tools	113
3.2	Procedure	114
<b>4</b>	<b>Support, right-side - Renewal (Coupé and Roadster identical)</b>	<b>117</b>
4.1	Tools	117
4.2	Procedure	118
<b>5</b>	<b>Upper longitudinal member for wheel housing - Renewal (Coupé and Roadster identical)</b>	<b>122</b>
5.1	Tools	122
5.2	Procedure	122
<b>6</b>	<b>Suspension strut mounting - Renewal (Coupé and Roadster identical)</b>	<b>126</b>
6.1	Tools	126
6.2	Procedure	127
<b>7</b>	<b>Wheel housing front section - Renewal (Coupé and Roadster identical)</b>	<b>134</b>
7.1	Tools	134
7.2	Procedure	135
<b>8</b>	<b>Lower front longitudinal member - Renewal (Coupé and Roadster identical)</b>	<b>141</b>
8.1	Tools	141
8.2	Procedure	141
<b>9</b>	<b>Front longitudinal member - Partial renewal (Coupé and Roadster identical)</b>	<b>147</b>
9.1	Tools	147
9.2	Procedure	147
<b>10</b>	<b>Longitudinal member (front section) - Renewal (Coupé and Roadster identical)</b>	<b>151</b>
10.1	Tools	151
10.2	Procedure	151
<b>51 - Body - centre</b>		<b>154</b>
<b>1</b>	<b>Safety precautions</b>	<b>154</b>
<b>2</b>	<b>Permitted separating cuts on complete side panel</b>	<b>155</b>
<b>3</b>	<b>Roof - Renewal</b>	<b>157</b>
3.1	Tools	157
3.2	Procedure	158
<b>4</b>	<b>Roof side member - Renewal</b>	<b>168</b>
4.1	Tools	168
4.2	Procedure	169
4.3	Foam filling	173
<b>5</b>	<b>Outer roof frame - Renewal (Roadster)</b>	<b>186</b>
5.1	Tools	186
5.2	Procedure	187
<b>6</b>	<b>Front roof cross member - Renewal</b>	<b>190</b>

6.1	Tools .....	190
6.2	Procedure .....	190
<b>7</b>	<b>Rear roof frame - Renewal .....</b>	<b>196</b>
7.1	Tools .....	196
7.2	Procedure .....	196
<b>8</b>	<b>Outer A-pillar - Renewal .....</b>	<b>202</b>
8.1	Tools .....	202
8.2	Procedure .....	202
<b>9</b>	<b>Reinforcement tube and inner A-pillar - Renewal (Roadster) .....</b>	<b>209</b>
9.1	Tools .....	209
9.2	Procedure .....	210
<b>10</b>	<b>Inner A-pillar - Renewal (Coupé) .....</b>	<b>215</b>
10.1	Tools .....	215
10.2	Procedure .....	216
<b>11</b>	<b>Inner B-pillar - Renewal (Roadster) .....</b>	<b>221</b>
11.1	Tools .....	221
11.2	Procedure .....	222
<b>12</b>	<b>Outer side member - Renewal .....</b>	<b>227</b>
12.1	Tools .....	227
12.2	Procedure .....	228
<b>13</b>	<b>Inner side member - Partial renewal .....</b>	<b>232</b>
13.1	Tools .....	232
13.2	Procedure .....	233
<b>14</b>	<b>Inner side member - Renewal (Roadster) .....</b>	<b>236</b>
14.1	Tools .....	236
14.2	Procedure .....	236
<b>15</b>	<b>Floor panel - Renewal (Coupé and Roadster identical) .....</b>	<b>246</b>
15.1	Tools .....	246
<b>53 - Body - rear .....</b>		<b>248</b>
<b>1</b>	<b>Safety precautions .....</b>	<b>248</b>
<b>2</b>	<b>Permitted separating cuts on complete side panel .....</b>	<b>249</b>
<b>3</b>	<b>Rear upper cross panel - Renewal (Coupé and Roadster identical) .....</b>	<b>251</b>
3.1	Tools .....	251
3.2	Procedure .....	251
<b>4</b>	<b>Inner cross panel - Renewal (Coupé and Roadster identical) .....</b>	<b>255</b>
4.1	Tools .....	255
4.2	Procedure .....	255
<b>5</b>	<b>Drip rail - Partial renewal .....</b>	<b>259</b>
5.1	Tools .....	259
5.2	Procedure .....	259
<b>6</b>	<b>Rear suspension strut mounting - Renewal (Coupé and Roadster identical) .....</b>	<b>264</b>
6.1	Tools .....	264
6.2	Procedure .....	264
<b>7</b>	<b>Rear longitudinal member - Partial renewal (Coupé and Roadster identical) .....</b>	<b>267</b>
7.1	Tools .....	267
7.2	Procedure .....	267
<b>8</b>	<b>Side panel - Renewal (Coupé) .....</b>	<b>270</b>
8.1	Tools .....	270
8.2	Procedure .....	271
<b>9</b>	<b>Side panel - Renewal (Roadster) .....</b>	<b>279</b>
9.1	Tools .....	279
9.2	Procedure .....	280



<b>10</b>	<b>Inner side panel - Renewal</b> .....	<b>287</b>
10.1	Tools .....	287
10.2	Procedure .....	288
<b>11</b>	<b>Rear wheel housing - Partial renewal (Coupé and Roadster identical)</b> .....	<b>295</b>
11.1	Tools .....	295
11.2	Procedure .....	295
<b>12</b>	<b>Rear wheel housing - Renewal (Coupé and Roadster identical)</b> .....	<b>299</b>
12.1	Tools .....	299
12.2	Procedure .....	299
<b>13</b>	<b>Spare wheel well - Partial renewal (Coupé and Roadster identical)</b> .....	<b>303</b>
13.1	Tools .....	303
13.2	Procedure .....	303
<b>14</b>	<b>Spare wheel well - Renewal (Coupé and Roadster identical)</b> .....	<b>307</b>
14.1	Tools .....	307
14.2	Procedure .....	307