

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Identification of final drive .....	1
<b>2 Technical data</b> .....	<b>3</b>
2.1 Allocation: rear final drive - engine .....	3
2.2 Capacities .....	7
<b>3 Transmission layout</b> .....	<b>9</b>
3.1 Transmission layout - four-wheel drive .....	9
<b>4 Repair instructions</b> .....	<b>11</b>
4.1 General repair instructions .....	11
4.2 Gear oil and oil for Haldex coupling .....	13
4.3 Contact corrosion .....	14
<b>5 Safety precautions</b> .....	<b>15</b>
5.1 General safety precautions .....	15
5.2 Safety precautions when working on vehicles with start/stop system .....	18
<b>6 Electrical components</b> .....	<b>19</b>
6.1 Overview of fitting locations - electrical components .....	19
<b>39 - Final drive - rear differential</b> .....	<b>22</b>
<b>1 Propshaft</b> .....	<b>22</b>
1.1 Exploded view - propshaft .....	22
1.2 Removing and installing propshaft .....	26
1.3 Removing and installing flexible coupling (rear) .....	43
1.4 Dismantling and assembling propshaft .....	49
<b>2 Final drive</b> .....	<b>54</b>
2.1 Exploded view - final drive .....	54
2.2 Removing and installing final drive .....	55
<b>3 Oil seals</b> .....	<b>72</b>
3.1 Renewing oil seal (left-side) .....	72
3.2 Renewing oil seal (right-side) .....	74
3.3 Renewing oil seal for propshaft flange .....	74
<b>4 Assembly mountings</b> .....	<b>78</b>
4.1 Exploded view - assembly mountings .....	78
4.2 Removing and installing bonded rubber bushes .....	79
<b>5 Haldex coupling</b> .....	<b>83</b>
5.1 Function test .....	83
5.2 Exploded view - Haldex coupling .....	86
5.3 Removing and installing Haldex coupling .....	87
5.4 Dismantling and assembling Haldex coupling .....	90
5.5 Removing and installing control unit .....	108
<b>6 High performance oil for Haldex coupling</b> .....	<b>118</b>
6.1 Checking oil level for Haldex coupling .....	118
6.2 Topping up high performance oil in Haldex coupling .....	119
6.3 Changing high performance oil for Haldex coupling .....	122
<b>7 Gear oil</b> .....	<b>124</b>
7.1 Checking gear oil level .....	124