

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	2
2.1 Allocation of gearbox to engine	2
2.2 Capacities	3
2.3 Calculating gear ratios	3
3 Transmission layout	4
3.1 Transmission layout - front-wheel drive	4
4 Safety precautions	6
4.1 Safety precautions when working on vehicles with start/stop system	6
5 Repair instructions	7
5.1 Contact corrosion	7
5.2 General repair instructions	7
30 - Clutch	13
1 Clutch mechanism	13
1.1 Overview - clutch mechanism	13
1.2 Notes on removing and installing clutch master cylinder and slave cylinder	14
1.3 Checking clutch master cylinder and clutch slave cylinder	15
1.4 Exploded view - pedal cluster	16
1.5 Exploded view - clutch hydraulics	18
1.6 Exploded view - clutch release mechanism	23
1.7 Removing and installing over-centre spring	24
1.8 Removing and installing clutch pedal	25
1.9 Removing and installing mounting bracket	28
1.10 Removing and installing clutch position sender G476	32
1.11 Removing and installing clutch master cylinder	32
1.12 Removing and installing clutch slave cylinder together with release bearing	34
1.13 Removing and installing lines for clutch hydraulics	35
1.14 Bleeding clutch hydraulics	37
2 Clutch	39
2.1 Exploded view - clutch unit	39
2.2 Identifying different makes of clutch	44
2.3 Removing and installing clutch	45
34 - Controls, housing	52
1 Selector mechanism	52
1.1 Installation position - selector mechanism	52
1.2 Exploded view - gear knob and cover	54
1.3 Removing and installing gear knob	55
1.4 Exploded view - gear lever and selector housing	57
1.5 Exploded view - selector cables	62
1.6 Removing and installing selector mechanism	70
1.7 Removing and installing selector cable	75
1.8 Dismantling and assembling selector mechanism	76
1.9 Adjusting selector mechanism	82
1.10 Checking selector mechanism	84
2 Removing and installing gearbox	85
2.1 Removing gearbox	85
2.2 Installing gearbox	96
2.3 Tightening torques for gearbox	101



3	Assembly mountings	103
3.1	Exploded view - assembly mountings	103
3.2	Removing and installing gearbox mounting	105
3.3	Removing and installing pendulum support	108
4	Transporting gearbox	110
5	Gear oil	112
5.1	Distinguishing manual gearboxes for oil filling	112
5.2	Checking gear oil level	112
6	Exploded view - selector unit	117
6.1	Renewing selector shaft oil seal	117
6.2	Removing and installing selector unit	119
7	Dismantling and assembling gearbox	122
8	Gearbox housing, clutch housing	123
35 - Gears, shafts		124
1	Input shaft	124
2	Output shaft	125
39 - Final drive - differential		126
1	Oil seals	126
1.1	Overview of fitting locations - oil seals	126
1.2	Renewing oil seal (left-side)	127
1.3	Renewing oil seal (right-side)	129
1.4	Renewing input shaft oil seal	132
2	Differential	134