

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of bevel box	2
2 Technical data	3
2.1 Allocation of gearbox to engine	3
2.2 Capacities	5
2.3 Calculating gear ratios	5
3 Overview - power transmission	6
3.1 Overview - power transmission, all-wheel drive	6
4 Safety information	8
4.1 Safety precautions when working on vehicles with start/stop system	8
5 Repair instructions	9
5.1 Precautions when working on the subframe	9
5.2 Use of impact wrenches	9
5.3 Routing and attachment of pipes, hoses and wiring	10
5.4 Contact corrosion	10
5.5 General repair instructions	10
30 - Clutch	17
1 Clutch mechanism	17
1.1 Overview - clutch mechanism	17
1.2 Notes on removing and installing clutch master cylinder and slave cylinder	18
1.3 Checking clutch master cylinder and clutch slave cylinder	19
1.4 Assembly overview - pedal cluster	20
1.5 Assembly overview - clutch hydraulics	23
1.6 Assembly overview - clutch release mechanism	28
1.7 Removing and installing over-centre spring	30
1.8 Removing and installing clutch pedal	33
1.9 Removing and installing mounting bracket	36
1.10 Removing and installing clutch position sender G476	42
1.11 Removing and installing clutch master cylinder	43
1.12 Removing and installing clutch slave cylinder together with release bearing	45
1.13 Removing and installing lines for clutch mechanism	47
1.14 Bleeding clutch mechanism	50
2 Clutch	52
2.1 Assembly overview - clutch	52
2.2 Identifying different makes of clutch	59
2.3 Removing and installing clutch	61
34 - Controls, housing	68
1 Selector mechanism	68
1.1 Installation position - selector mechanism	68
1.2 Assembly overview - gear knob and covers	69
1.3 Assembly overview - gear lever and selector housing	71
1.4 Assembly overview - selector cables	76
1.5 Removing and installing gear knob	88
1.6 Removing and installing selector mechanism	89
1.7 Dismantling and assembling selector mechanism	94
1.8 Removing and installing selector cable	100
1.9 Adjusting selector mechanism	102
1.10 Checking selector mechanism	106



1.11	Renewing selector shaft oil seal	106
1.12	Removing and installing selector unit	109
2	Removing and installing gearbox	112
2.1	Removing gearbox	112
2.2	Installing gearbox	156
2.3	Tightening torques for gearbox	162
3	Transporting gearbox	166
4	Securing to engine and gearbox support	168
5	Assembly mountings	169
5.1	Assembly overview - assembly mountings	169
5.2	Removing and installing gearbox mounting	172
5.3	Removing and installing pendulum support	183
6	Gear oil	185
6.1	Distinguishing manual gearboxes for oil filling	185
6.2	Checking gear oil level	185
7	Bevel box	192
7.1	Removing bevel box	193
7.2	Installing bevel box	203
8	Assembly overview - selector unit	208
8.1	Renewing selector shaft oil seal	208
8.2	Removing and installing selector unit	211
9	Dismantling and assembling gearbox	215
10	Gearbox housing, clutch housing	216
35 - Gears, shafts		217
1	Input shaft	217
2	Output shaft	218
39 - Final drive - front differential		219
1	Oil seals	219
1.1	Overview of fitting locations - oil seals	219
1.2	Renewing left oil seal	221
1.3	Renewing right oil seal	222
1.4	Renewing input shaft oil seal	224
2	Differential	226
2.1	Assembly overview - differential	226
2.2	Removing and installing left flange shaft	227
2.3	Removing and installing right flange shaft	228
2.4	Dismantling and assembling differential	231
3	Bevel box	232
3.1	Assembly overview - bevel box	232
3.2	Renewing oil seals for bevel box	234
3.3	Renewing output flange and re-determining shim for output flange	247
3.4	Renewing needle bearings (polygon bearings) for right flange shaft	248
4	Gear oil	252
4.1	Checking gear oil level	252
4.2	Draining and filling gear oil	253
5	Propshaft	259
6	Rear final drive	260