

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	3
2.1 Allocation of gearbox to engine	3
2.2 Calculating gear ratios	9
2.3 Capacities	9
3 Safety precautions	10
3.1 General safety precautions	10
3.2 Safety precautions when working on vehicles with start/stop system	10
3.3 Safety precautions when using testers and measuring instruments during a road test	11
3.4 Notes on tow-starting and towing	11
4 Repair instructions	12
4.1 General notes	12
4.2 Rules for cleanliness	13
4.3 General repair instructions	13
4.4 Contact corrosion	14
4.5 Safety functions of gearbox control unit	15
30 - Clutch	16
1 Clutch	16
1.1 Exploded view - dual clutch	16
1.2 Removing dual clutch	17
1.3 Installing dual clutch	19
34 - Controls, housing	28
1 Selector mechanism	28
1.1 Exploded view - selector lever handle	28
1.2 Exploded view - selector mechanism	31
1.3 Manual release from position P	34
1.4 Removing and installing selector lever handle	35
1.5 Detaching selector lever boot from selector lever handle	39
1.6 Bringing interlock button in handle into installation position	41
1.7 Removing and installing selector lever position display Y26 with selector lever display illumination bulb L101	42
1.8 Removing and installing selector mechanism	44
1.9 Checking selector mechanism	49
1.10 Removing and installing selector lever cable	51
1.11 Checking and adjusting selector lever cable	55
1.12 Checking connectors on selector mechanism	58
1.13 Renewing selector shaft oil seal	58
2 Removing and installing gearbox	62
2.1 Removing gearbox	62
2.2 Installing gearbox	90
2.3 Tightening torques for gearbox	96
3 Transporting gearbox	98
4 Securing to engine and gearbox support	100
5 Assembly mountings	102
5.1 Exploded view - assembly mountings	102
5.2 Removing and installing gearbox mounting	104
5.3 Removing and installing pendulum support	114
6 Bevel box	116



6.1	Removing bevel box	116
6.2	Installing bevel box	124
7	Gear oil circuit	128
7.1	Overview - gear oil circuit	128
7.2	Removing and installing gear oil cooler	128
7.3	Removing and installing gear oil filter	130
7.4	Removing and installing gear oil pump	132
8	Mechatronic unit	135
8.1	Exploded view - mechatronic unit	135
8.2	Removing and installing oil pan	140
8.3	Removing and installing mechatronic unit	143
8.4	Removing and installing gearbox input speed sender G182 and clutch temperature sender G509	150
9	Gear oil	152
9.1	Checking gear oil level	152
9.2	Draining and filling gear oil	160
35 - Gears, shafts		165
1	Dismantling and assembling gears and shafts	165
39 - Final drive - front differential		166
1	Gearbox control system	166
1.1	Overview of fitting locations - gearbox control system	166
2	Oil seals	169
2.1	Overview of fitting locations - oil seals	169
2.2	Renewing oil seal (left-side)	169
2.3	Renewing oil seal (right-side)	170
3	Differential	173
3.1	Removing and installing flange shaft (left-side)	173
3.2	Removing and installing flange shaft (right-side)	175
4	Bevel box	178
4.1	Exploded view - bevel box	178
4.2	Renewing oil seals for bevel box	179
5	Gear oil	189
5.1	Checking gear oil level	189
5.2	Draining and filling gear oil	190
6	Propshaft	192
7	Rear final drive	193