

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	3
2.1 Allocation of gearbox to engine	3
2.2 Calculating gear ratios	3
2.3 Capacities	4
3 Transmission layout	5
3.1 Transmission layout - front-wheel drive	5
4 Safety precautions	6
4.1 General safety precautions	6
4.2 Safety precautions when working on vehicles with start/stop system	7
4.3 Safety precautions when using testers and measuring instruments during a road test	7
4.4 Safety precautions when working on mechatronic unit	7
4.5 Notes on tow-starting and towing	9
5 Repair instructions	10
5.1 General notes	10
5.2 Rules for cleanliness	12
5.3 General repair instructions	12
5.4 Contact corrosion	14
30 - Clutch	15
1 Clutch	15
2 Clutch mechanism	16
34 - Controls, housing	17
1 Selector mechanism	17
1.1 Exploded view - selector lever handle	17
1.2 Exploded view - selector mechanism	19
1.3 Manual release from position P	19
1.4 Removing and installing selector lever handle	21
1.5 Detaching selector lever boot from selector lever handle	23
1.6 Bringing interlock button in handle into installation position	24
1.7 Removing and installing selector lever position display Y26 with selector lever display illumination bulb L101	26
1.8 Removing and installing selector mechanism	27
1.9 Checking selector mechanism	29
1.10 Checking and adjusting selector lever cable	31
1.11 Checking connectors on selector mechanism	32
2 Removing and installing gearbox	34
2.1 Removing gearbox	34
2.2 Installing gearbox	43
2.3 Tightening torques for gearbox	46
3 Transporting gearbox	47
4 Securing to engine and gearbox support	50
5 Assembly mountings	52
5.1 Exploded view - assembly mountings	52
5.2 Removing and installing gearbox mounting	53
5.3 Removing and installing pendulum support	57
6 Gear oil	58
6.1 Draining and filling gear oil	58



7	Mechatronic unit	62
7.1	Exploded view - mechatronic unit	62
7.2	Removing and installing mechatronic unit	63
7.3	Moving mechatronic unit for dual clutch gearbox J743 into removal position by hand	75
35 - Gears, shafts		76
1	Parking lock	76
39 - Final drive - differential		77
1	Gearbox control system	77
1.1	Overview of fitting locations - gearbox control system	77
1.2	Basic settings	79
2	Oil seals	81
2.1	Overview of fitting locations - oil seals	81
2.2	Renewing oil seal (left-side)	81
2.3	Renewing oil seal (right-side)	83
3	Differential	85
3.1	Exploded view - differential	85
3.2	Removing and installing flange shaft (left-side)	85
3.3	Removing and installing flange shaft (right-side)	87