

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine identification number/engine data .....	1
<b>2 Safety precautions</b> .....	<b>3</b>
2.1 Safety precautions when working on the fuel system .....	3
2.2 Safety precautions when working on the fuel supply system .....	7
2.3 Safety precautions when using testers and measuring instruments during a road test .....	8
2.4 Safety precautions when working on the cooling system .....	8
2.5 Safety precautions when working on the ignition system .....	8
<b>3 Repair instructions</b> .....	<b>10</b>
3.1 Rules for cleanliness .....	10
3.2 Foreign particles in engine .....	10
3.3 Contact corrosion .....	10
3.4 Routing and attachment of pipes, hoses and wiring .....	11
3.5 Checking vacuum system .....	11
<b>10 - Removing and installing engine</b> .....	<b>12</b>
<b>1 Removing and installing engine</b> .....	<b>12</b>
1.1 Removing engine .....	12
1.2 Separating engine and gearbox .....	28
1.3 Securing engine to engine and gearbox support .....	32
1.4 Installing engine .....	33
<b>2 Assembly mountings</b> .....	<b>40</b>
2.1 Exploded view - assembly mountings .....	40
2.2 Adjusting assembly mountings .....	42
2.3 Checking adjustment of assembly mountings (engine/gearbox mountings) .....	46
<b>13 - Crankshaft group</b> .....	<b>47</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>47</b>
1.1 Exploded view - poly V-belt drive .....	47
1.2 Removing and installing poly V-belt .....	49
1.3 Removing and installing tensioner for poly V-belt .....	50
1.4 Removing and installing vibration damper .....	51
1.5 Removing and installing bracket for ancillaries .....	52
1.6 Removing and installing sealing flange (pulley end) .....	53
<b>2 Cylinder block (gearbox end)</b> .....	<b>56</b>
2.1 Exploded view - flywheel .....	56
2.2 Removing and installing flywheel .....	57
2.3 Renewing crankshaft oil seal (gearbox end) .....	57
<b>3 Crankshaft</b> .....	<b>60</b>
3.1 Exploded view - crankshaft .....	60
3.2 Crankshaft dimensions .....	62
3.3 Allocation of main bearing shells .....	63
3.4 Renewing needle bearing in crankshaft .....	66
3.5 Measuring axial clearance of crankshaft .....	67
3.6 Measuring radial clearance of crankshaft .....	68
<b>4 Pistons and conrods</b> .....	<b>70</b>
4.1 Exploded view - pistons and conrods .....	70
4.2 Piston and cylinder dimensions .....	73
4.3 Measuring axial clearance of conrods .....	73
4.4 Checking radial clearance of conrod bearings .....	73



<b>15 - Cylinder head, valve gear</b> .....	<b>74</b>
<b>1 Cylinder head</b> .....	<b>74</b>
1.1 Exploded view - cylinder head .....	74
1.2 Removing and installing cylinder head .....	76
1.3 Removing and installing cylinder head cover .....	83
1.4 Checking compression .....	84
<b>2 Timing chain cover</b> .....	<b>86</b>
2.1 Exploded view - timing chain cover .....	86
2.2 Removing and installing timing chain cover .....	87
<b>3 Chain drive</b> .....	<b>89</b>
3.1 Exploded view - timing chain .....	89
3.2 Removing and installing camshaft timing chain .....	91
3.3 Removing camshaft timing chain from camshafts .....	102
3.4 Removing and installing drive chain for valve gear .....	110
<b>4 Valve gear</b> .....	<b>121</b>
4.1 Exploded view - valve gear .....	121
4.2 Measuring axial clearance of camshaft .....	125
4.3 Measuring radial clearance of camshaft .....	126
4.4 Removing and installing camshaft .....	126
4.5 Removing and installing valve stem oil seals .....	130
<b>5 Inlet and exhaust valves</b> .....	<b>140</b>
5.1 Machining valve seats .....	140
5.2 Checking valve guides .....	142
5.3 Checking valves .....	143
5.4 Valve dimensions .....	143
<b>17 - Lubrication</b> .....	<b>144</b>
<b>1 Sump/oil pump</b> .....	<b>144</b>
1.1 Exploded view - sump/oil pump .....	144
1.2 Exploded view - oil pump .....	147
1.3 Engine oil .....	148
1.4 Removing and installing sump .....	148
<b>2 Oil filter/oil pressure switch</b> .....	<b>151</b>
2.1 Exploded view - oil filter housing/oil pressure switches .....	151
2.2 Removing and installing oil filter housing .....	152
2.3 Removing and installing oil pressure switch F1 .....	154
2.4 Checking oil pressure and oil pressure switch .....	155
2.5 Checking oil level .....	157
<b>19 - Cooling</b> .....	<b>159</b>
<b>1 Cooling system/coolant</b> .....	<b>159</b>
1.1 Diagram - coolant hose connections .....	159
1.2 Checking cooling system for leaks .....	160
1.3 Draining and filling cooling system .....	161
<b>2 Coolant pump/thermostat assembly</b> .....	<b>168</b>
2.1 Exploded view - thermostat .....	168
2.2 Removing and installing electrical coolant pump .....	169
2.3 Removing and installing coolant pump .....	172
2.4 Removing and installing thermostat .....	175
2.5 Checking thermostat .....	178
2.6 Removing and installing coolant temperature sender G62 .....	178
<b>3 Coolant pipes</b> .....	<b>180</b>
3.1 Removing and installing coolant pipes .....	180
3.2 Removing and installing coolant pipes for gearbox .....	180

<b>4</b>	<b>Radiator/radiator fans</b> .....	<b>184</b>
4.1	Exploded view - radiator/radiator fans .....	184
4.2	Removing and installing radiator .....	185
4.3	Removing and installing radiator cowl with radiator fan .....	187
4.4	Removing and installing radiator fans .....	189
<b>24</b>	<b>Mixture preparation - injection</b> .....	<b>190</b>
<b>1</b>	<b>Injection system</b> .....	<b>190</b>
1.1	Overview of fitting locations - injection system .....	190
<b>2</b>	<b>Injectors</b> .....	<b>197</b>
2.1	Exploded view - fuel rail with injectors .....	197
2.2	Removing and installing injectors .....	197
2.3	Checking injectors .....	199
2.4	Checking fuel pressure regulator and residual pressure .....	202
<b>3</b>	<b>Air cleaner</b> .....	<b>207</b>
3.1	Exploded view - air cleaner housing .....	207
3.2	Removing and installing air cleaner housing .....	208
<b>4</b>	<b>Intake manifold</b> .....	<b>211</b>
4.1	Exploded view - intake manifold .....	211
4.2	Removing and installing intake manifold .....	212
4.3	Removing and installing throttle valve module J338 .....	215
4.4	Checking intake manifold change-over function .....	216
4.5	Removing and installing vacuum unit for intake manifold flaps .....	218
<b>5</b>	<b>Senders and sensors</b> .....	<b>219</b>
5.1	Removing and installing air mass meter .....	219
<b>6</b>	<b>Engine control unit</b> .....	<b>220</b>
6.1	Removing and installing engine control unit J623 .....	220
6.2	Wiring and component check with test box .....	223
<b>7</b>	<b>Lambda probe</b> .....	<b>225</b>
7.1	Removing and installing Lambda probe .....	225
<b>26</b>	<b>Exhaust system</b> .....	<b>228</b>
<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>228</b>
1.1	Exploded view - silencers .....	228
1.2	Removing and installing front exhaust pipe .....	230
1.3	Renewing tailpipes .....	233
1.4	Stress-free alignment of exhaust system .....	233
1.5	Checking exhaust system for leaks .....	233
<b>2</b>	<b>Secondary air system</b> .....	<b>234</b>
2.1	Exploded view - secondary air system .....	234
2.2	Removing and installing secondary air pump motor V101 .....	238
2.3	Removing and installing combination valve .....	240
2.4	Removing and installing sender 1 for secondary air pressure G609 .....	246
<b>3</b>	<b>Exhaust manifold</b> .....	<b>247</b>
3.1	Exploded view - exhaust manifold .....	247
3.2	Removing and installing exhaust manifold .....	247
<b>28</b>	<b>Ignition system</b> .....	<b>250</b>
<b>1</b>	<b>Ignition system</b> .....	<b>250</b>
1.1	Exploded view - ignition system .....	250
1.2	Test data, spark plugs .....	251
1.3	Removing and installing ignition coils .....	251