

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on the ignition system	3
1.5 Rules for cleanliness when working on fuel supply system and injection system	3
1.6 Reducing pressure in high-pressure section of injection system	4
1.7 Checking vacuum system	5
2 Injection system	6
2.1 Overview of fitting locations	6
3 Air cleaner	13
3.1 Air cleaner - exploded view	13
3.2 Removing and installing air filter element	14
3.3 Removing and installing air cleaner housing	16
4 Intake manifold	17
4.1 Intake manifold (top section) - exploded view	17
4.2 Removing and installing intake manifold (top section)	18
4.3 Intake manifold (bottom section), fuel rail and injectors - exploded view	20
4.4 Removing and installing intake manifold (bottom section) with fuel rail	22
4.5 Removing and installing throttle valve module J338	24
5 Injectors	27
5.1 Removing and installing injectors	27
6 High-pressure pump	32
6.1 High-pressure pump - exploded view	32
6.2 Removing and installing high-pressure pump	33
6.3 Removing and installing high-pressure pipe	34
7 Senders and sensors	37
7.1 Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	37
7.2 Removing and installing fuel pressure sender G247	37
7.3 Checking fuel pressure and residual pressure (up to high-pressure pump)	39
8 Lambda probe	43
8.1 Lambda probes - overview	43
8.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	44
8.3 Removing and installing Lambda probe after catalytic converter G130 with Lambda probe 1 heater after catalytic converter Z29	45
9 Engine control unit	48
9.1 Wiring and component check with test box V.A.G 1598/42	48
9.2 Removing and installing engine control unit J623	50
28 - Ignition system	54
1 General notes and safety precautions	54
1.1 General notes on ignition system	54
1.2 Safety precautions	55
2 Servicing ignition system	56
2.1 Test data	56
2.2 Ignition system - exploded view	56
2.3 Removing and installing ignition coils	58
2.4 Removing and installing knock sensors G61 / G66	59
2.5 Removing and installing Hall senders G40 / G300	60
2.6 Removing and installing engine speed sender G28	61