

Contents

24	Mixture preparation - injection	1
1	Safety precautions and rules for cleanliness	1
1.1	Safety precautions	1
1.2	Rules for cleanliness when working on fuel supply system and injection system	2
2	Injection system	3
2.1	Test data	3
2.2	Overview of fitting locations	3
2.3	Air cleaner - exploded view	10
2.4	Removing and installing air filter element	12
2.5	Removing and installing air cleaner housing	13
2.6	Removing and installing air mass meter G70	14
2.7	Intake manifold - exploded view	15
2.8	Removing and installing intake manifold	16
2.9	Removing and installing throttle valve module J338	19
2.10	Checking vacuum unit for intake manifold flaps	20
2.11	Removing and installing vacuum unit for intake manifold flaps	22
2.12	Checking fuel pressure regulator and residual pressure	22
2.13	Fuel rail with injectors - exploded view	27
2.14	Removing and installing injectors	27
2.15	Checking injection quantity and spray pattern of injectors; checking for leaks	29
2.16	Removing and installing Lambda probes (before catalytic converter)	32
2.17	Removing and installing Lambda probes (after catalytic converter)	33
3	Engine control unit J623	35
3.1	Wiring and component check with test box	35
3.2	Removing and installing engine control unit J623	35
28	Ignition system	39
1	General notes and safety precautions	39
1.1	General notes on ignition system	39
1.2	Safety precautions	39
2	Servicing ignition system	41
2.1	Test data	41
2.2	Ignition system - exploded view	42
2.3	Removing and installing ignition coils	43