

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine identification number/engine data .....	1
<b>2 Safety precautions</b> .....	<b>2</b>
2.1 Safety precautions when working on the fuel supply system .....	2
2.2 Safety precautions when using testers and measuring instruments during a road test .....	4
2.3 Safety precautions when working on the cooling system .....	5
2.4 Safety precautions when working on the ignition system .....	6
2.5 Reducing fuel pressure in high-pressure section .....	6
<b>3 Repair instructions</b> .....	<b>8</b>
3.1 Rules for cleanliness .....	8
3.2 Foreign particles in engine .....	8
3.3 Contact corrosion .....	8
3.4 Routing and attachment of pipes, hoses and wiring .....	9
3.5 Installing radiators and condensers .....	9
3.6 Checking vacuum system .....	9
<b>10 - Removing and installing engine</b> .....	<b>10</b>
<b>1 Removing and installing engine</b> .....	<b>10</b>
1.1 Removing engine .....	10
1.2 Separating engine and gearbox .....	24
1.3 Securing engine to engine and gearbox support .....	24
1.4 Installing engine .....	26
<b>2 Assembly mountings</b> .....	<b>29</b>
2.1 Exploded view - assembly mountings .....	29
2.2 Adjusting assembly mountings .....	31
2.3 Checking adjustment of assembly mountings (engine/gearbox mountings) .....	35
<b>3 Engine cover panel</b> .....	<b>37</b>
3.1 Removing and installing engine cover panel .....	37
<b>13 - Crankshaft group</b> .....	<b>38</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>38</b>
1.1 Exploded view - poly V-belt drive .....	38
1.2 Exploded view - sealing flange (pulley end) .....	40
1.3 Removing and installing poly V-belt .....	41
1.4 Removing and installing vibration damper .....	43
1.5 Removing and installing bracket for ancillaries .....	44
1.6 Renewing crankshaft oil seal (pulley end) .....	47
1.7 Removing and installing sealing flange (pulley end) .....	50
<b>2 Cylinder block (gearbox end)</b> .....	<b>55</b>
2.1 Exploded view - cylinder block (gearbox end) .....	55
2.2 Removing and installing flywheel .....	56
2.3 Removing and installing sealing flange (gearbox end) .....	57
<b>3 Crankshaft</b> .....	<b>60</b>
3.1 Exploded view - crankshaft .....	60
3.2 Crankshaft dimensions .....	62
3.3 Measuring axial clearance of crankshaft .....	62
3.4 Measuring radial clearance of crankshaft .....	63
3.5 Renewing needle bearing in crankshaft .....	64
3.6 Removing and installing chain sprocket .....	65
<b>4 Pistons and conrods</b> .....	<b>67</b>
4.1 Exploded view - pistons and conrods .....	67

4.2	Checking pistons and cylinder bores	68
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>70</b>
<b>1</b>	<b>Cylinder head</b>	<b>70</b>
1.1	Exploded view - cylinder head	70
1.2	Removing and installing cylinder head	73
1.3	Removing and installing cylinder head cover	85
1.4	Checking compression	87
<b>2</b>	<b>Toothed belt drive</b>	<b>90</b>
2.1	Exploded view - toothed belt	90
2.2	Removing and installing toothed belt	96
<b>3</b>	<b>Valve gear</b>	<b>118</b>
3.1	Exploded view - valve gear	118
3.2	Measuring axial clearance of camshaft	121
3.3	Removing and installing camshaft oil seal	121
3.4	Removing and installing camshaft	126
3.5	Removing and installing camshaft adjuster	129
3.6	Removing and installing camshaft control valve 1 N205	132
3.7	Removing and installing valve stem oil seals	135
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>143</b>
4.1	Checking valve guides	143
<b>17</b>	<b>Lubrication</b>	<b>144</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>144</b>
1.1	Exploded view - sump/oil pump	144
1.2	Removing and installing sump	145
<b>2</b>	<b>Engine oil cooler</b>	<b>151</b>
2.1	Removing and installing engine oil cooler	151
<b>3</b>	<b>Oil filter/oil pressure switch</b>	<b>154</b>
3.1	Exploded view - oil filter housing/oil pressure switch	154
3.2	Checking oil pressure and oil pressure switch	156
3.3	Draining oil filter housing	157
3.4	Removing and installing oil filter housing	158
<b>4</b>	<b>Balance shaft assembly</b>	<b>163</b>
4.1	Exploded view - balance shaft assembly	163
4.2	Removing and installing balance shaft assembly	164
4.3	Pre-tensioning chain tensioner	168
<b>19</b>	<b>Cooling</b>	<b>169</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>169</b>
1.1	Connection diagram - coolant hoses	169
1.2	Checking cooling system for leaks	170
1.3	Draining and filling cooling system	171
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>177</b>
2.1	Exploded view - coolant pump and thermostat	177
2.2	Exploded view - electric coolant pump	178
2.3	Removing and installing coolant pump	178
2.4	Removing and installing map-controlled engine cooling system thermostat F265	180
<b>3</b>	<b>Coolant pipes</b>	<b>182</b>
3.1	Removing and installing coolant pipes	182
<b>4</b>	<b>Radiator/radiator fans</b>	<b>185</b>
4.1	Exploded view - radiator/radiator fans	185
4.2	Removing and installing radiator	185
4.3	Removing and installing radiator cowl with radiator fan	188

4.4	Removing and installing radiator fans	190
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>191</b>
<b>1</b>	<b>Turbocharger</b>	<b>191</b>
1.1	Exploded view - turbocharger	191
1.2	Removing and installing turbocharger	195
1.3	Checking vacuum unit for turbocharger	203
1.4	Adjusting vacuum unit for turbocharger	205
1.5	Renewing vacuum unit for turbocharger	210
<b>2</b>	<b>Charge air system</b>	<b>211</b>
2.1	Overview - charge air system	211
2.2	Exploded view - charge air system	212
2.3	Exploded view - hose connections for charge air system	212
2.4	Removing and installing charge air cooler	213
2.5	Checking charge air system for leaks	214
<b>26</b>	<b>- Exhaust system</b>	<b>217</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>217</b>
1.1	Exploded view - silencers	217
1.2	Removing and installing front exhaust pipe	218
1.3	Stress-free alignment of exhaust system	221
1.4	Checking exhaust system for leaks	222