

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	4
2.5 Safety precautions when working on the exhaust system	4
<b>3 Repair instructions</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 General repair instructions	7
3.3 Bolts/nuts	8
3.4 Identification plates	8
3.5 Use of impact wrenches	8
3.6 Foreign material in engine	9
3.7 Contact corrosion	9
3.8 Routing and attachment of pipes, hoses and wiring	10
3.9 Installing radiators and condensers	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Separating engine and gearbox	40
1.3 Securing engine to engine and gearbox support	42
1.4 Installing engine	44
<b>2 Assembly mountings</b>	<b>49</b>
2.1 Assembly overview - assembly mountings	49
2.2 Adjusting assembly mountings	51
2.3 Checking adjustment of assembly mountings	55
<b>3 Engine cover panel</b>	<b>57</b>
3.1 Removing and installing engine cover panel	57
<b>13 - Crankshaft group</b>	<b>58</b>
<b>1 Cylinder block (pulley end)</b>	<b>58</b>
1.1 Assembly overview - cylinder block (pulley end)	58
1.2 Assembly overview - sealing flange (pulley end)	65
1.3 Removing and installing poly V-belt	66
1.4 Removing and installing poly V-belt tensioner	72
1.5 Removing and installing vibration damper	74
1.6 Removing and installing bracket for ancillaries	75
1.7 Renewing crankshaft oil seal (pulley end)	79
1.8 Removing and installing sealing flange (pulley end)	81
<b>2 Cylinder block (gearbox end)</b>	<b>85</b>
2.1 Assembly overview - cylinder block (gearbox end)	85
2.2 Removing and installing flywheel	86
2.3 Removing and installing sealing flange (gearbox end)	88
<b>3 Crankshaft</b>	<b>99</b>
3.1 Assembly overview - crankshaft	99
3.2 Crankshaft dimensions	100
3.3 Renewing needle bearing in crankshaft	101
3.4 Measuring axial clearance of crankshaft	103



3.5	Measuring radial clearance of crankshaft	104
3.6	Removing and installing spur gear	104
<b>4</b>	<b>Pistons and conrods</b>	<b>109</b>
4.1	Assembly overview - pistons and conrods	109
4.2	Measuring piston projection at TDC	112
4.3	Checking pistons and cylinder bores	115
4.4	Separating parts of new conrod	117
4.5	Checking radial clearance of conrod bearings	118
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>119</b>
<b>1</b>	<b>Toothed belt drive</b>	<b>119</b>
1.1	Assembly overview - toothed belt	119
1.2	Removing and installing toothed belt	121
<b>2</b>	<b>Cylinder head</b>	<b>137</b>
2.1	Assembly overview - cylinder head	137
2.2	Assembly overview - cylinder head cover	140
2.3	Removing and installing cylinder head cover	142
2.4	Removing and installing cylinder head	145
2.5	Checking compression	161
<b>3</b>	<b>Valve gear</b>	<b>164</b>
3.1	Assembly overview - valve gear	164
3.2	Measuring axial clearance of camshaft	166
3.3	Measuring radial clearance of camshaft	167
3.4	Removing and installing camshaft oil seal	168
3.5	Removing and installing camshaft	172
3.6	Removing and installing valve stem oil seals	180
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>190</b>
4.1	Reworking valve seats	190
4.2	Checking valve guides	190
4.3	Checking valves	191
4.4	Valve dimensions	191
<b>17</b>	<b>Lubrication</b>	<b>193</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>193</b>
1.1	Assembly overview - sump/oil pump	193
1.2	Engine oil	198
1.3	Removing and installing sump	198
1.4	Removing and installing oil pump	205
1.5	Removing and installing oil level and oil temperature sender G266	207
<b>2</b>	<b>Oil filter/oil pressure switch</b>	<b>209</b>
2.1	Exploded view - oil filter housing/oil pressure switch	209
2.2	Removing and installing oil filter housing	212
2.3	Removing and installing oil pressure switch F1	217
2.4	Checking oil pressure switch	218
2.5	Checking oil pressure	219
2.6	Checking oil level	220
<b>3</b>	<b>Balance shaft module</b>	<b>221</b>
3.1	Removing and installing balance shaft module	221
<b>19</b>	<b>Cooling</b>	<b>230</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>230</b>
1.1	Connection diagram - coolant hoses	230
1.2	Checking cooling system for leaks	232
1.3	Draining and filling cooling system	234
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>245</b>

2.1	Assembly overview - coolant pump/thermostat	245
2.2	Removing and installing electric coolant pump	245
2.3	Removing and installing coolant pump	248
2.4	Removing and installing thermostat	249
2.5	Checking thermostat	251
2.6	Removing and installing 4/2-way valve with thermostat	252
2.7	Removing and installing coolant temperature sender G62	253
2.8	Removing and installing radiator outlet coolant temperature sender G83	255
<b>3</b>	<b>Coolant pipes</b>	<b>257</b>
3.1	Assembly overview - coolant pipes	257
3.2	Removing and installing coolant pipe (front)	259
3.3	Removing and installing coolant pipe (left-side)	264
3.4	Removing and installing coolant pipe (right-side)	267
<b>4</b>	<b>Radiator/radiator fans</b>	<b>270</b>
4.1	Exploded view - radiator/radiator fans	270
4.2	Removing and installing radiator cowl with radiator fans	271
4.3	Removing and installing radiator fans	274
4.4	Removing and installing radiator	274
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>277</b>
<b>1</b>	<b>Turbocharger</b>	<b>277</b>
1.1	Exploded view - turbocharger	277
1.2	Removing and installing turbocharger	279
1.3	Renewing vacuum unit for turbocharger	283
<b>2</b>	<b>Charge air system</b>	<b>292</b>
2.1	Assembly overview - charge air system	292
2.2	Removing and installing charge air cooler	295
2.3	Removing and installing charge pressure sender G31 / intake air temperature sender G42	297
2.4	Checking charge air system for leaks	298
<b>23</b>	<b>Mixture preparation - injection</b>	<b>302</b>
<b>1</b>	<b>Injection system</b>	<b>302</b>
1.1	Overview of fitting locations - injection system	302
1.2	Filling and bleeding fuel system	312
1.3	Checking fuel system for leaks	313
1.4	Checking fuel pressure (low pressure) system	314
1.5	Checking delivery rate of fuel pumps	316
<b>2</b>	<b>Vacuum system</b>	<b>319</b>
2.1	Connection diagram - vacuum system	319
2.2	Checking vacuum system	319
<b>3</b>	<b>Air filter</b>	<b>321</b>
3.1	Assembly overview - air filter housing	321
3.2	Removing and installing air filter element	323
3.3	Removing and installing lower part of air filter	324
<b>4</b>	<b>Intake manifold</b>	<b>327</b>
4.1	Exploded view - intake manifold	327
4.2	Removing and installing intake manifold	327
4.3	Removing and installing intake manifold flap motor V157	333
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b>	<b>338</b>
5.1	Assembly overview - injectors	338
5.2	Checking injectors	341
5.3	Performing adaptation of correction values for injectors	341
5.4	Checking for injectors sticking open	342
5.5	Checking return flow rate of injectors with engine running	345
5.6	Checking return flow rate of injectors at starter cranking speed	348



5.7	Checking pressure retention valve in fuel return line	349
5.8	Removing and installing injectors	351
5.9	Removing and installing high-pressure pipes	358
5.10	Removing and installing high-pressure reservoir (rail)	360
<b>6</b>	<b>High-pressure pump</b>	<b>364</b>
6.1	Removing and installing high-pressure pump	364
<b>7</b>	<b>Senders and sensors</b>	<b>368</b>
7.1	Checking fuel pressure regulating valve N276	368
7.2	Removing and installing fuel pressure regulating valve N276	369
7.3	Removing and installing fuel pressure sender G247	371
7.4	Removing and installing air mass meter G70	374
7.5	Removing and installing exhaust gas pressure sensor 1 G450	375
<b>8</b>	<b>Lambda probe</b>	<b>377</b>
8.1	Assembly overview - Lambda probe	377
8.2	Removing and installing Lambda probe	377
<b>9</b>	<b>Engine control unit</b>	<b>380</b>
9.1	Removing and installing engine control unit J623	380
9.2	Wiring and component check with test box V.A.G 1598/42	384
<b>26 - Exhaust system</b>		<b>387</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>387</b>
1.1	Exploded view - silencers	387
1.2	Renewing flexible joint	389
1.3	Stress-free alignment of exhaust system	391
1.4	Checking exhaust system for leaks	392
1.5	Installation position of clamp	392
<b>2</b>	<b>Emission control system</b>	<b>394</b>
2.1	Removing and installing particulate filter	394
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>398</b>
3.1	Assembly overview - exhaust gas temperature regulation	398
3.2	Removing and installing exhaust gas temperature sender	399
<b>4</b>	<b>Exhaust gas recirculation</b>	<b>405</b>
4.1	Assembly overview - exhaust gas recirculation system	405
4.2	Removing and installing exhaust gas recirculation valve N18	407
4.3	Removing and installing exhaust gas recirculation cooler	410
4.4	Checking exhaust gas recirculation cooler change-over	414
4.5	Checking exhaust gas recirculation cooler for leaks	415
4.6	Cleaning exhaust gas recirculation system	420
<b>28 - Glow plug system</b>		<b>429</b>
<b>1</b>	<b>Glow plug system</b>	<b>429</b>
1.1	Removing and installing glow plug	429
1.2	Removing and installing Hall sender G40	430
1.3	Removing and installing engine speed sender G28	432
1.4	Checking glow plug system	433