

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General repair instructions	5
3.3 Bolts/nuts	6
3.4 Identification plates	7
3.5 Use of impact wrenches	7
3.6 Foreign material in engine	8
3.7 Contact corrosion	8
3.8 Routing and attachment of pipes, hoses and wiring	8
3.9 Installing radiators and condensers	8
10 - Removing and installing engine	10
1 Removing and installing engine	10
1.1 Removing engine	10
1.2 Separating engine and gearbox	40
1.3 Securing engine to engine and gearbox support	46
1.4 Installing engine	48
2 Assembly mountings	54
2.1 Assembly overview - assembly mountings	54
2.2 Removing and installing engine mountings	57
2.3 Removing and installing engine support	59
2.4 Checking adjustment of assembly mountings	61
2.5 Adjusting assembly mountings	63
3 Engine cover panel	68
3.1 Removing and installing engine cover panel	68
13 - Crankshaft group	69
1 Cylinder block (pulley end)	69
1.1 Assembly overview - poly V-belt drive	69
1.2 Assembly overview - sealing flange (pulley end)	76
1.3 Removing and installing poly V-belt	77
1.4 Removing and installing poly V-belt tensioner	83
1.5 Removing and installing vibration damper	85
1.6 Removing and installing bracket for ancillaries	86
1.7 Renewing crankshaft oil seal (pulley end)	91
1.8 Removing and installing sealing flange (pulley end)	93
2 Cylinder block (gearbox end)	98
2.1 Assembly overview - cylinder block (gearbox end)	98
2.2 Removing and installing flywheel	99
2.3 Removing and installing sealing flange (gearbox end)	101
3 Crankshaft	112
3.1 Assembly overview - crankshaft	112
3.2 Crankshaft dimensions	113

3.3	Renewing needle bearing in crankshaft	113
3.4	Measuring axial clearance of crankshaft	116
3.5	Measuring radial clearance of crankshaft	117
3.6	Removing and installing spur gear	117
4	Pistons and conrods	122
4.1	Assembly overview - pistons and conrods	122
4.2	Removing and installing pistons	125
4.3	Measuring piston projection at TDC	126
4.4	Checking pistons and cylinder bores	129
4.5	Separating parts of new conrod	131
4.6	Checking radial clearance of conrod bearings	132
15	Cylinder head, valve gear	133
1	Toothed belt drive	133
1.1	Assembly overview - toothed belt	133
1.2	Removing and installing toothed belt	135
2	Cylinder head	150
2.1	Assembly overview - cylinder head	150
2.2	Assembly overview - cylinder head cover	154
2.3	Removing and installing cylinder head cover	156
2.4	Removing and installing seals for injectors	160
2.5	Removing and installing cylinder head	160
2.6	Checking compression	177
3	Valve gear	180
3.1	Assembly overview - valve gear	180
3.2	Measuring axial clearance of camshaft	182
3.3	Measuring radial clearance of camshaft	183
3.4	Removing and installing camshaft oil seal	184
3.5	Removing and installing camshaft	188
3.6	Removing and installing valve stem oil seals	196
4	Inlet and exhaust valves	206
4.1	Reworking valve seats	206
4.2	Checking valve guides	206
4.3	Checking valves	207
4.4	Valve dimensions	207
17	Lubrication	209
1	Sump/oil pump	209
1.1	Assembly overview - sump/oil pump	209
1.2	Engine oil	213
1.3	Removing and installing sump	213
1.4	Removing and installing oil pump	220
1.5	Removing and installing oil level and oil temperature sender G266	222
2	Oil filter/oil pressure switches	224
2.1	Exploded view - oil filter housing/oil pressure switch	224
2.2	Removing and installing oil filter housing	225
2.3	Removing and installing oil pressure switch F1	229
2.4	Checking oil pressure and oil pressure switch	230
2.5	Checking oil level	233
3	Balance shaft module	234
3.1	Removing and installing balance shaft module	234
19	Cooling	242
1	Cooling system/coolant	242
1.1	Connection diagram - coolant hoses	242

1.2	Checking cooling system for leaks	242
1.3	Draining and filling cooling system	245
2	Coolant pump/thermostat assembly	255
2.1	Assembly overview - coolant pump/thermostat	255
2.2	Removing and installing electric coolant pump	255
2.3	Removing and installing coolant pump	258
2.4	Checking thermostat	259
2.5	Removing and installing 4/2-way valve with thermostat	259
2.6	Removing and installing coolant temperature sender G62	265
2.7	Removing and installing radiator outlet coolant temperature sender G83	267
3	Coolant pipes	269
3.1	Assembly overview - coolant pipes	269
3.2	Removing and installing coolant pipe (front)	271
3.3	Removing and installing coolant pipe (top front)	275
3.4	Removing and installing coolant pipe (left-side)	277
3.5	Removing and installing coolant pipe (right-side)	280
4	Radiator/radiator fans	284
4.1	Exploded view - radiator/radiator fans	284
4.2	Removing and installing radiator cowl with radiator fans	285
4.3	Removing and installing radiator fans	288
4.4	Removing and installing radiator	289
21	Turbocharging/supercharging	291
1	Turbocharger	291
1.1	Exploded view - turbocharger	291
1.2	Removing and installing turbocharger	293
2	Charge air system	301
2.1	Assembly overview - charge air system	301
2.2	Removing and installing charge air cooler	302
2.3	Removing and installing charge pressure sender G31 / intake air temperature sender G42	304
2.4	Checking charge air system for leaks	305
23	Mixture preparation - injection	309
1	Injection system	309
1.1	Overview - fuel system	309
1.2	Overview of fitting locations - injection system	310
1.3	Filling and bleeding fuel system	319
1.4	Checking fuel system for leaks	320
1.5	Checking fuel pressure (low pressure) system	320
1.6	Checking delivery rate of fuel pumps	323
2	Vacuum system	326
2.1	Connection diagram - vacuum system	326
2.2	Checking vacuum system	326
3	Air filter	328
3.1	Assembly overview - air filter housing	328
3.2	Removing and installing air filter element	330
3.3	Removing and installing air filter housing	332
4	Intake manifold	334
4.1	Exploded view - intake manifold	334
4.2	Removing and installing intake manifold	336
4.3	Removing and installing throttle valve module J338	340
4.4	Cleaning throttle valve module J338	343
5	Injectors/high-pressure reservoir (rail)	346
5.1	Assembly overview - injectors	346



5.2	Checking injectors	350
5.3	Performing adaptation of correction values for injectors	350
5.4	Checking for injectors sticking open	351
5.5	Checking return flow rate of injectors with engine running	354
5.6	Checking return flow rate of injectors at starter cranking speed	358
5.7	Removing and installing injectors	360
5.8	Removing and installing high-pressure pipes	364
5.9	Removing and installing high-pressure reservoir (rail)	365
6	High-pressure pump	369
6.1	Assembly overview - high-pressure pump	369
6.2	Removing and installing high-pressure pump	371
7	Senders and sensors	376
7.1	Checking fuel pressure regulating valve N276	376
7.2	Removing and installing fuel pressure regulating valve N276	377
7.3	Removing and installing fuel pressure sender G247	379
7.4	Removing and installing air mass meter G70	382
8	Lambda probe	383
8.1	Assembly overview - Lambda probe	383
8.2	Removing and installing Lambda probe	383
9	Engine control unit	386
9.1	Removing and installing engine/motor control unit J623	386
9.2	Wiring and component check with test box V.A.G 1598/42	390
26 - Exhaust system		393
1	Exhaust pipes/silencers	393
1.1	Exploded view - silencer	393
1.2	Renewing flexible joint	395
1.3	Stress-free alignment of exhaust system	397
1.4	Checking exhaust system for leaks	398
1.5	Installation position of clamp	398
2	Emission control system	400
2.1	Removing and installing particulate filter	400
2.2	Removing and installing pressure differential sender G505	403
3	Exhaust gas temperature regulation	405
3.1	Assembly overview - exhaust gas temperature regulation	405
3.2	Removing and installing exhaust gas temperature sender	407
4	Exhaust gas recirculation	413
4.1	Assembly overview - exhaust gas recirculation system	413
4.2	Removing and installing exhaust gas recirculation cooler	415
4.3	Checking exhaust gas recirculation cooler change-over	419
4.4	Cleaning exhaust gas recirculation system	420
28 - Glow plug system		431
1	Glow plug system	431
1.1	Removing and installing glow plug	431
1.2	Removing and installing automatic glow period control unit J179	434
1.3	Removing and installing Hall sender G40	435
1.4	Removing and installing engine speed sender G28	436
1.5	Checking glow plug system	438